




Antinea

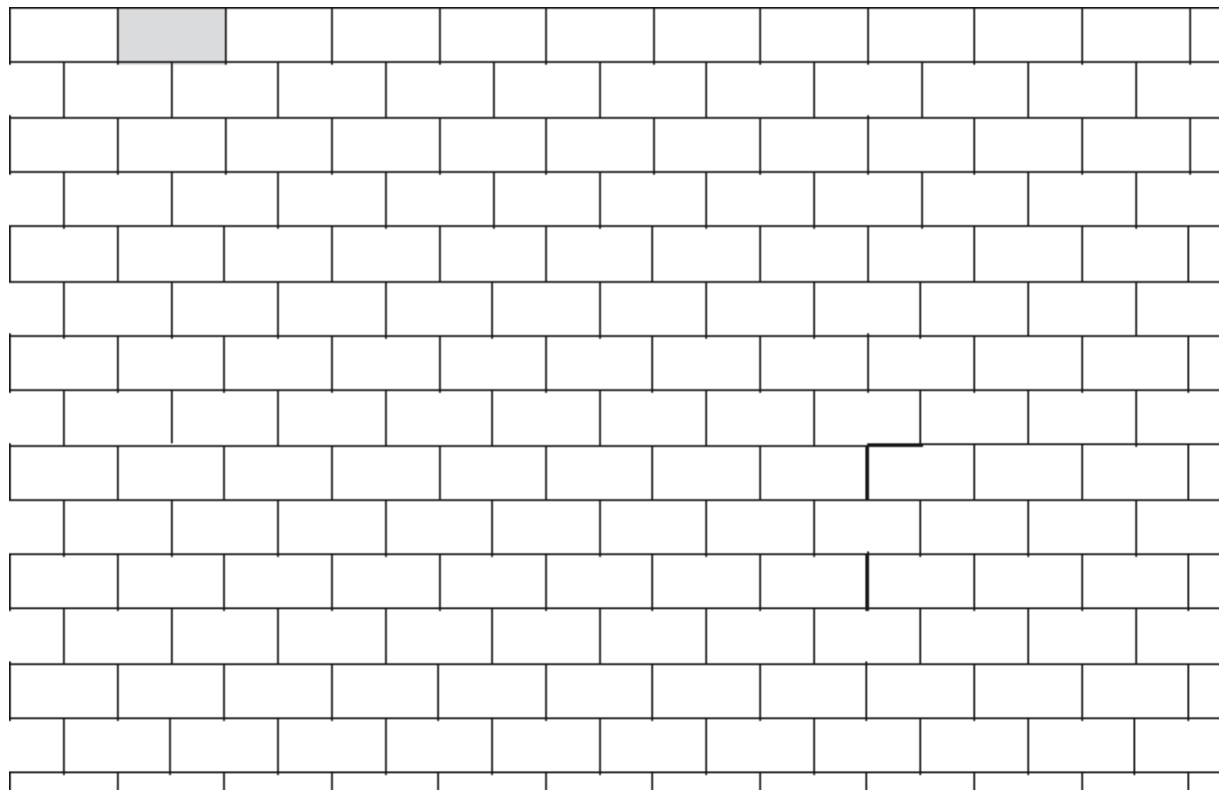


Typ 027

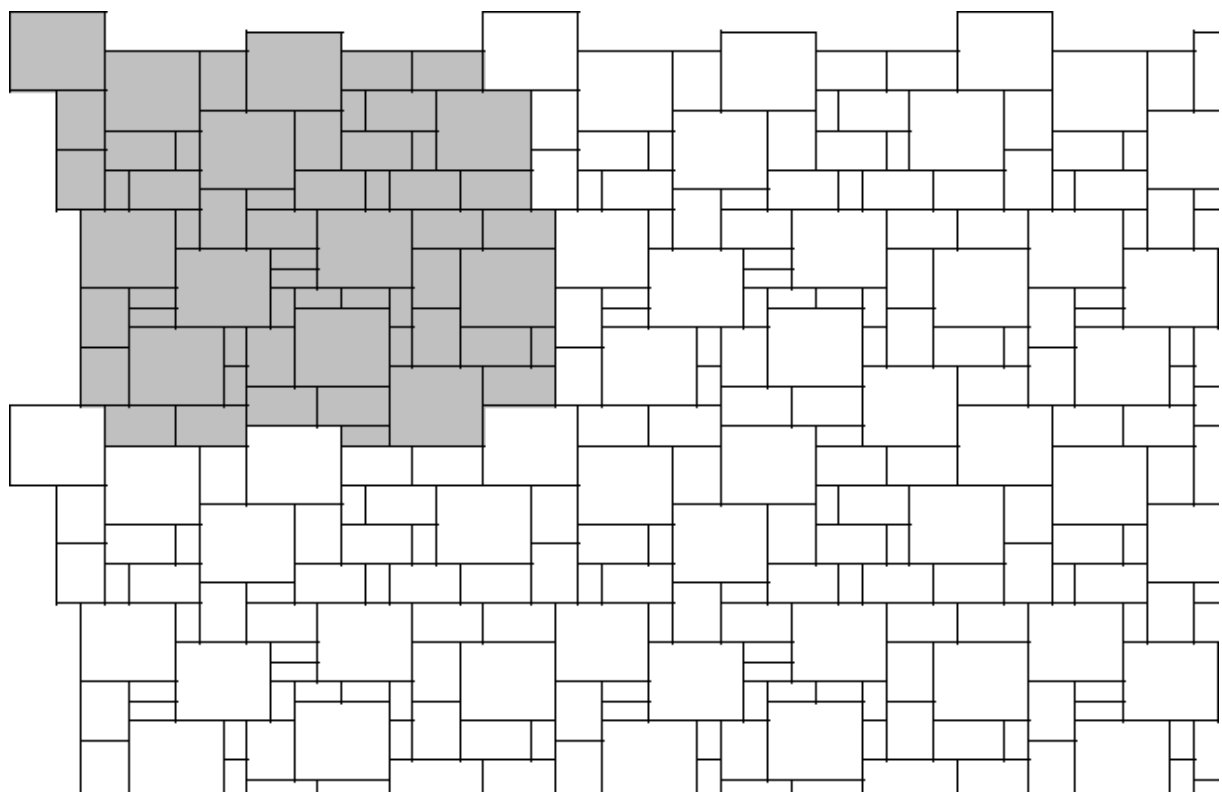


Typ 028

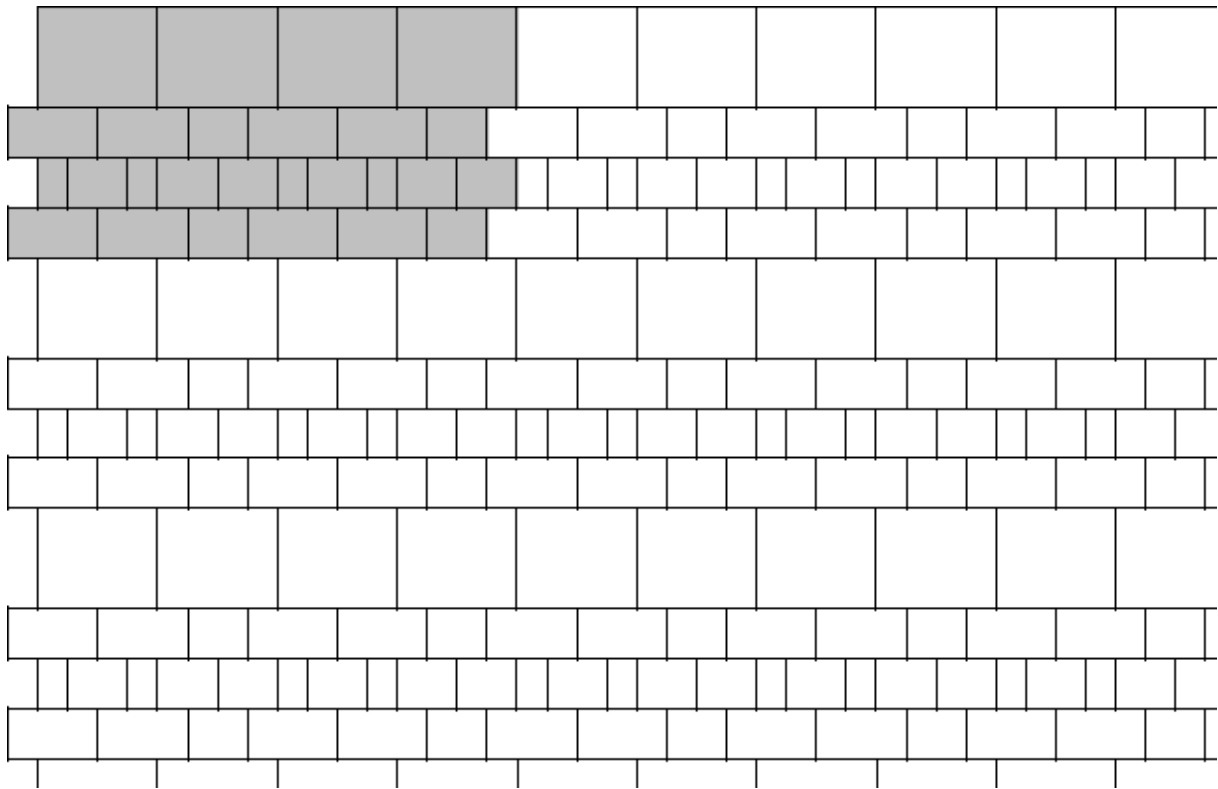


Typ 029

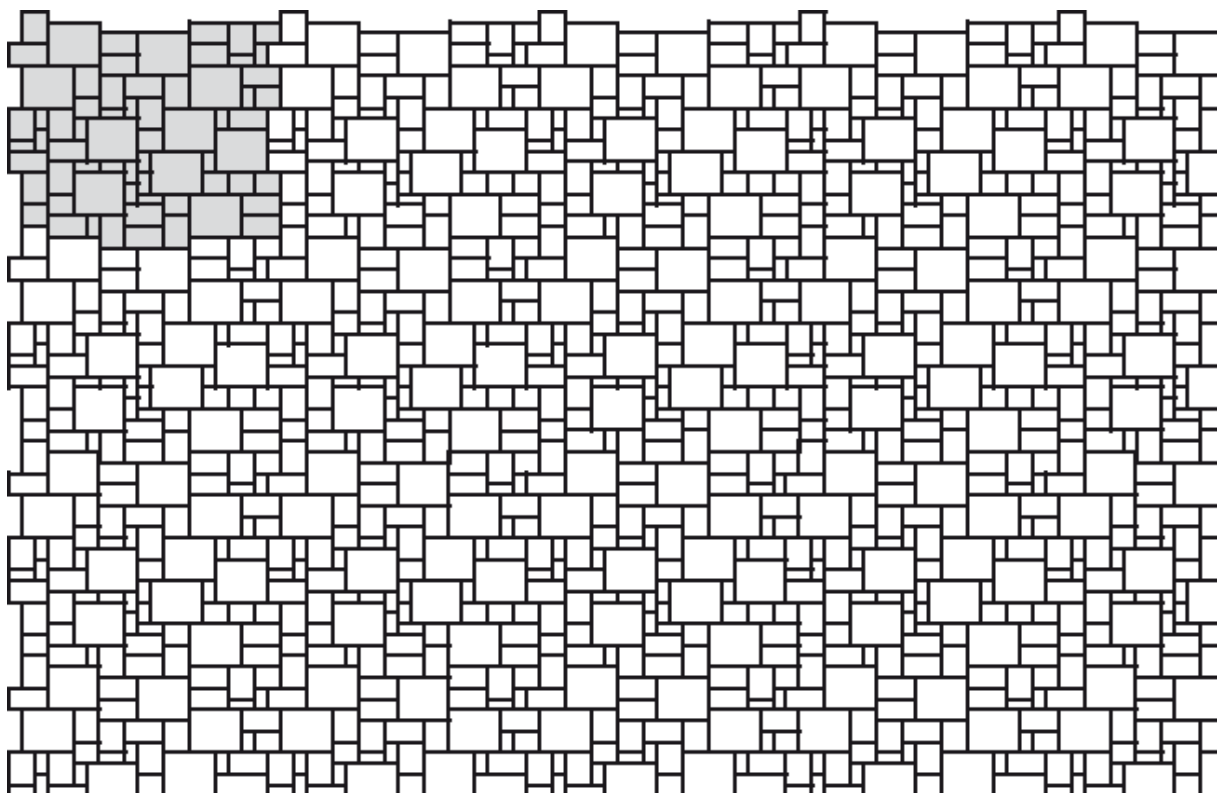


Typ 030

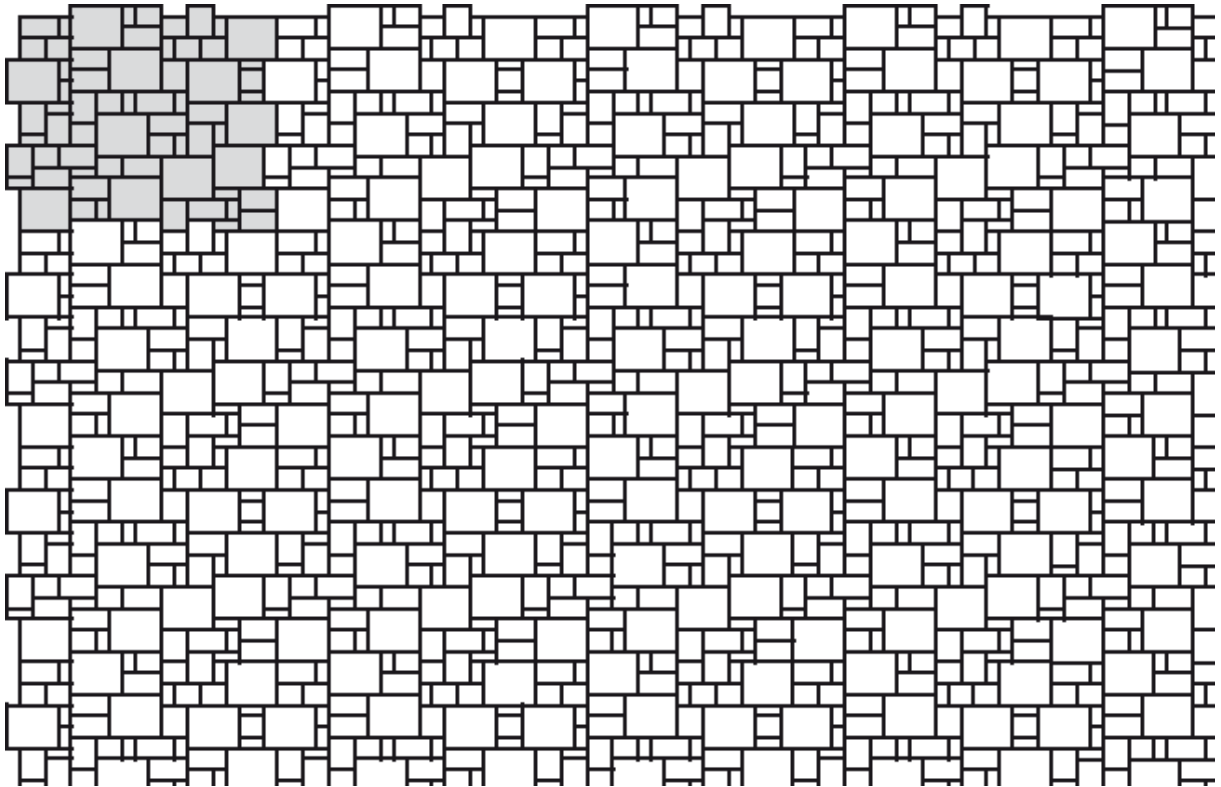


Typ 031

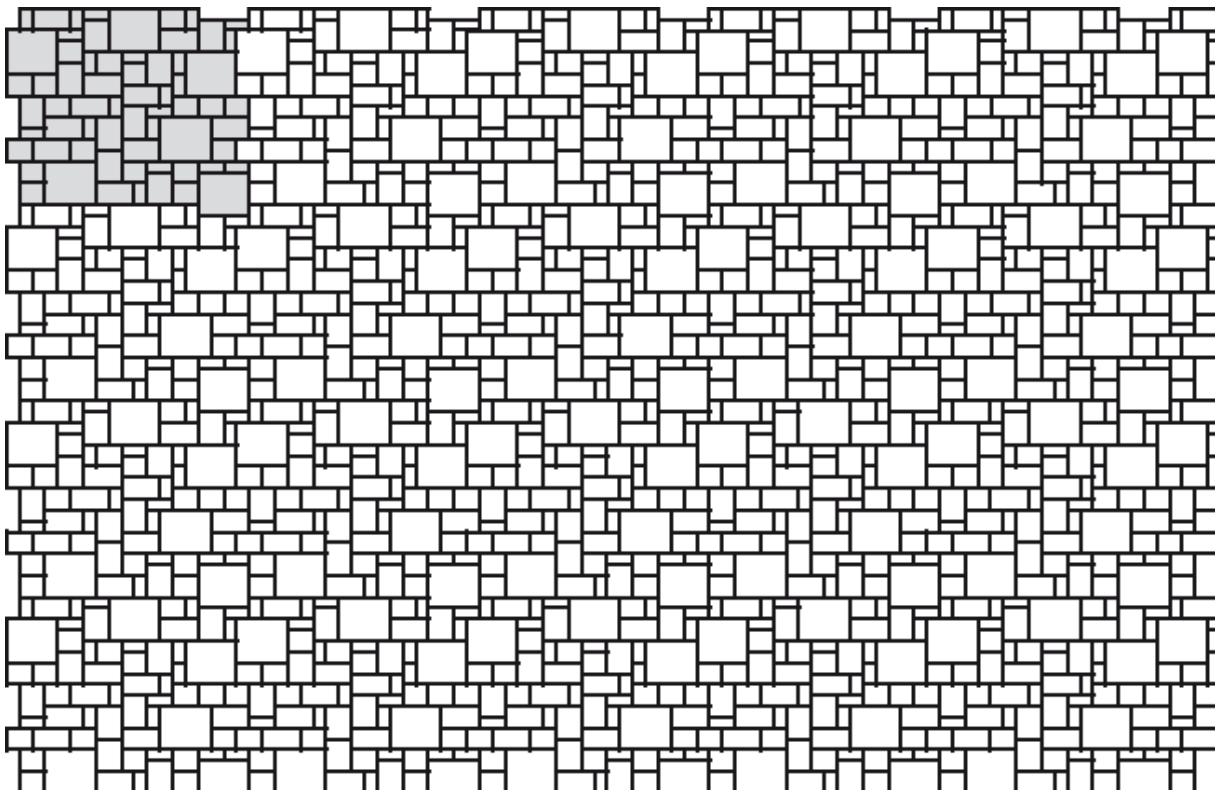


Typ 032

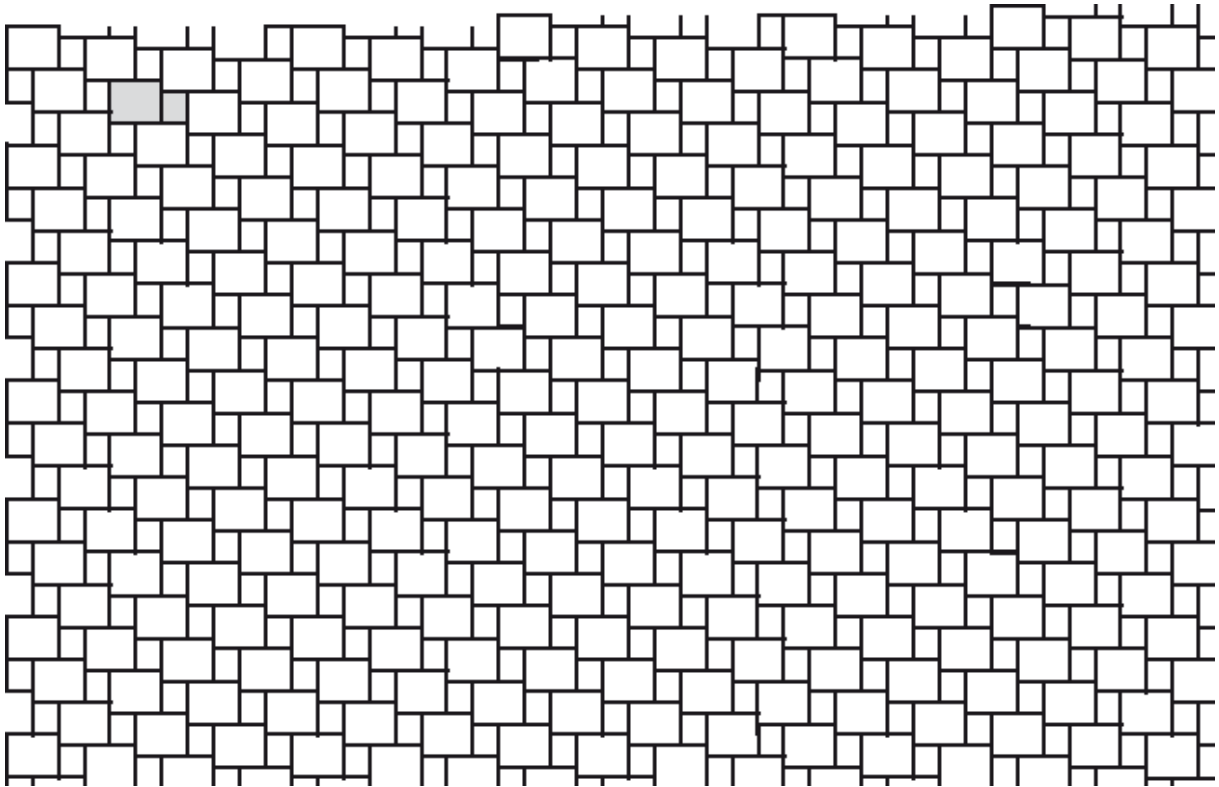


Typ 033

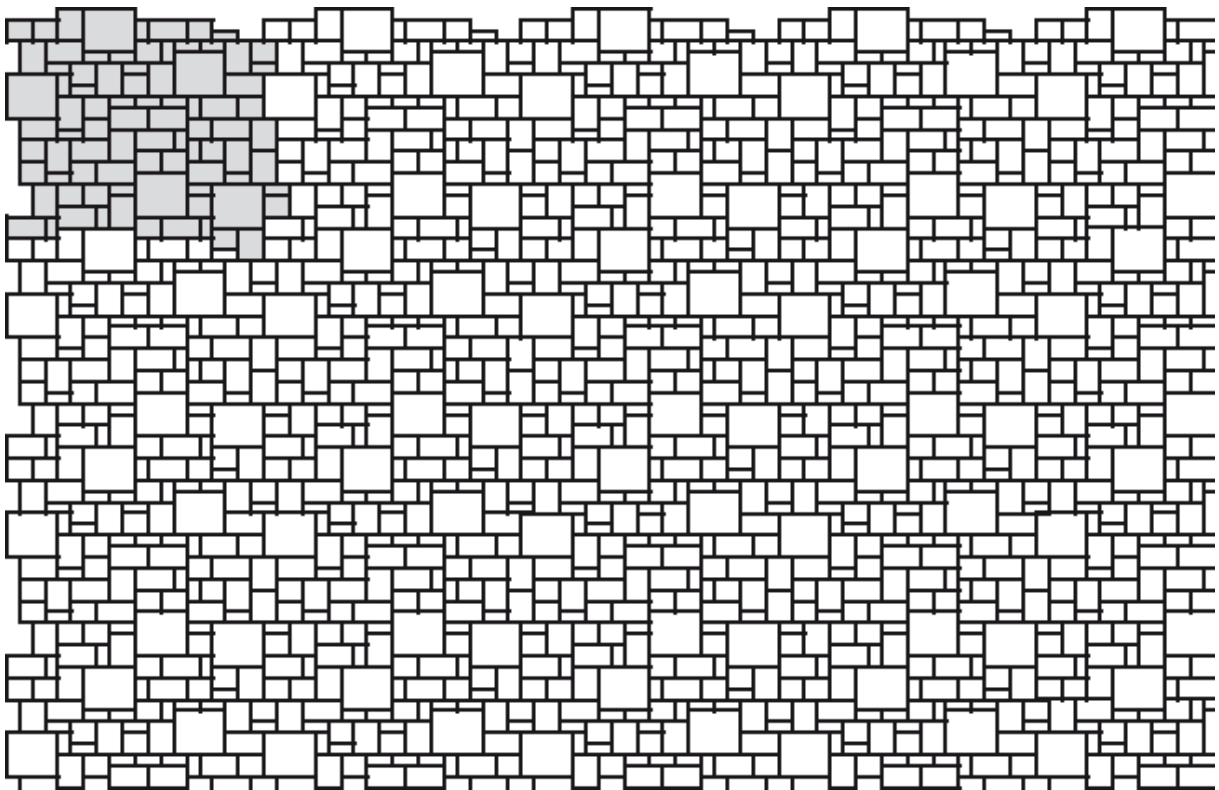


Typ 034

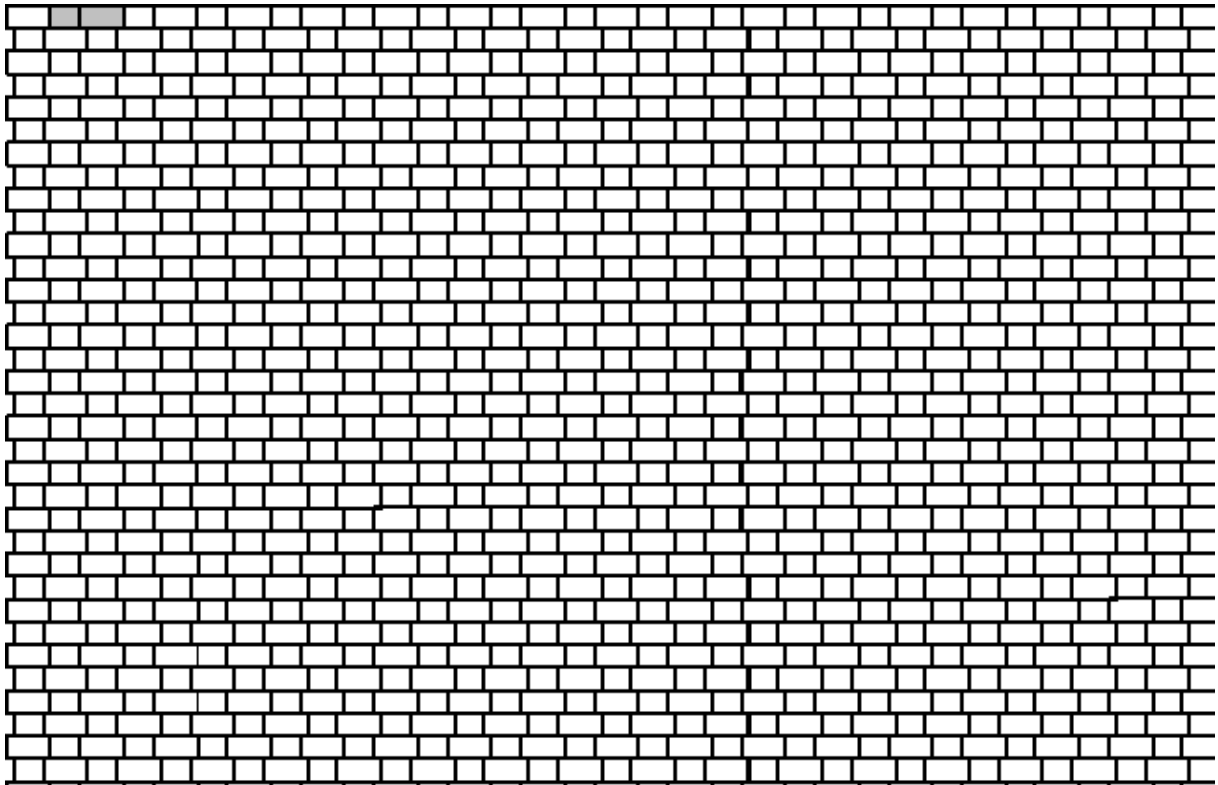


Typ 035

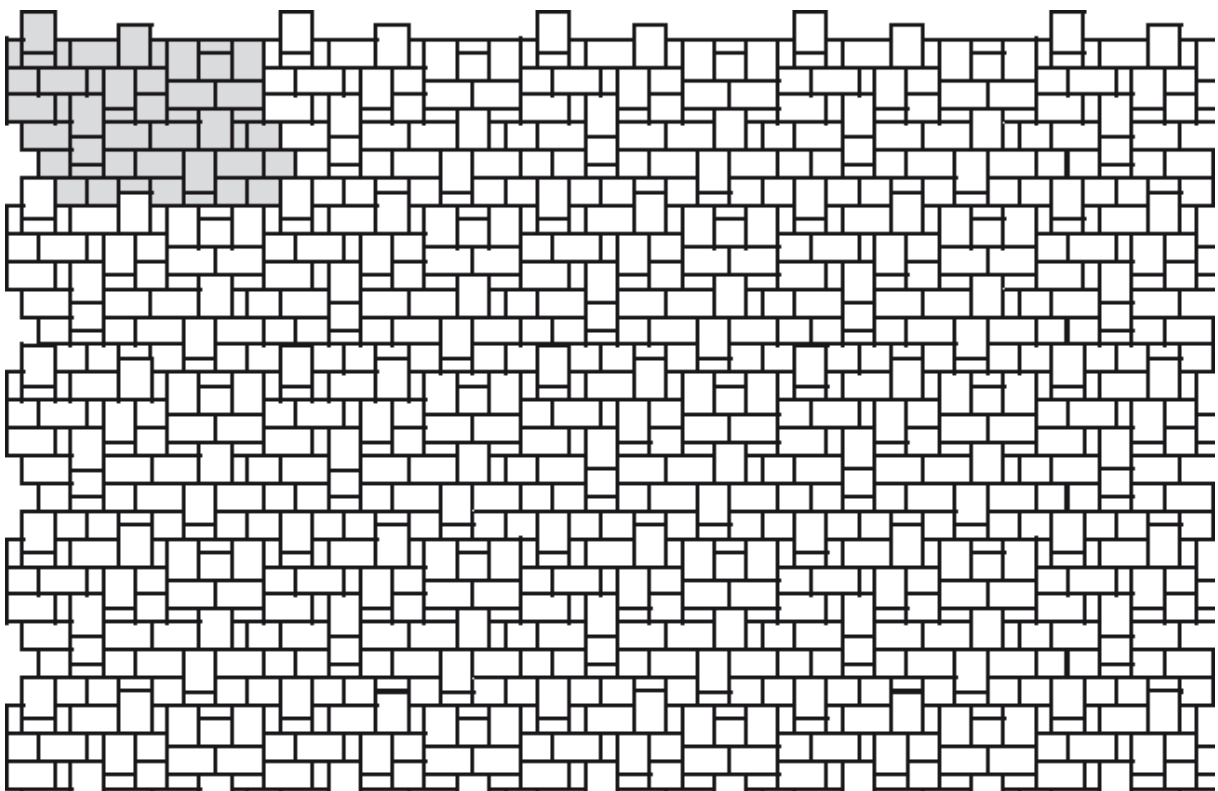


Typ 036

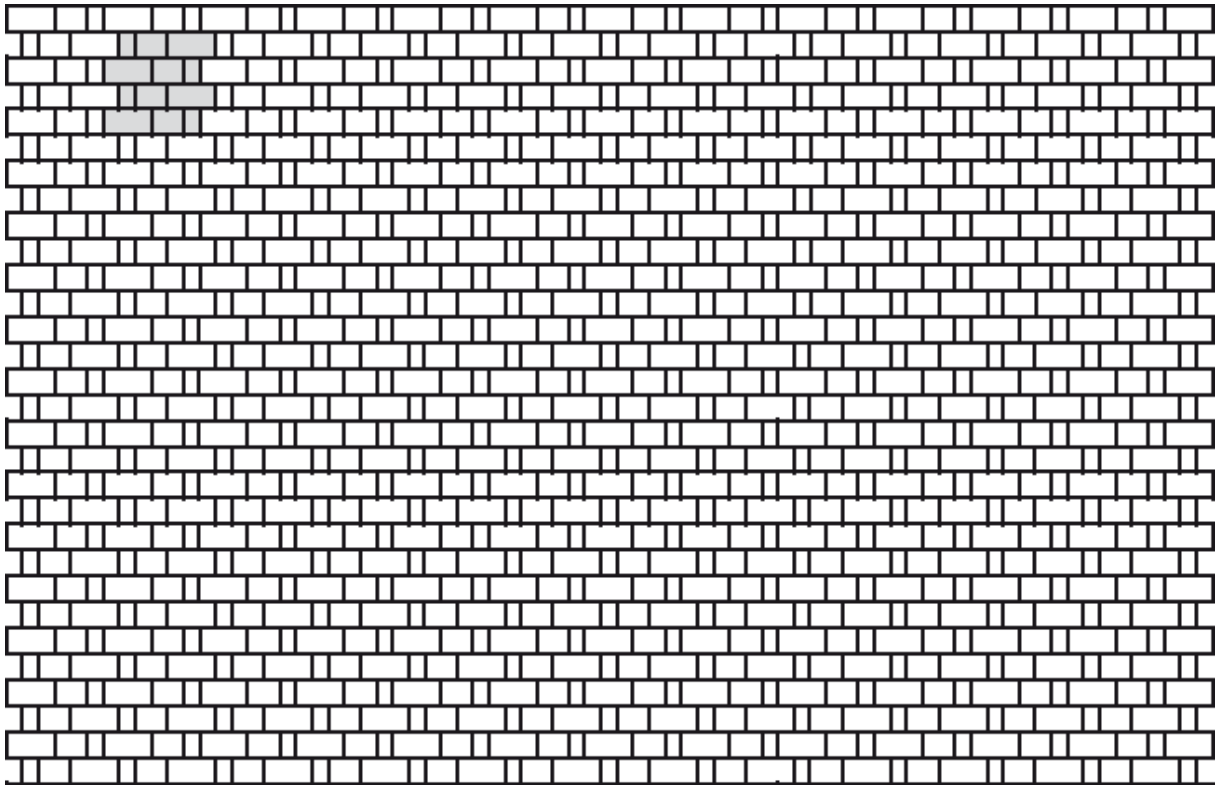


Typ 037

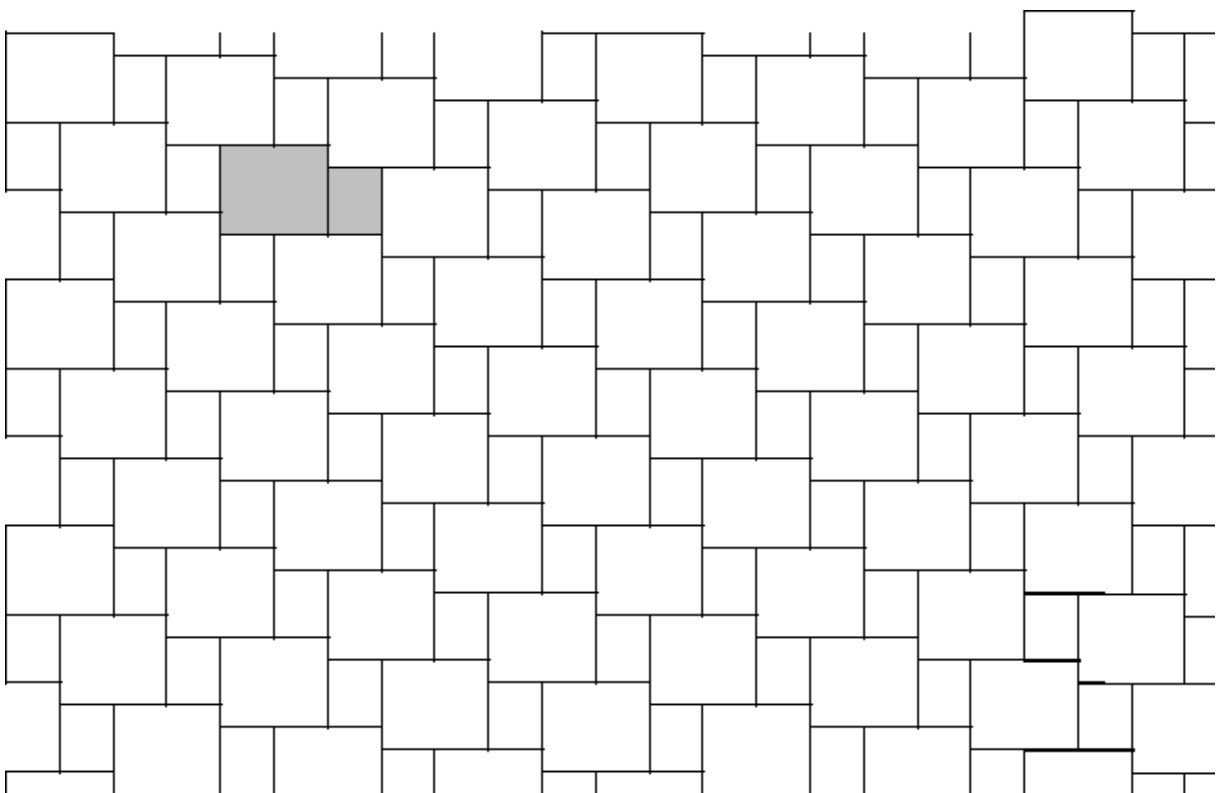


Typ 038

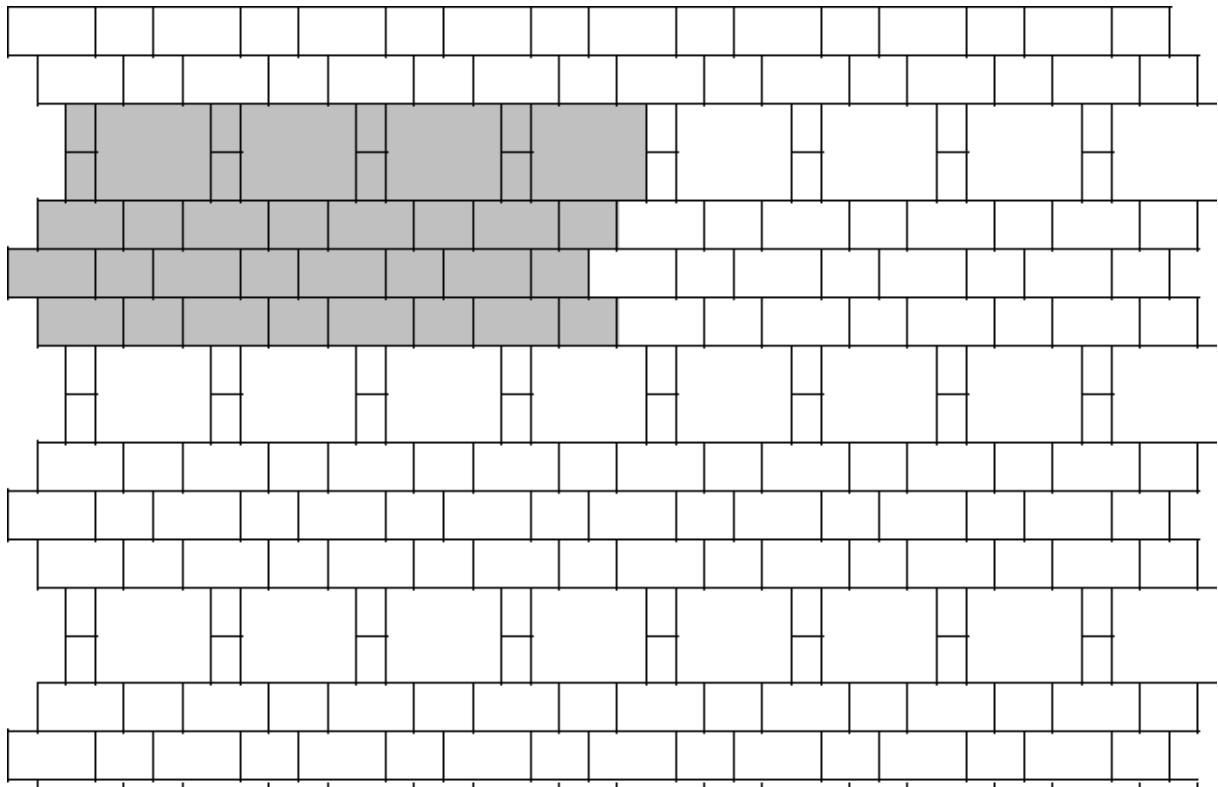


Typ 039

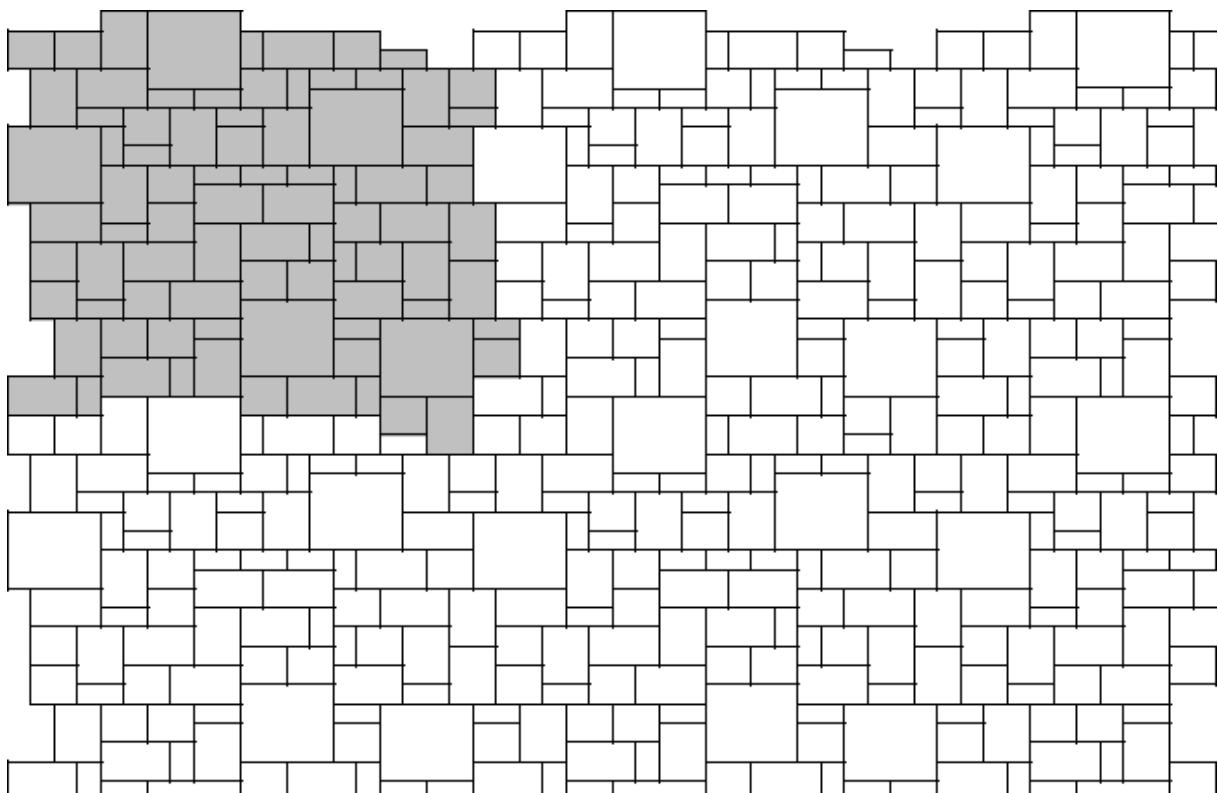


Typ 040

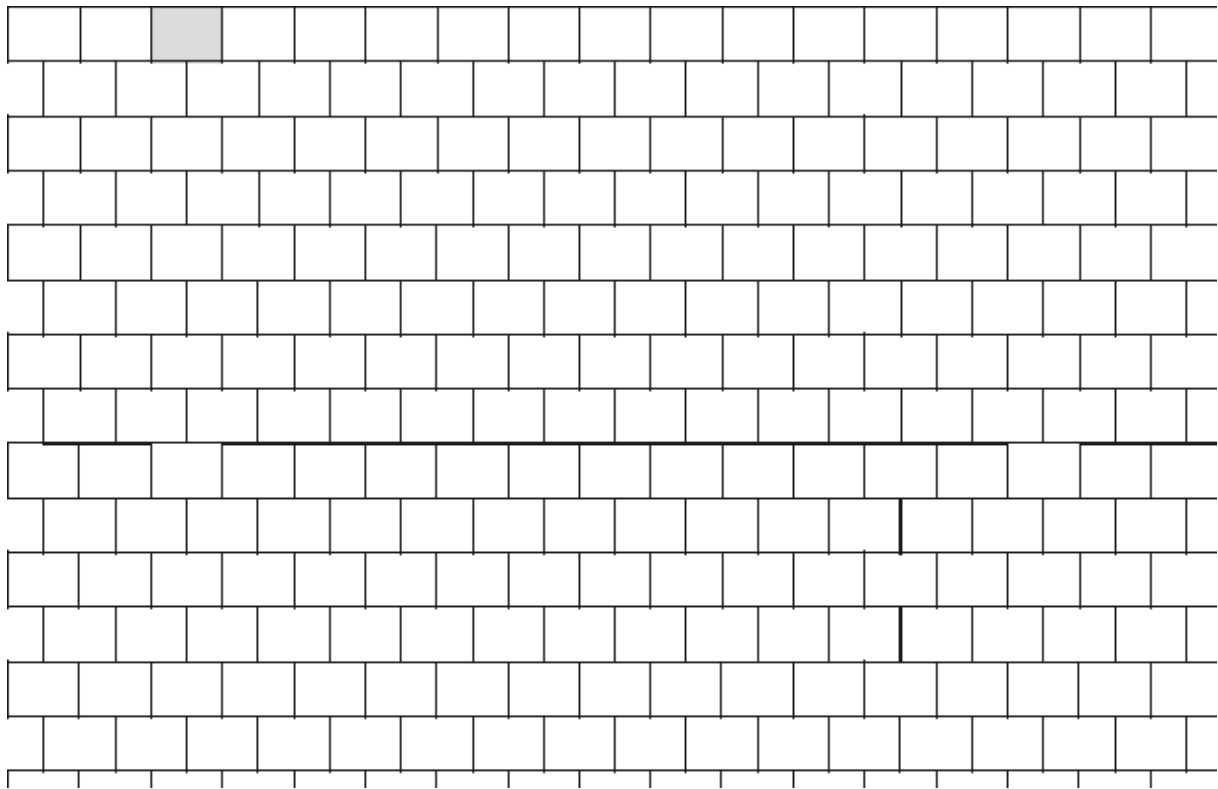


Typ 041

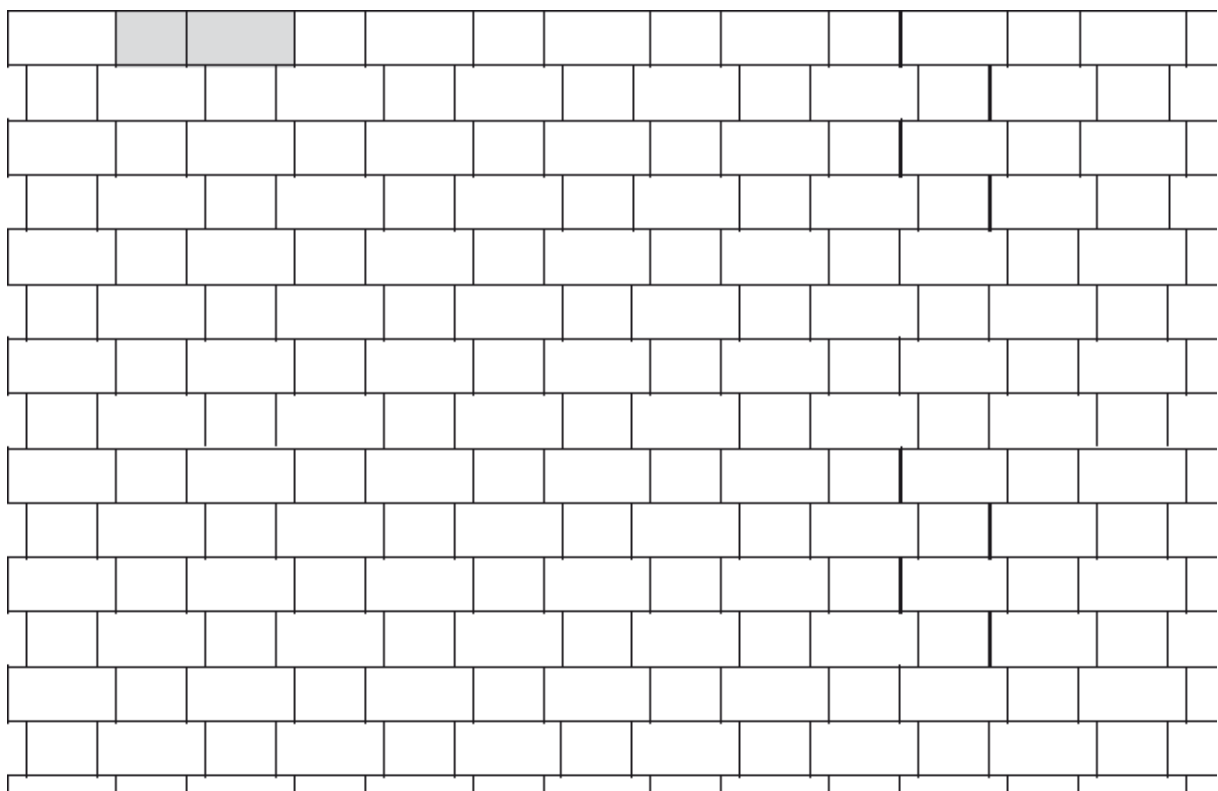


Typ 042

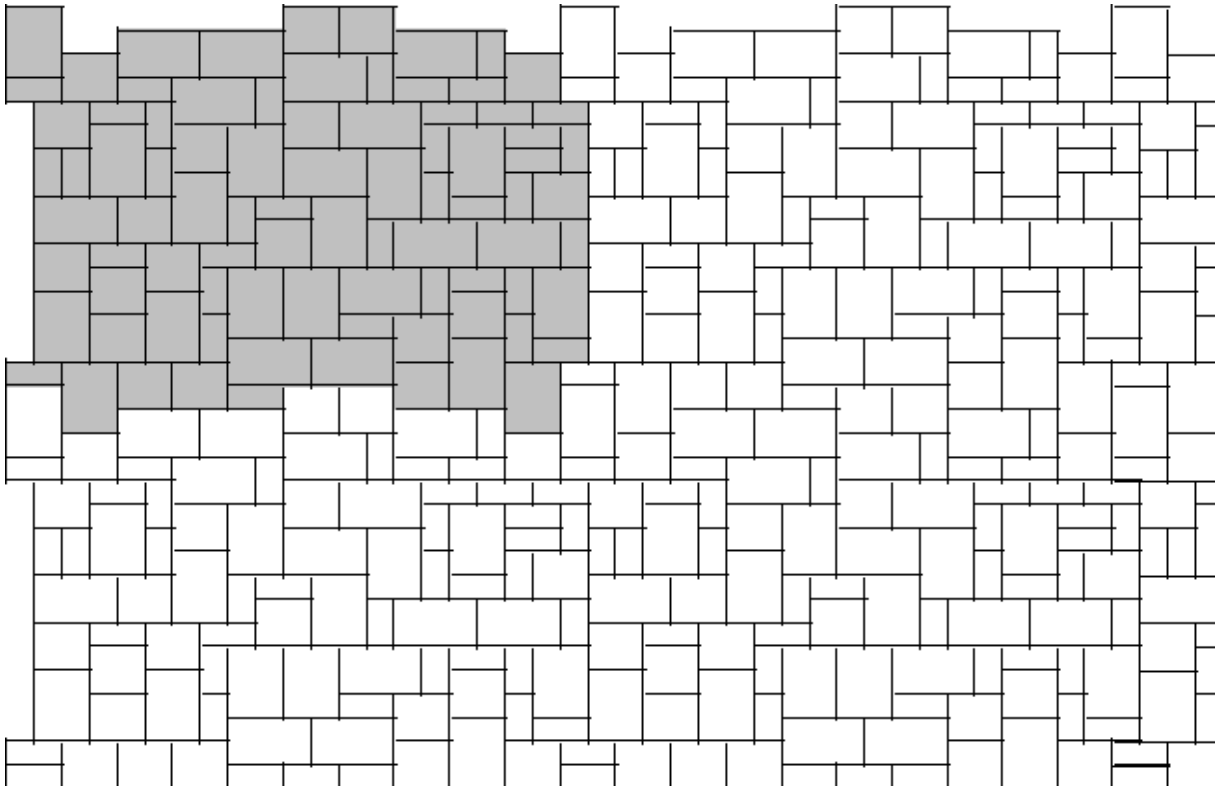


Typ 043

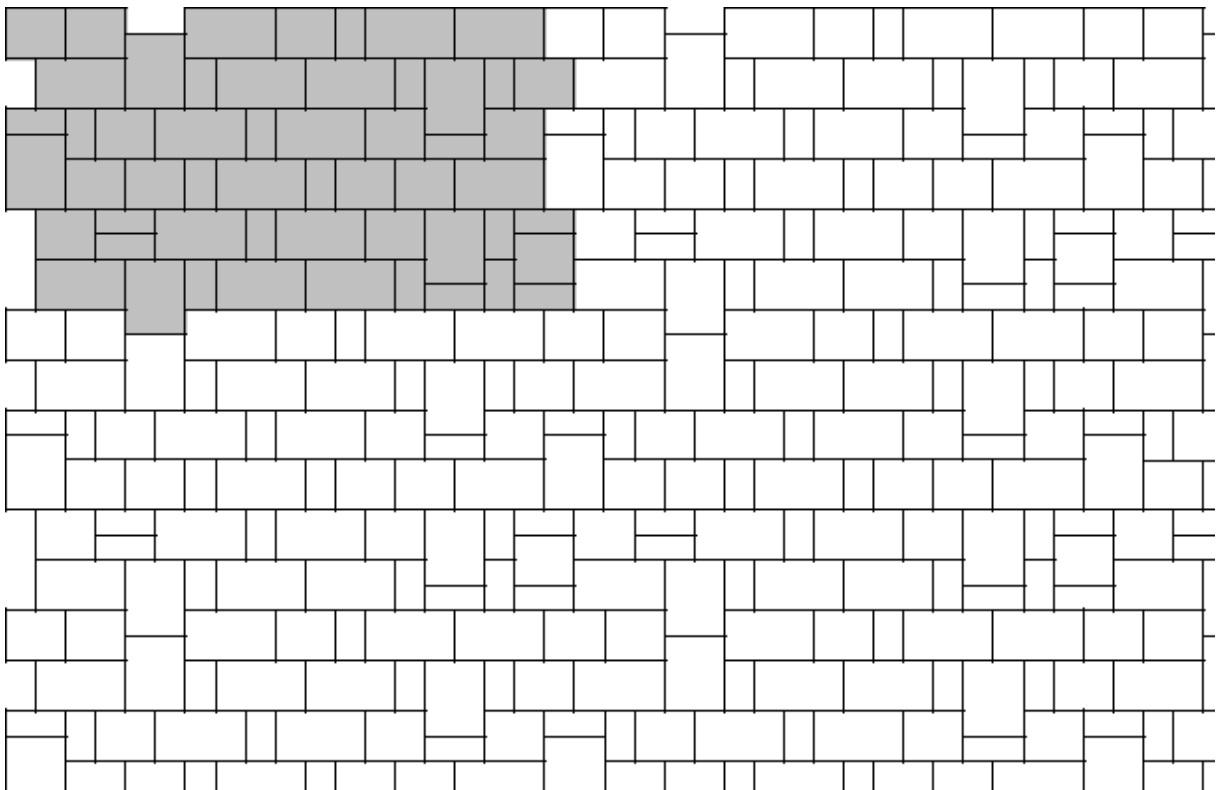


Typ 044

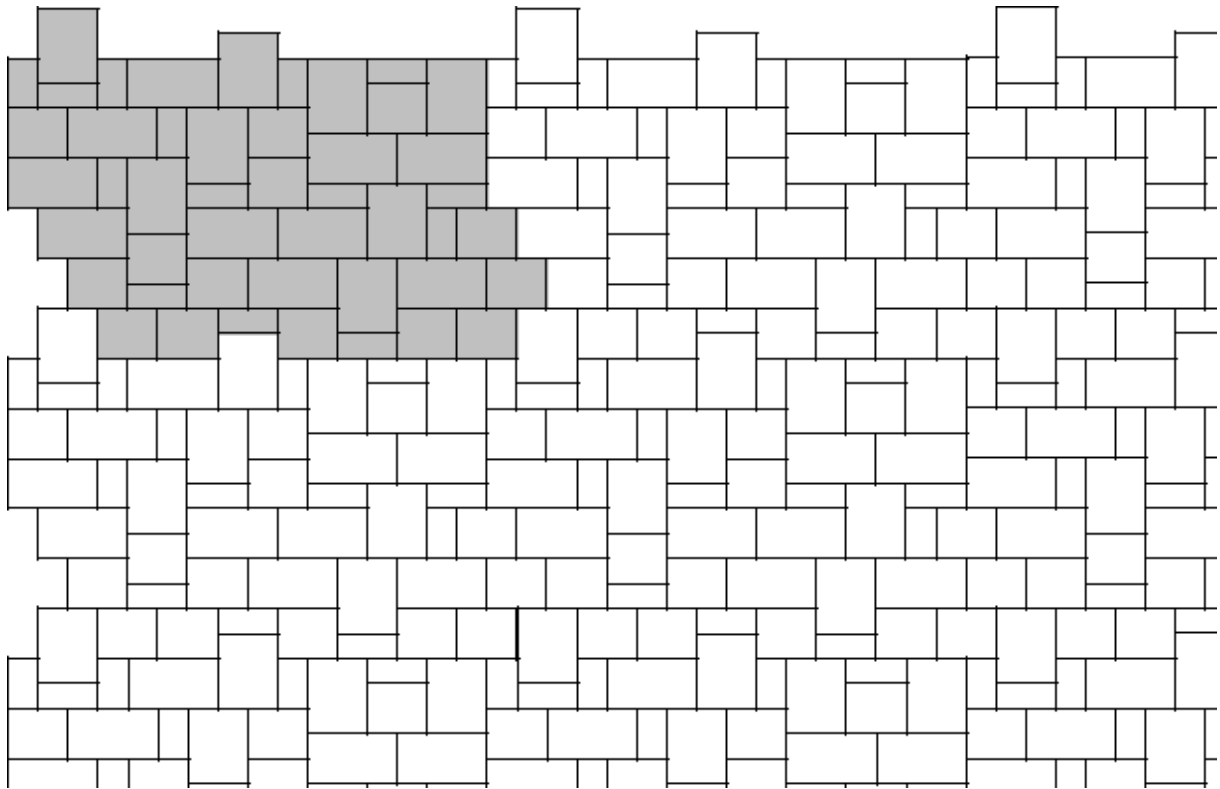


Typ 045

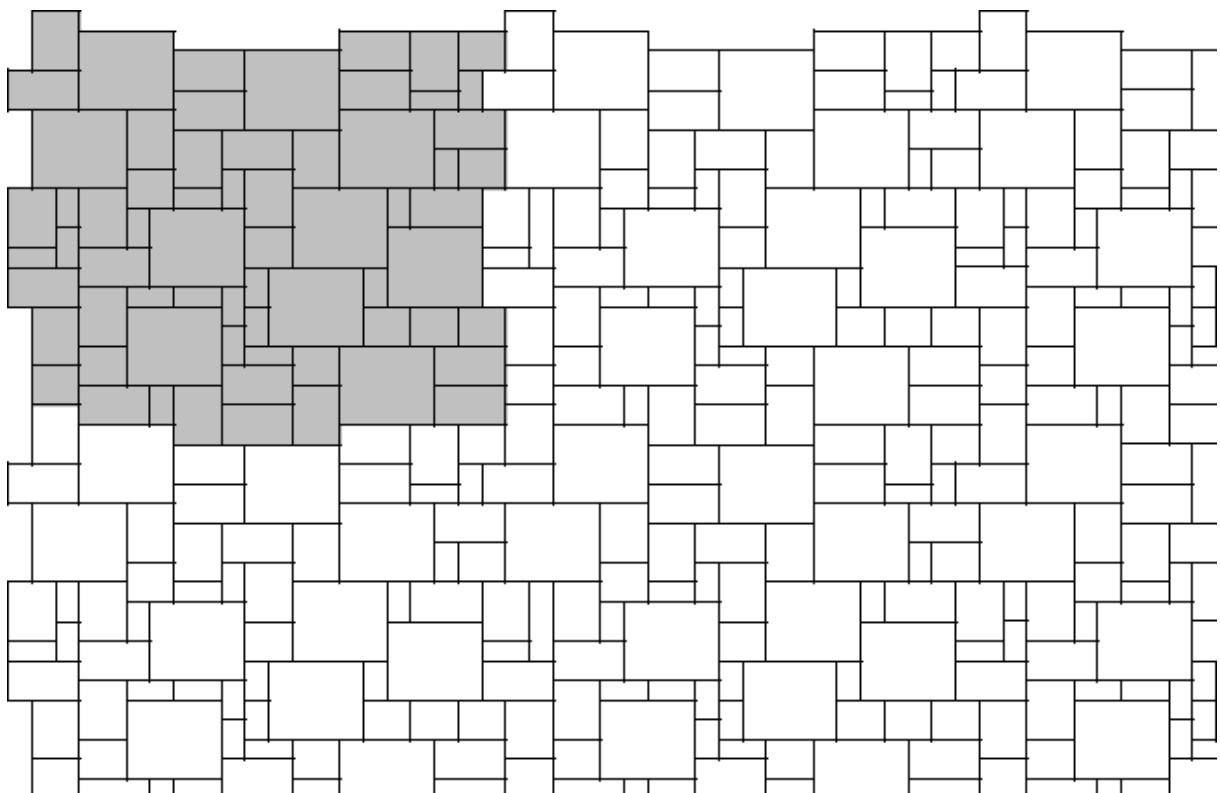


Typ 046

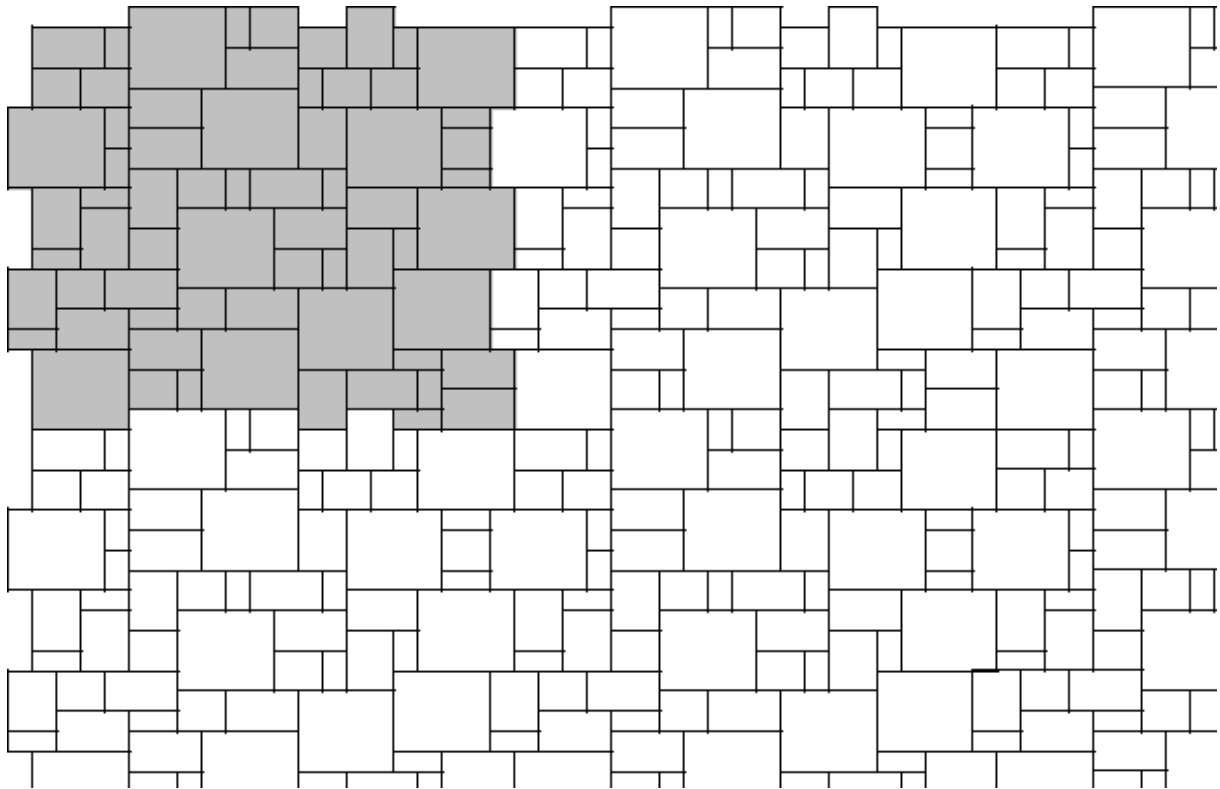


Typ 047

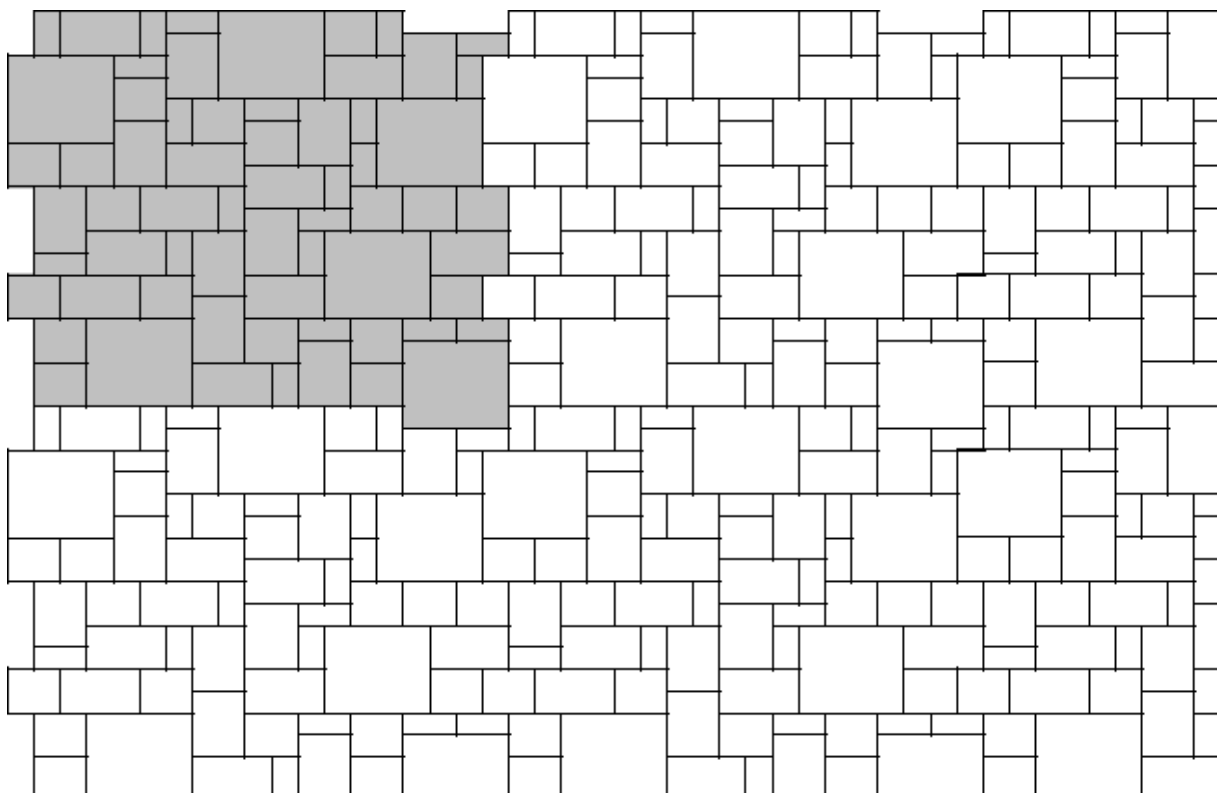

Typ 048

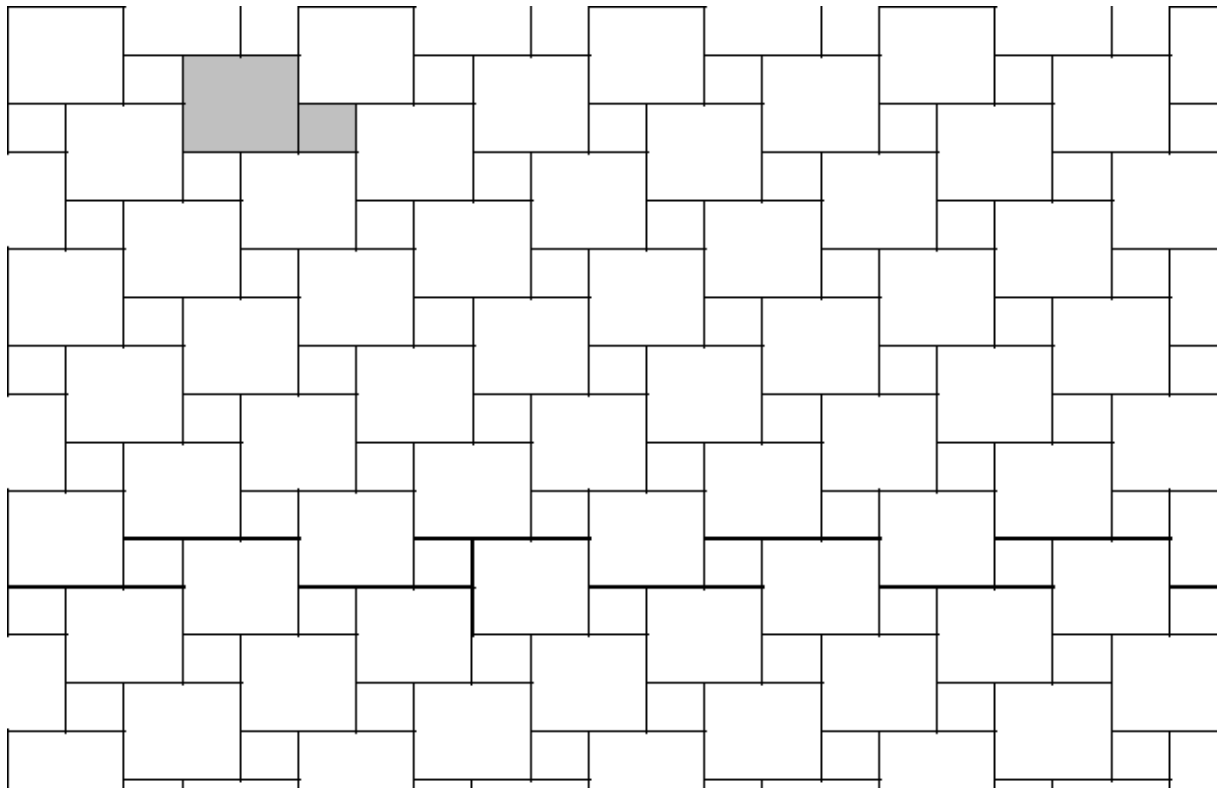


Typ 049

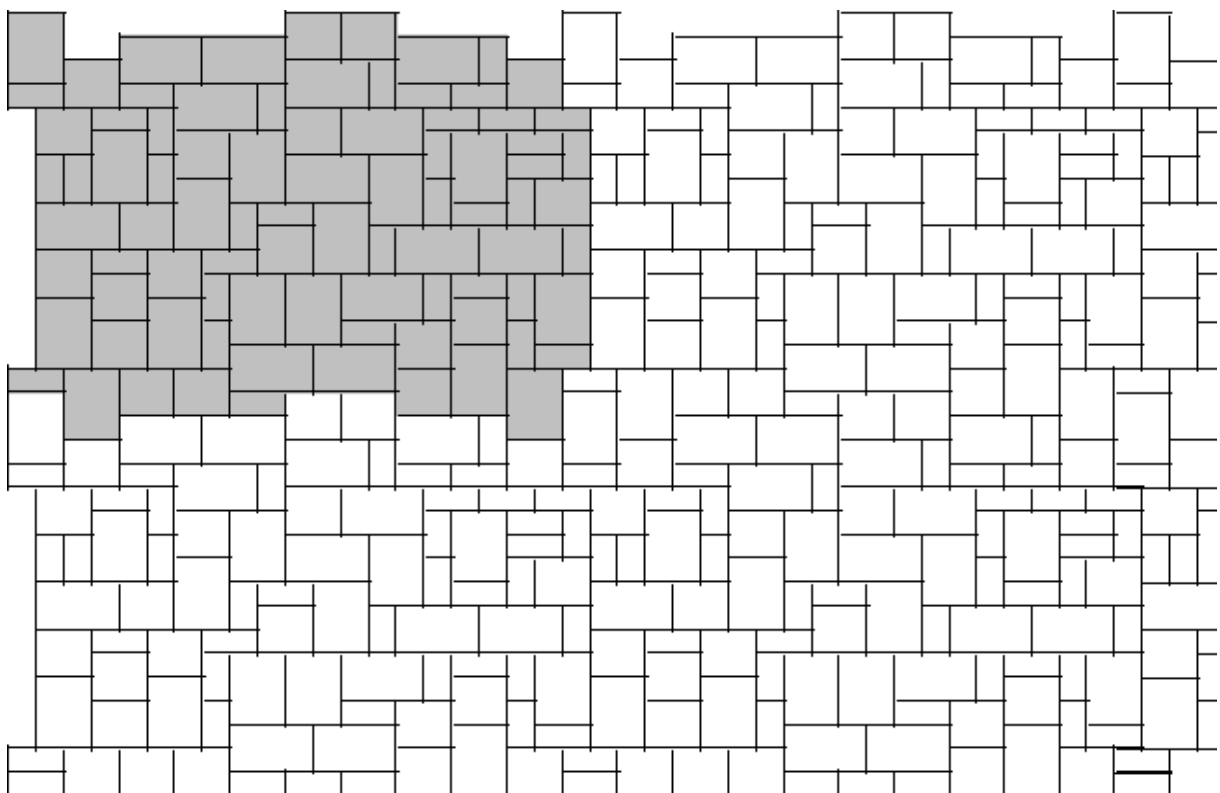


Typ 050


Antinea Öko

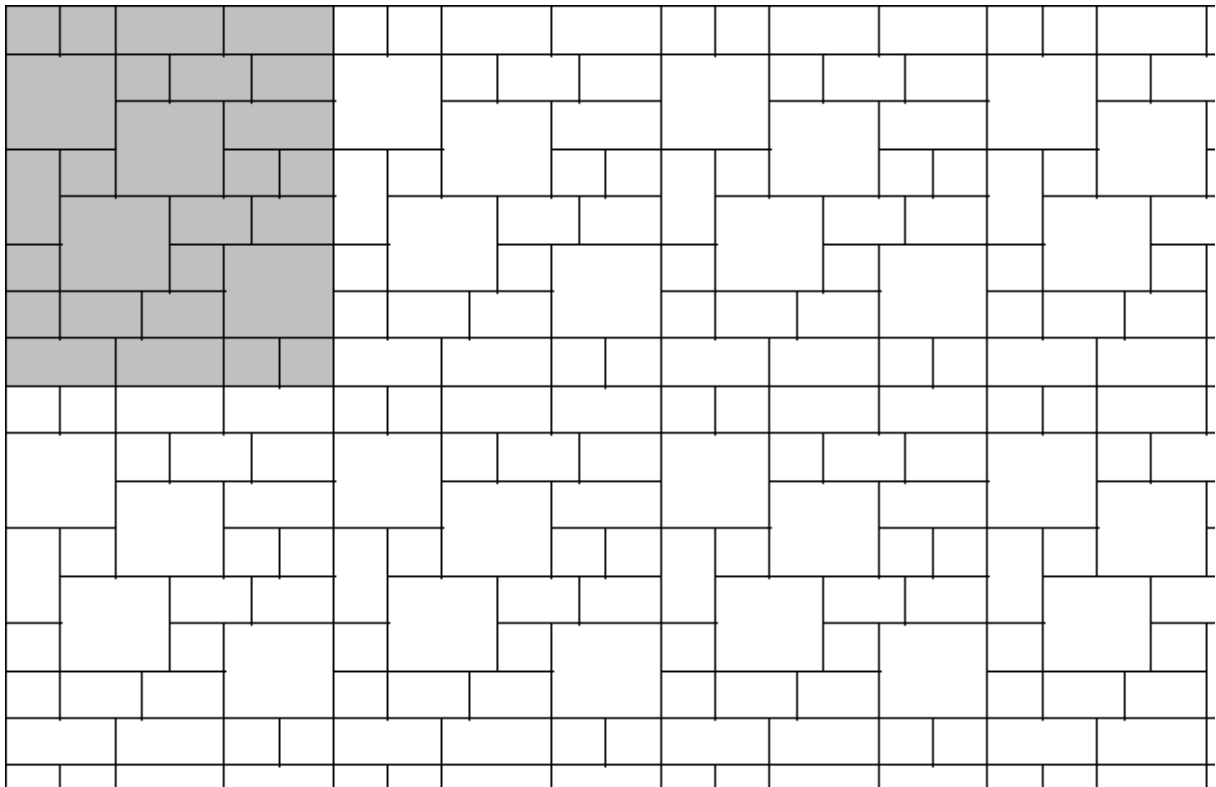


Typ 051

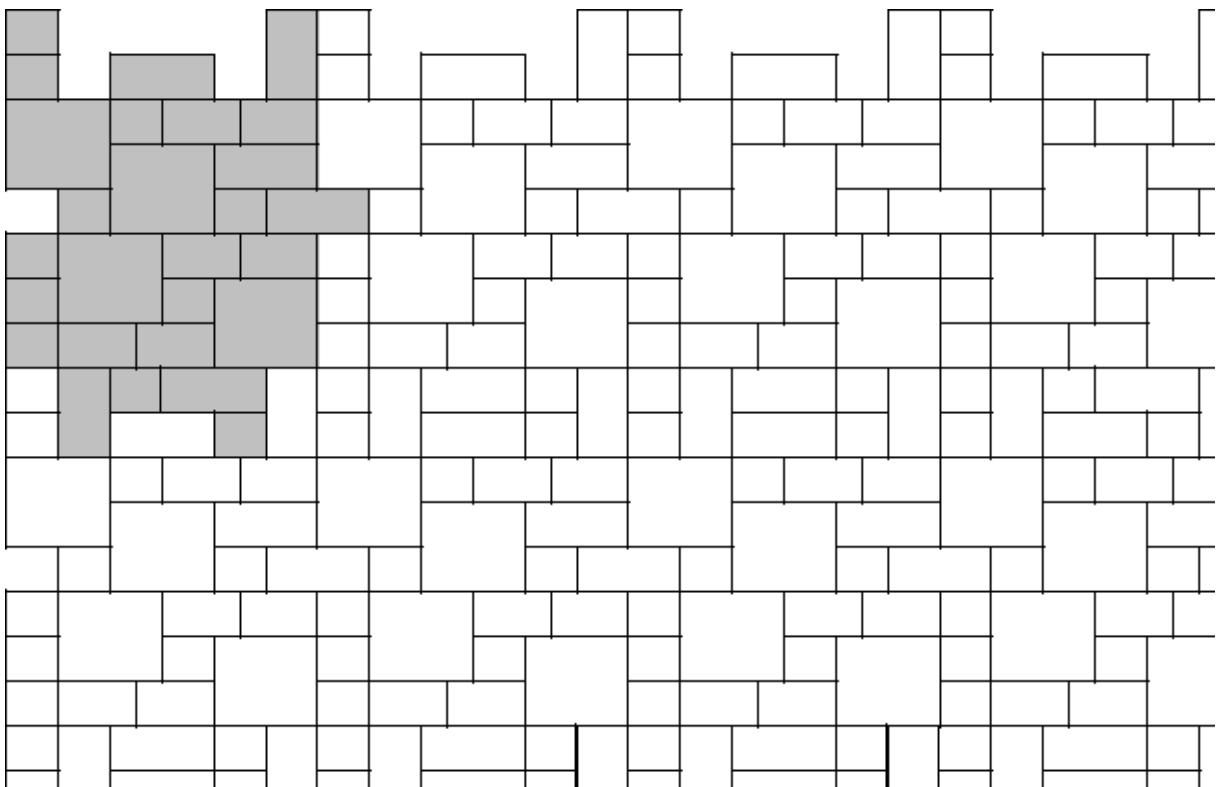

Typ 052

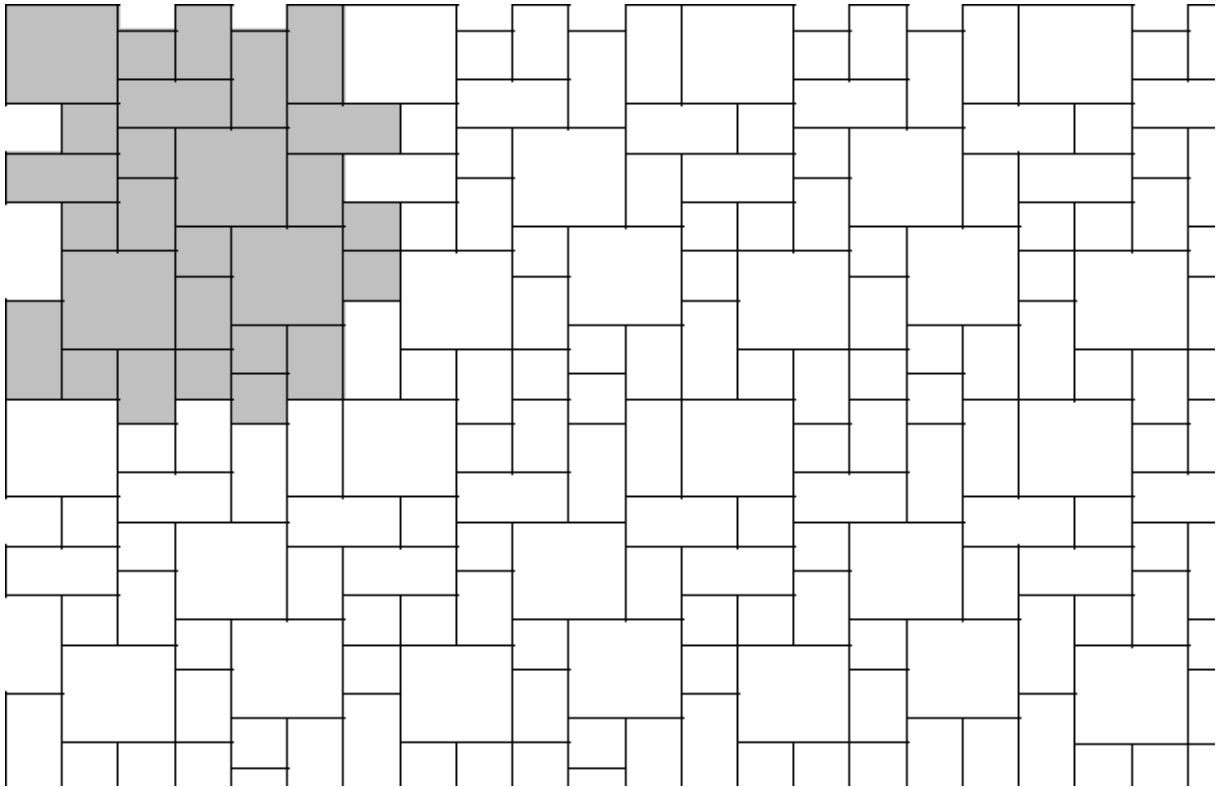


Typ 053

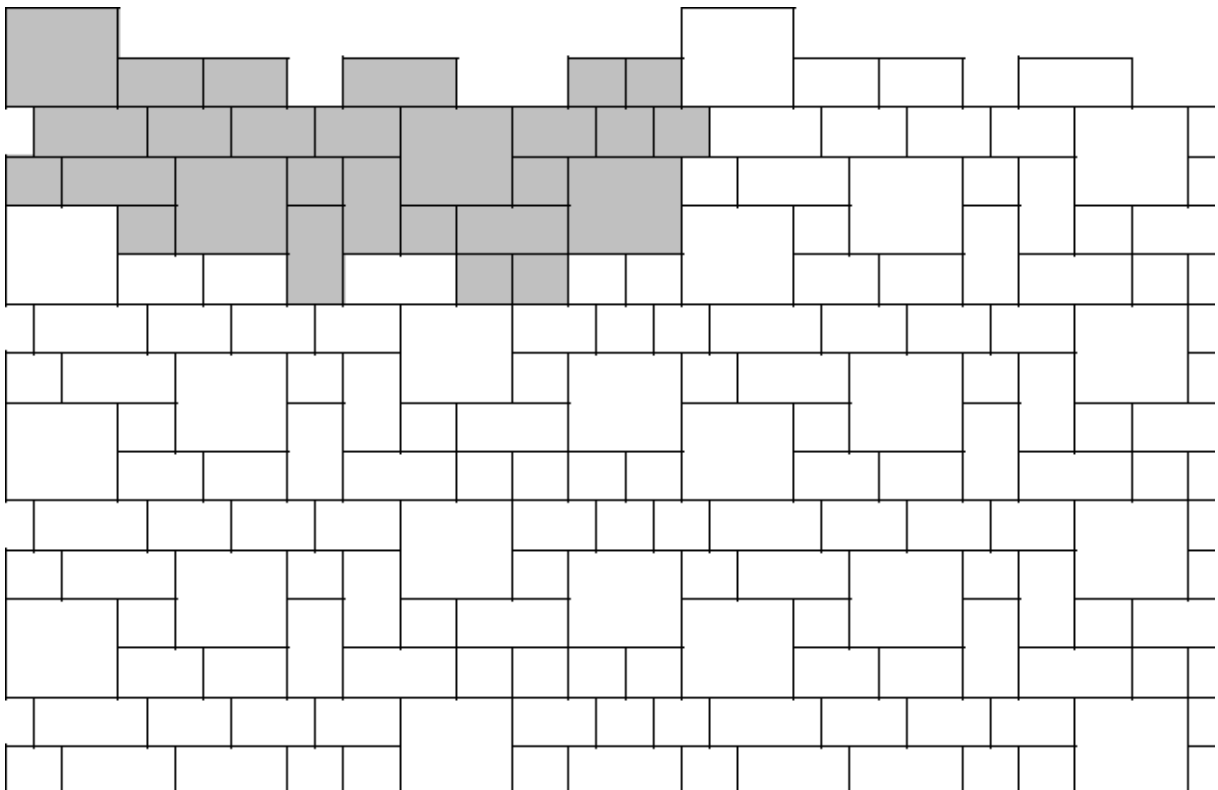


Typ 054


Il Campo Öko

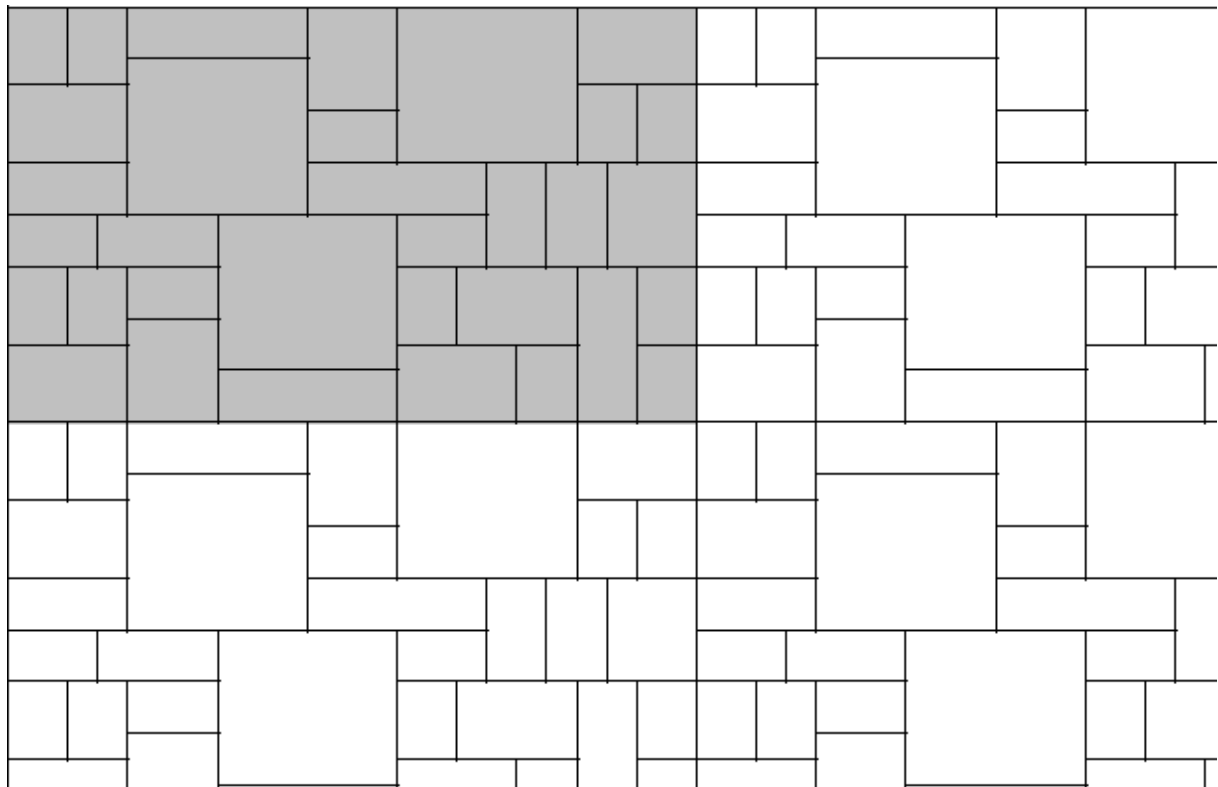


Typ 055

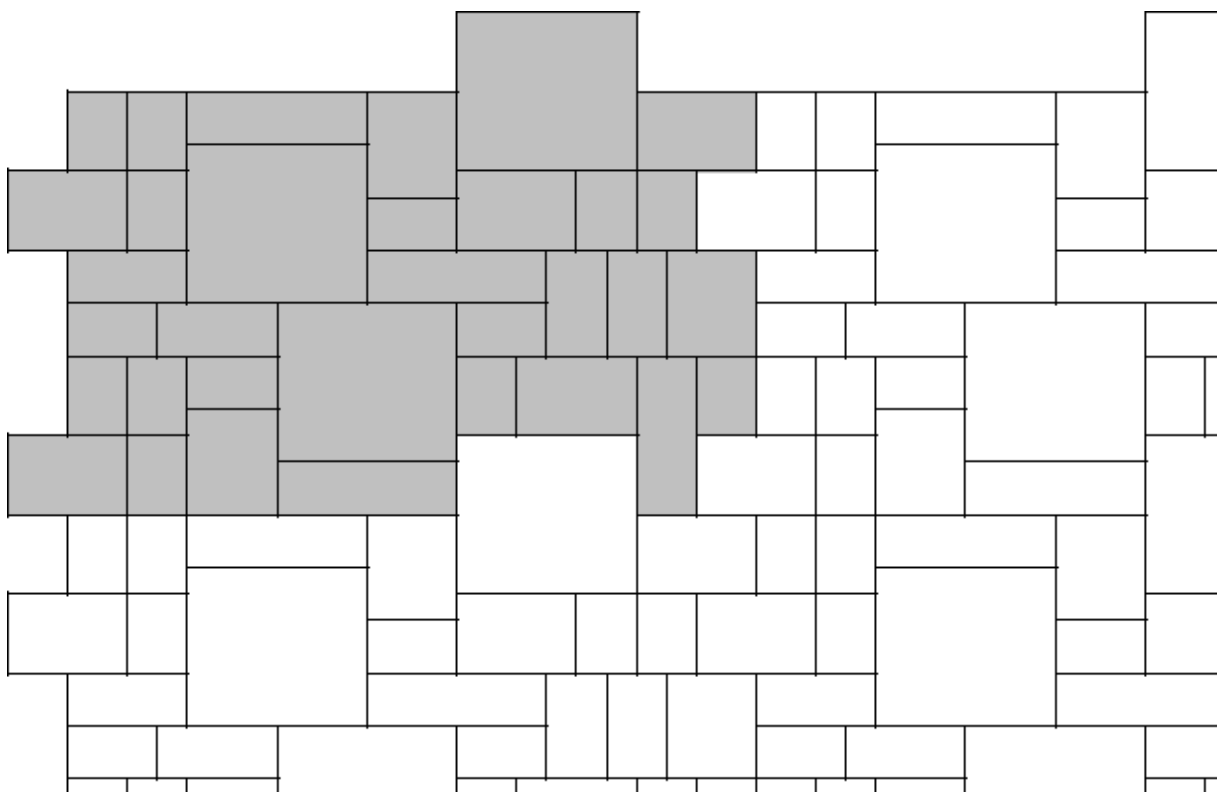

Typ 056

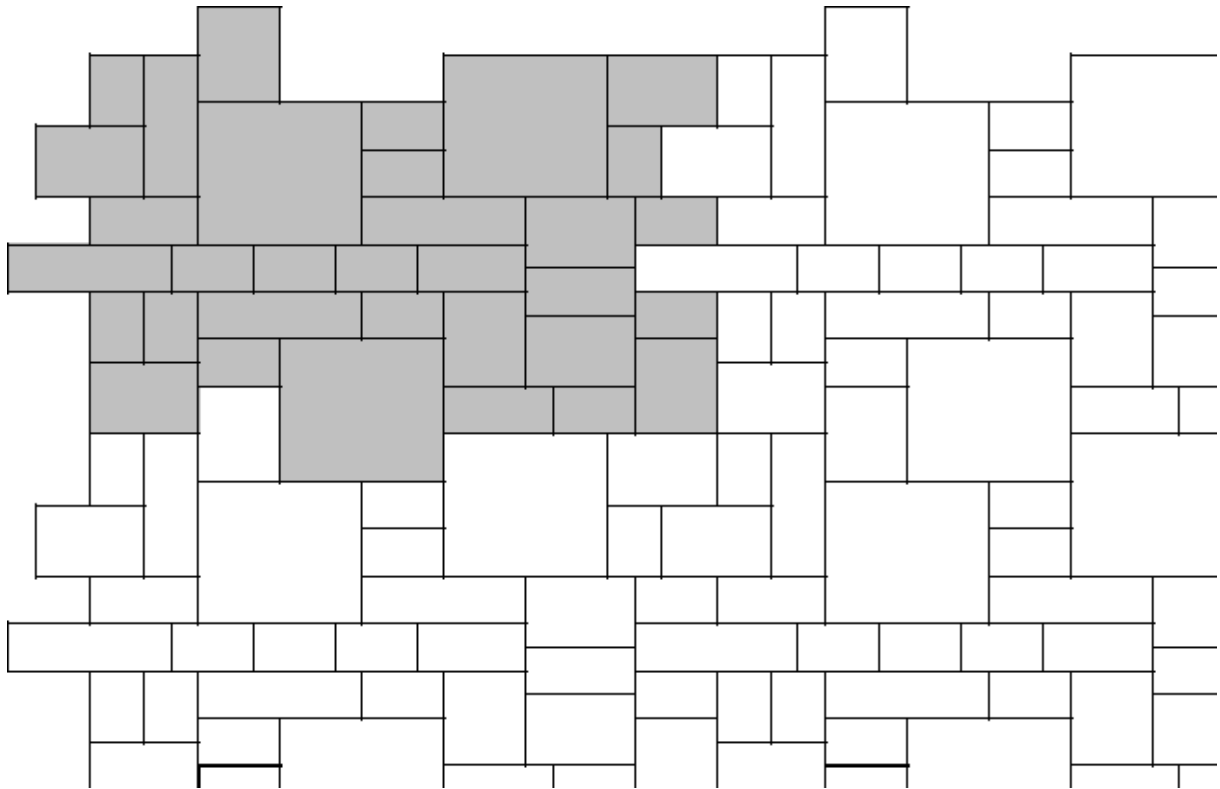


Typ 057

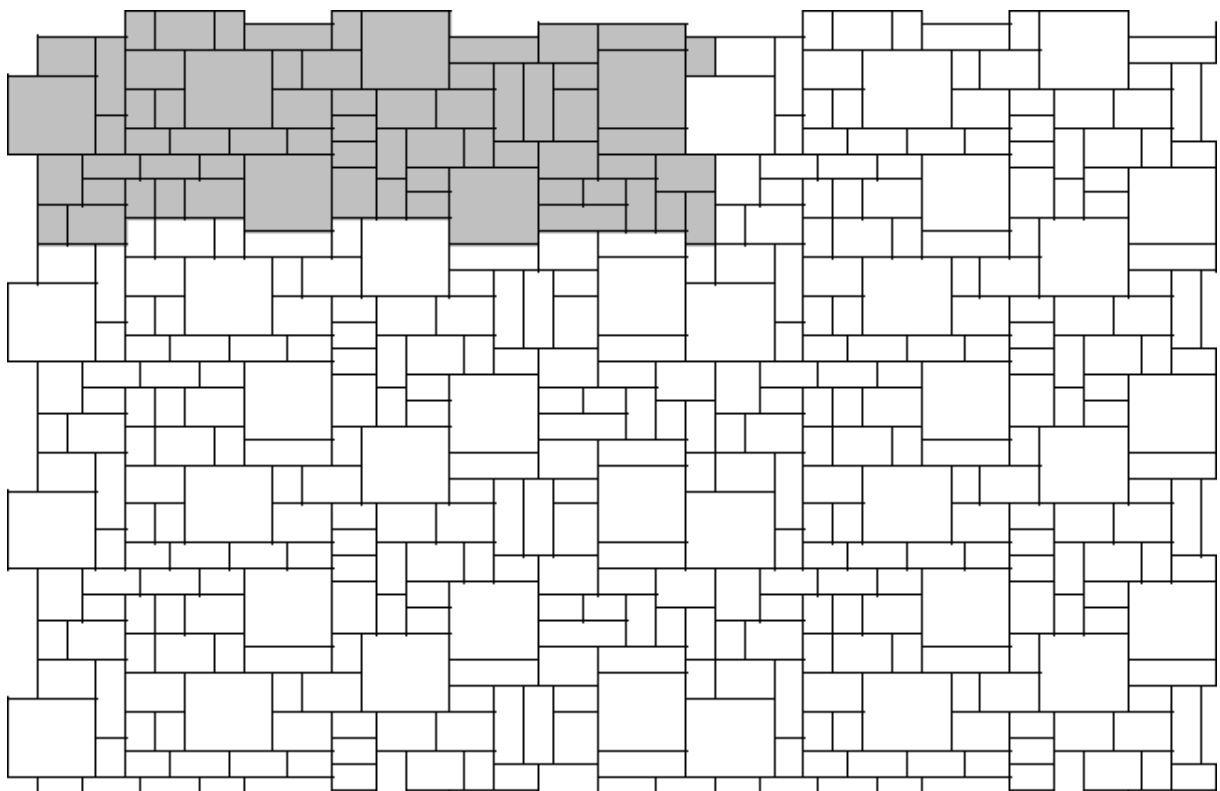


Typ 058


La Linia

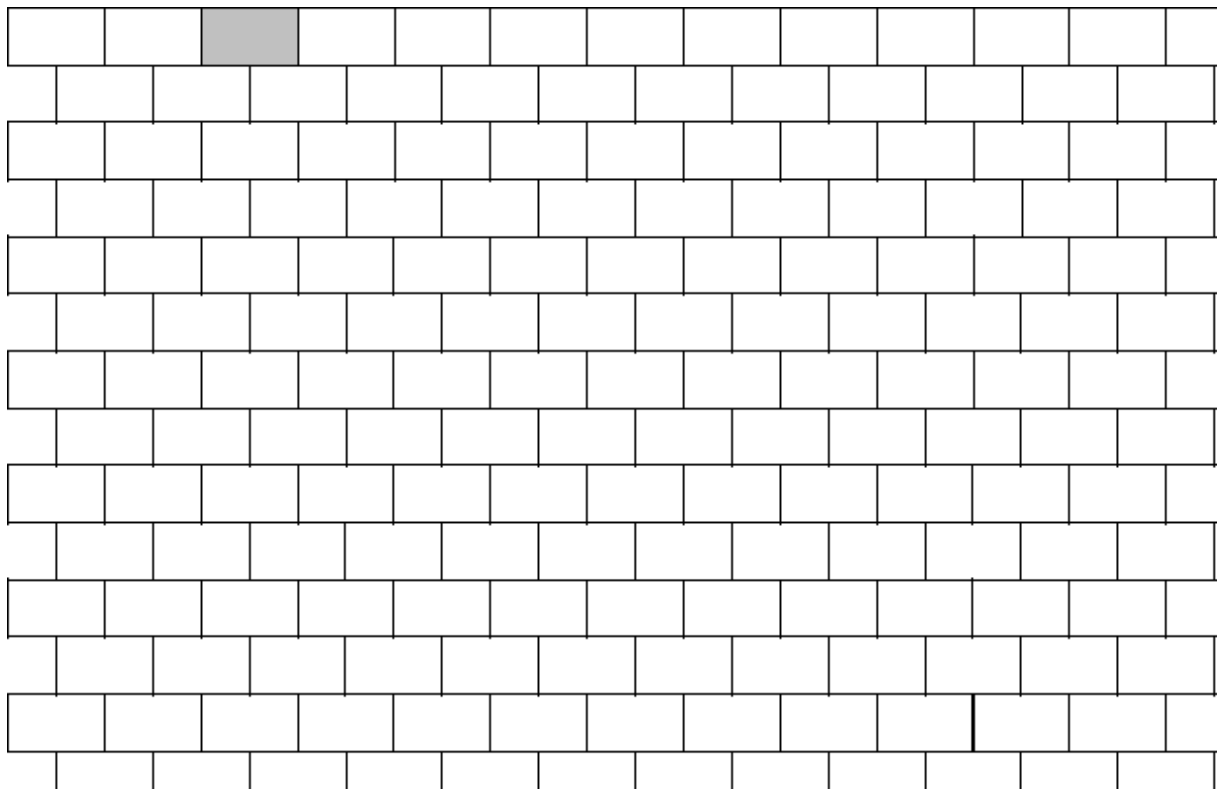


Typ 059

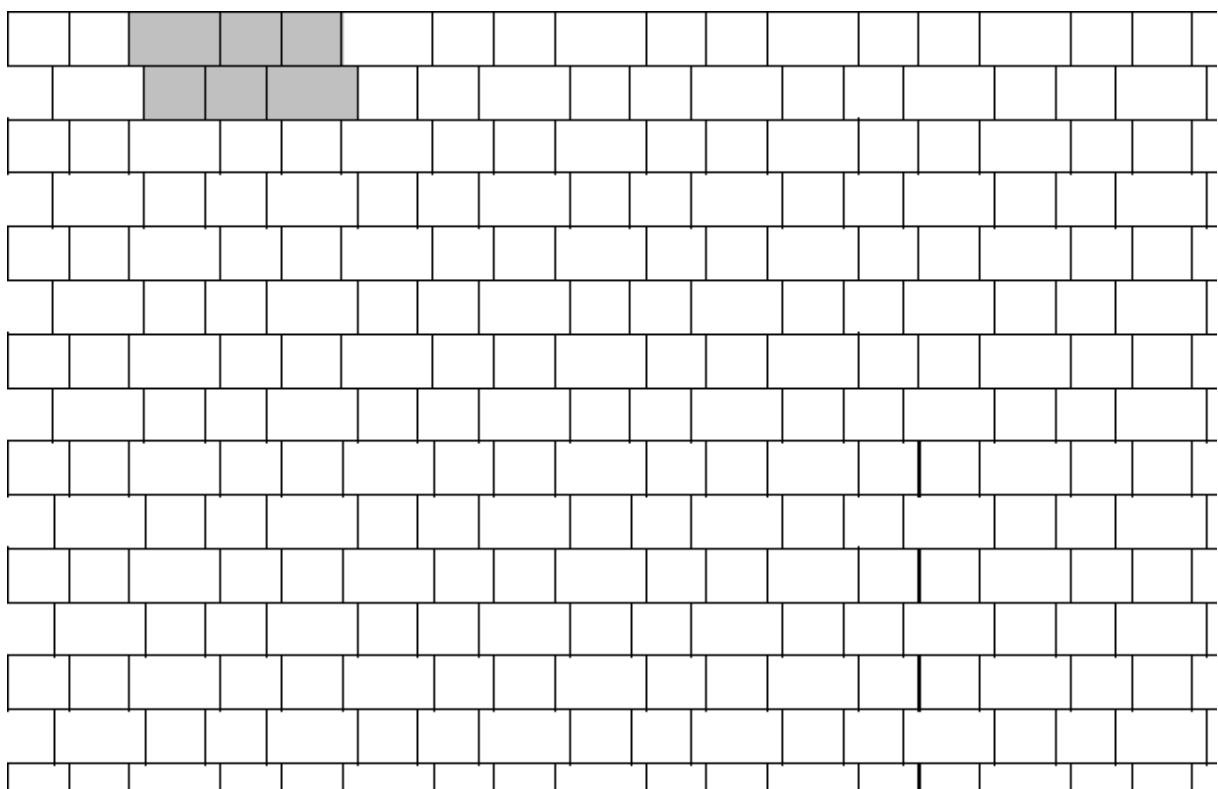


Typ 60

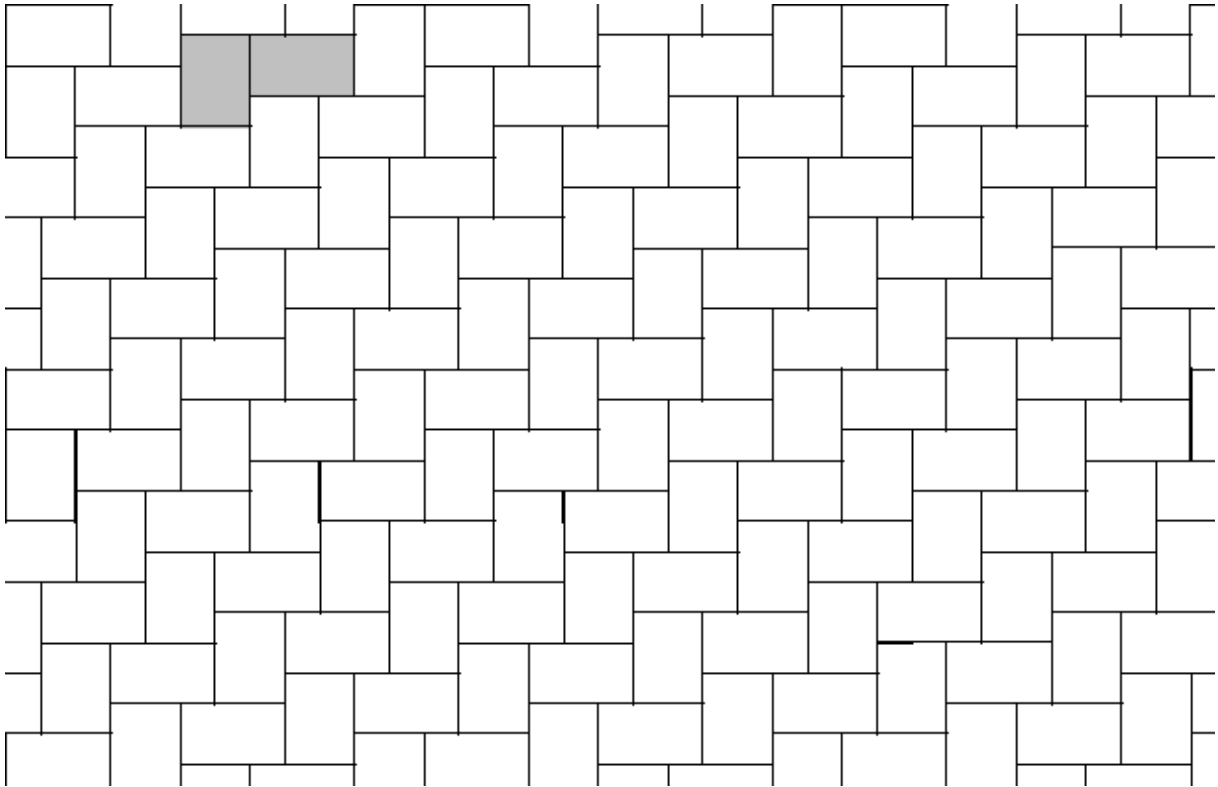


Typ 061

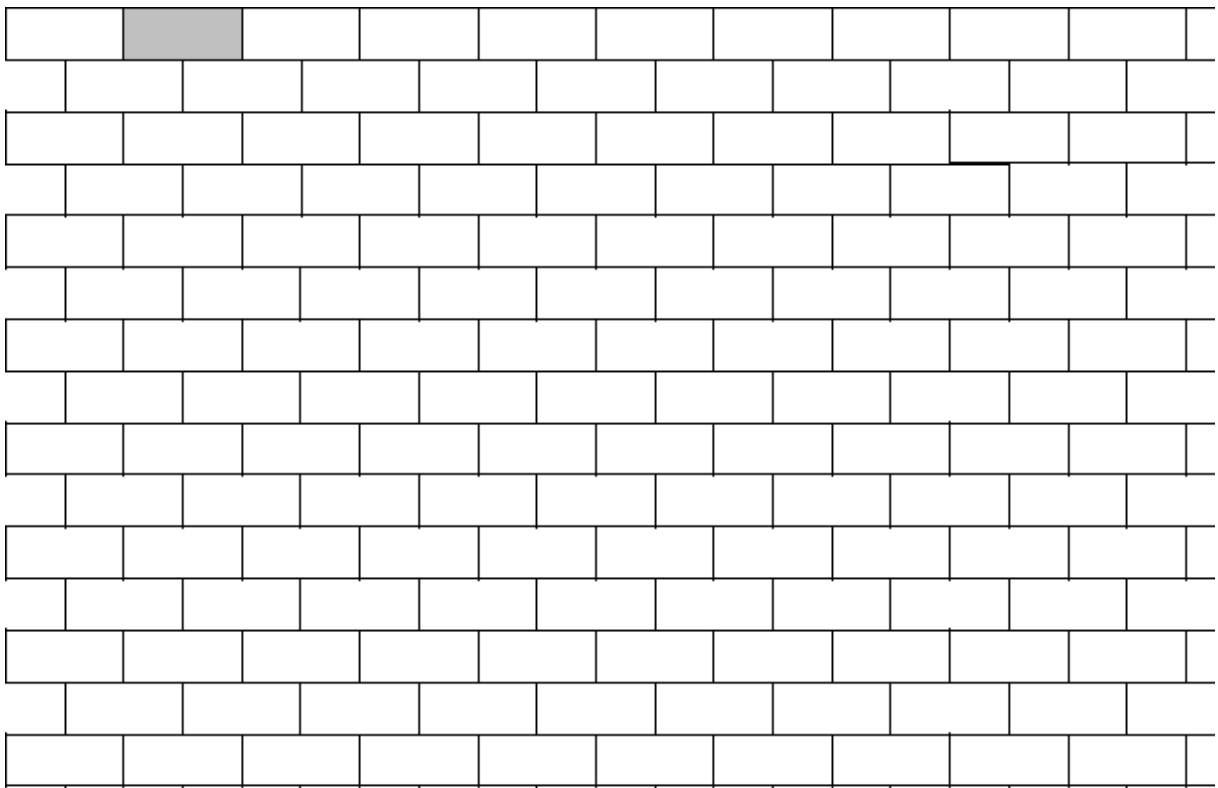


Typ 062

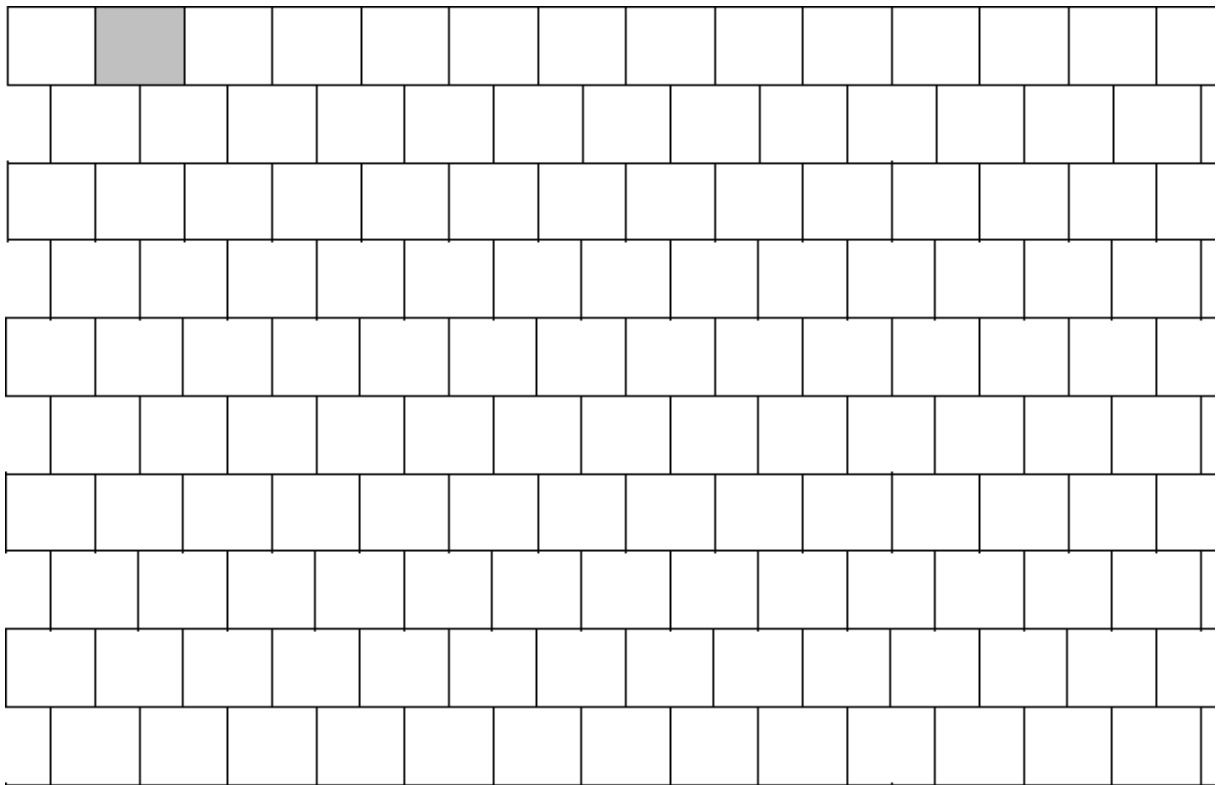


Typ 063

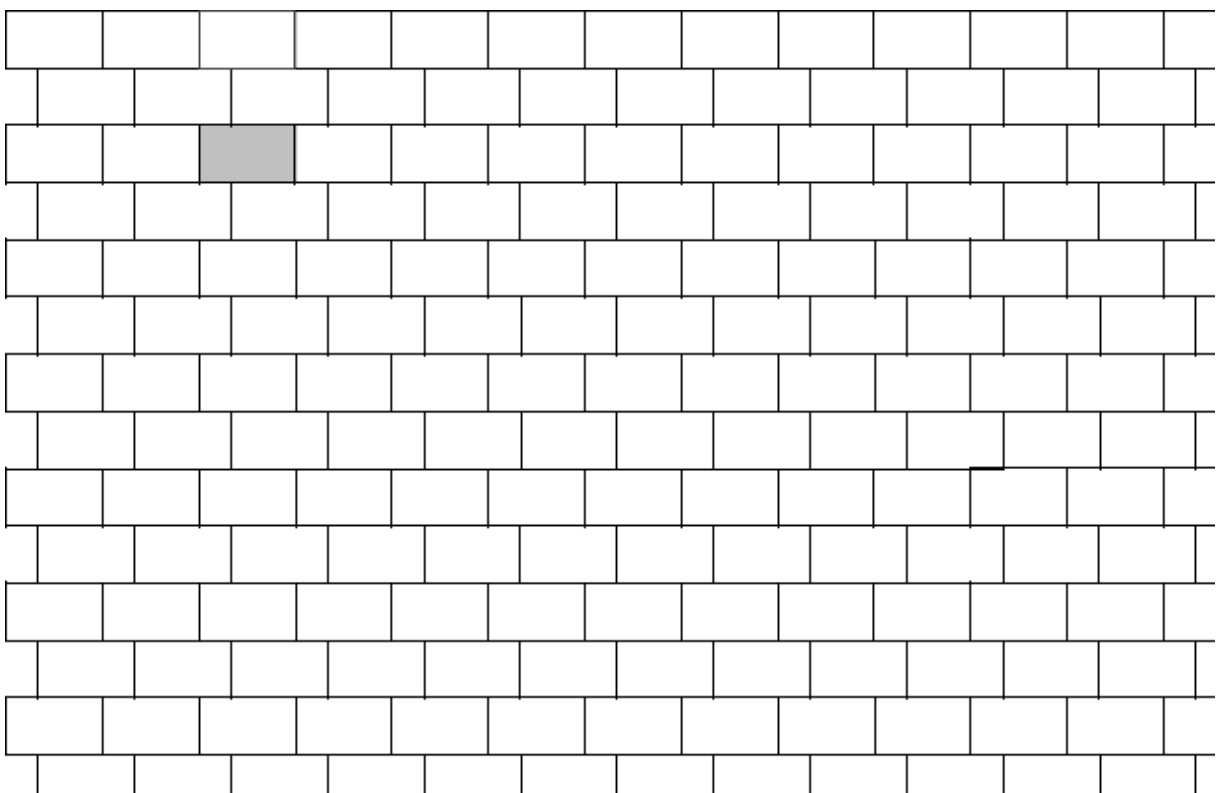


Typ 064

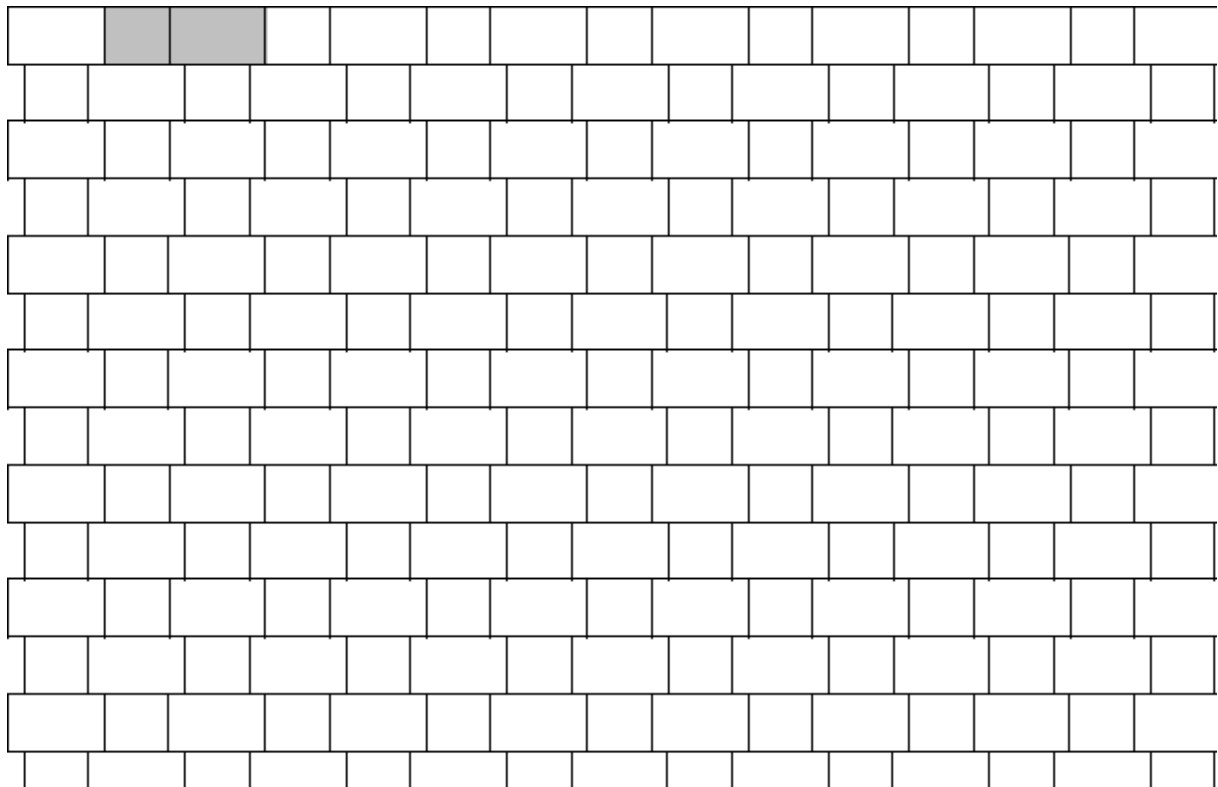


Typ 065

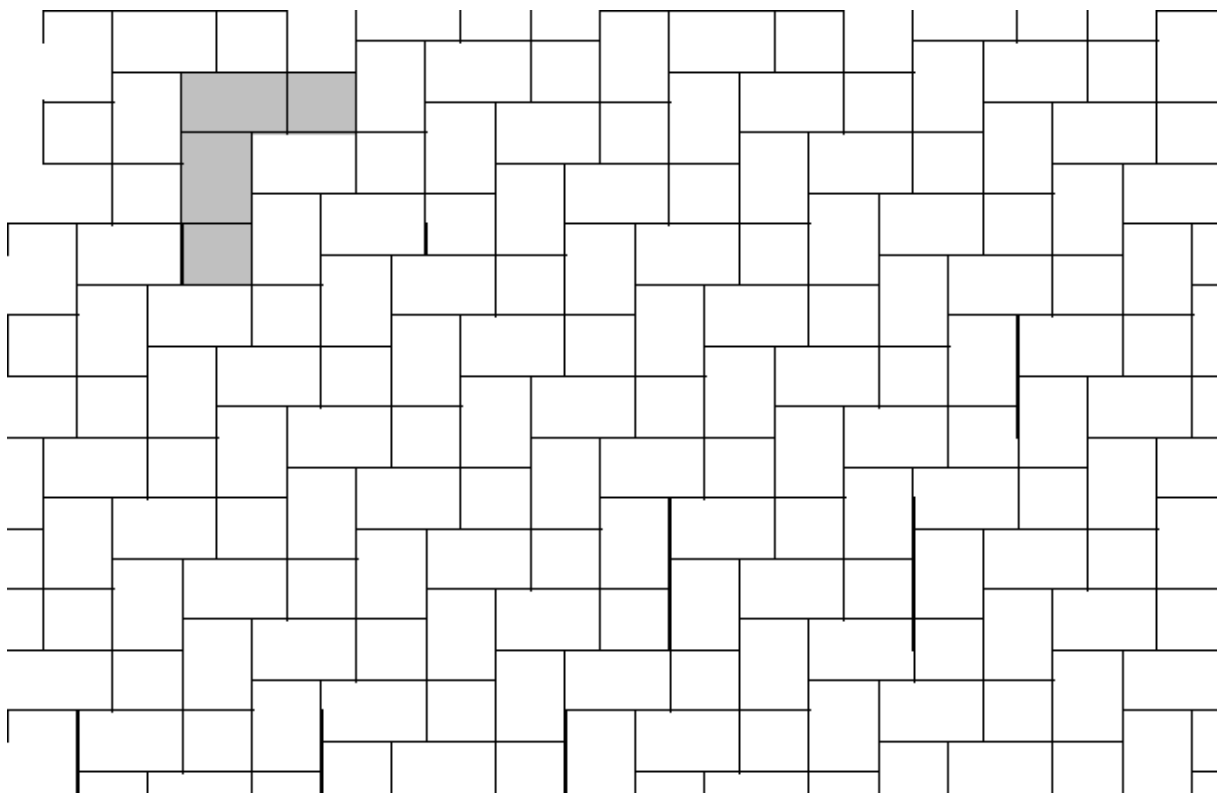


Typ 066

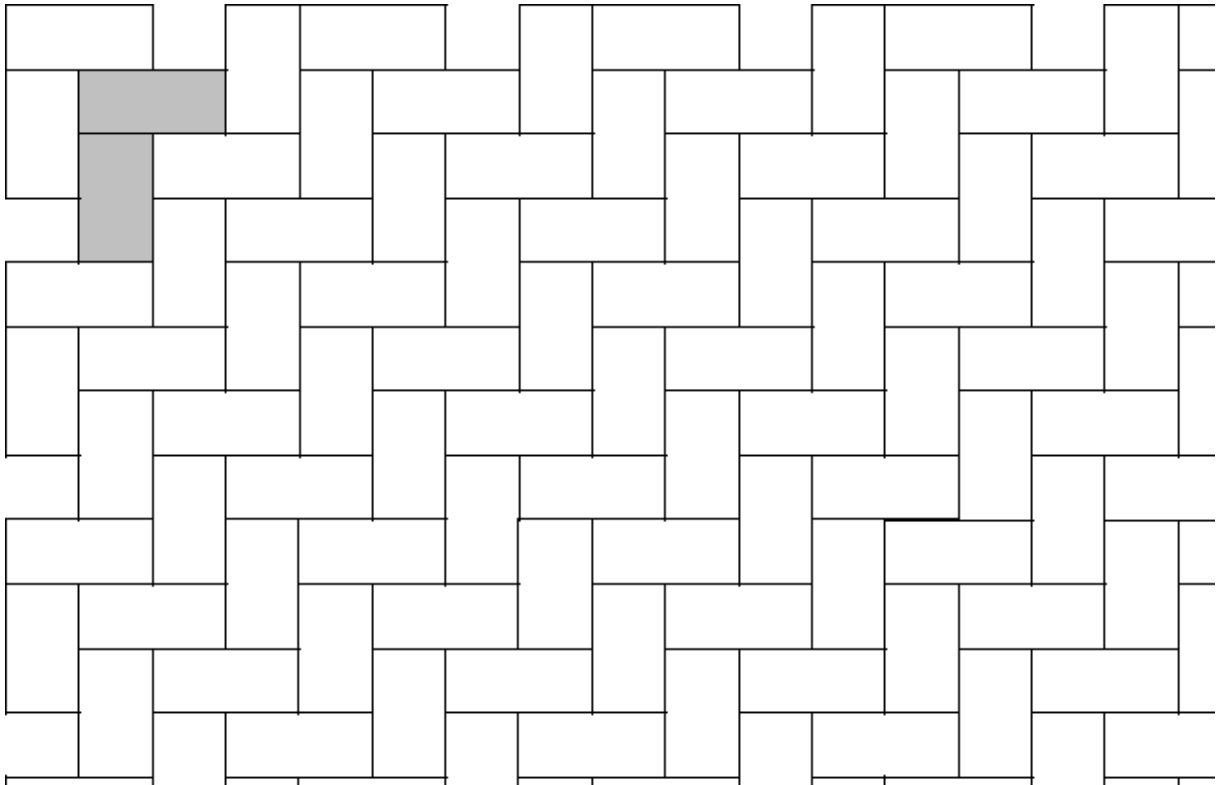


Typ 067

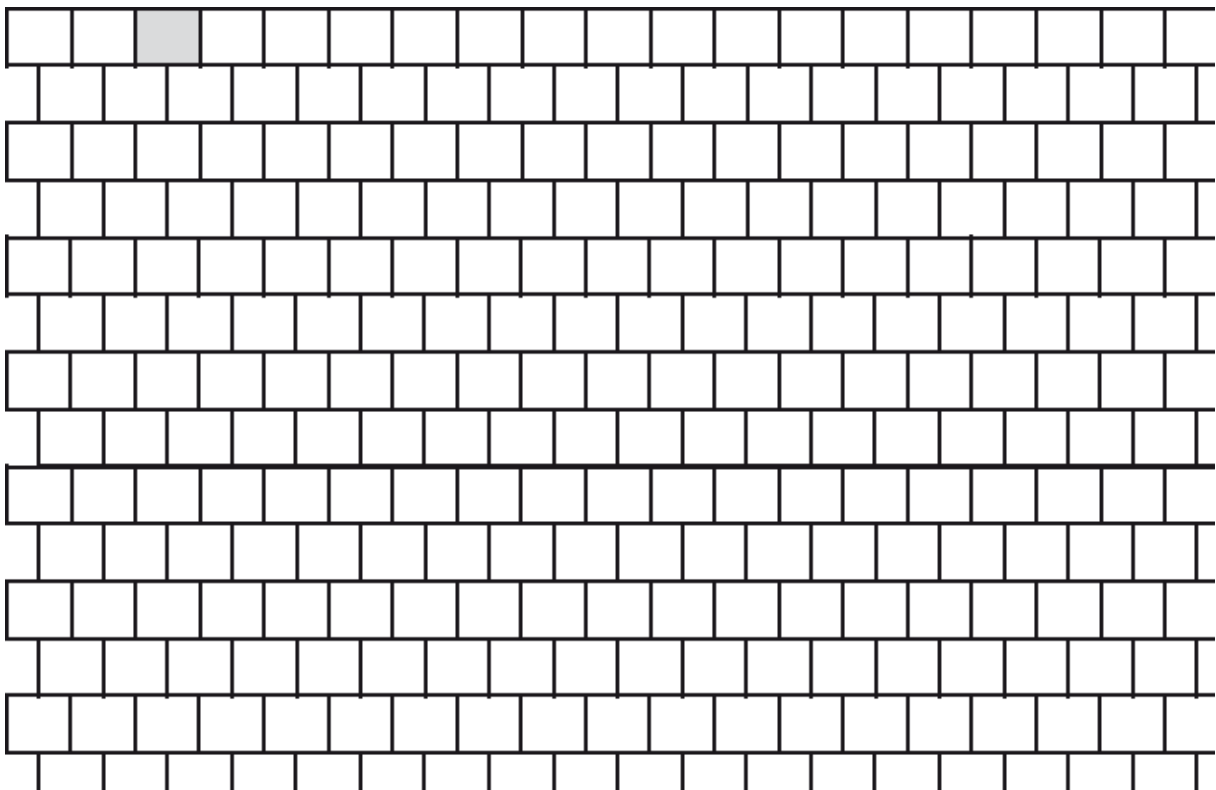


Typ 068

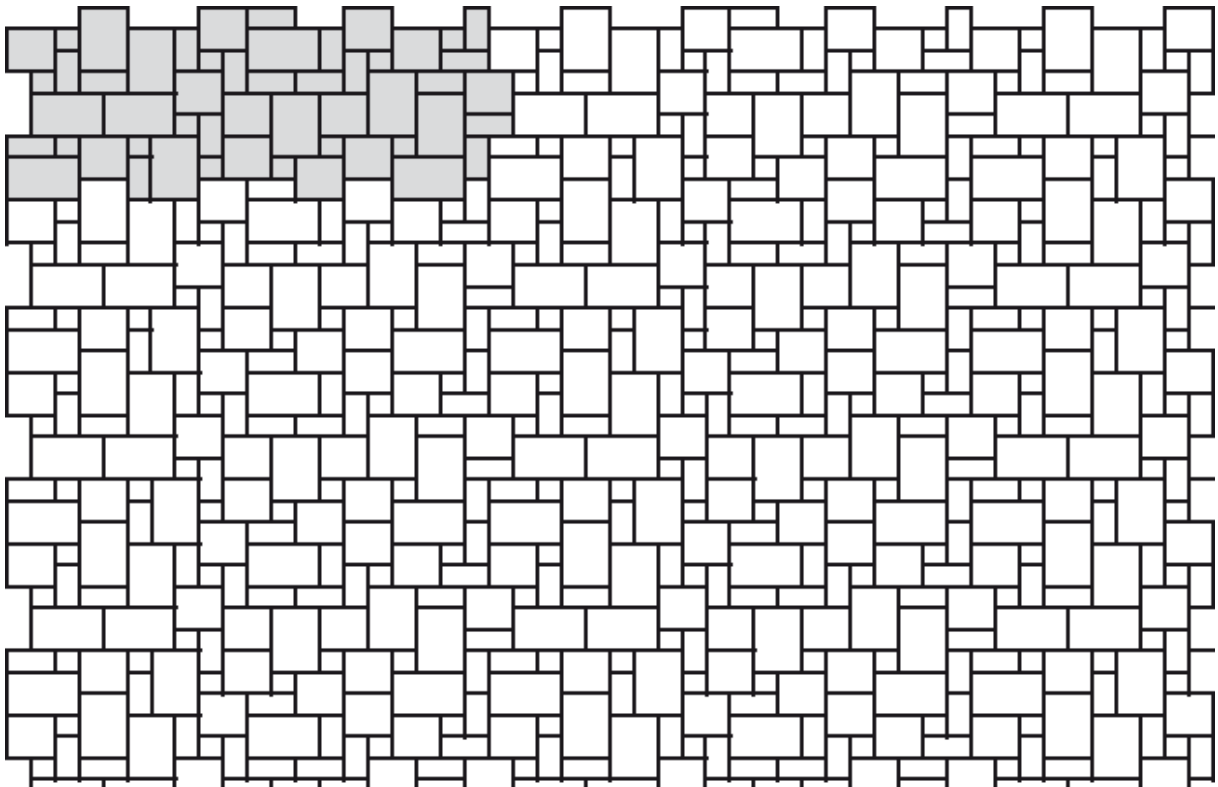


Typ 069

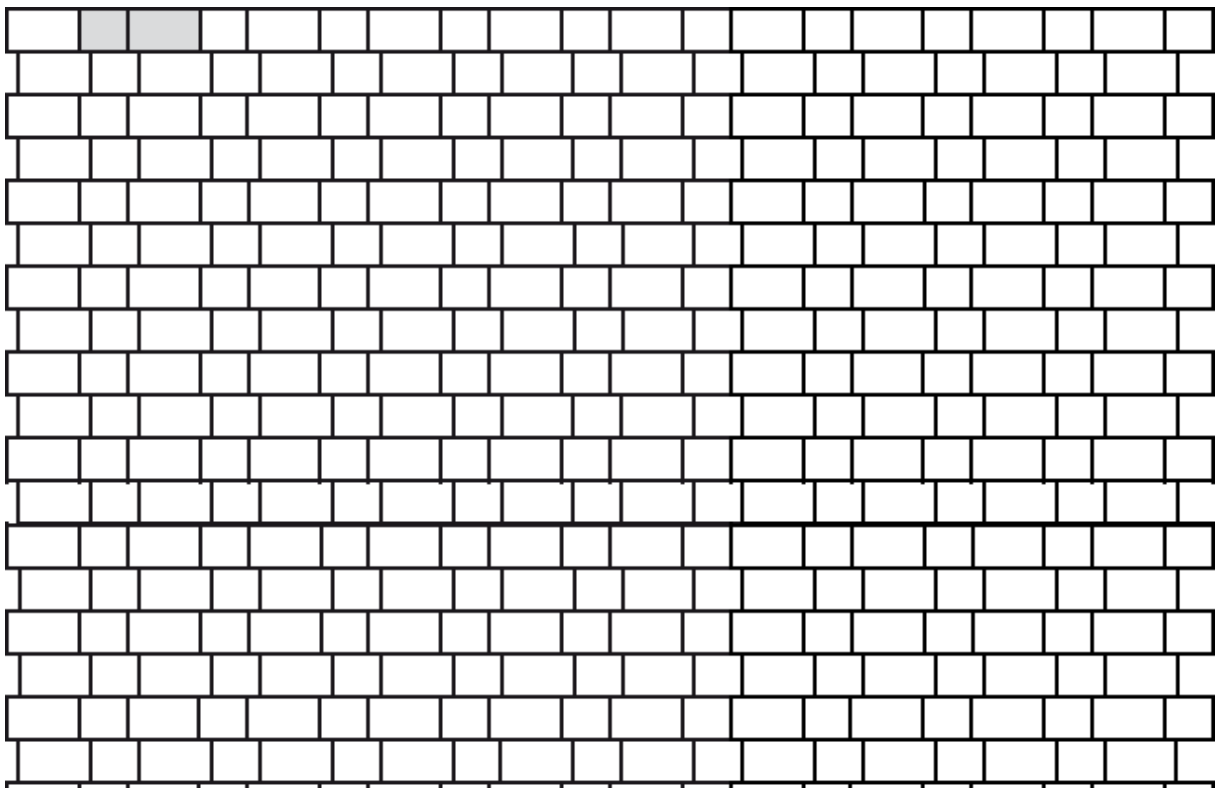


Typ 070

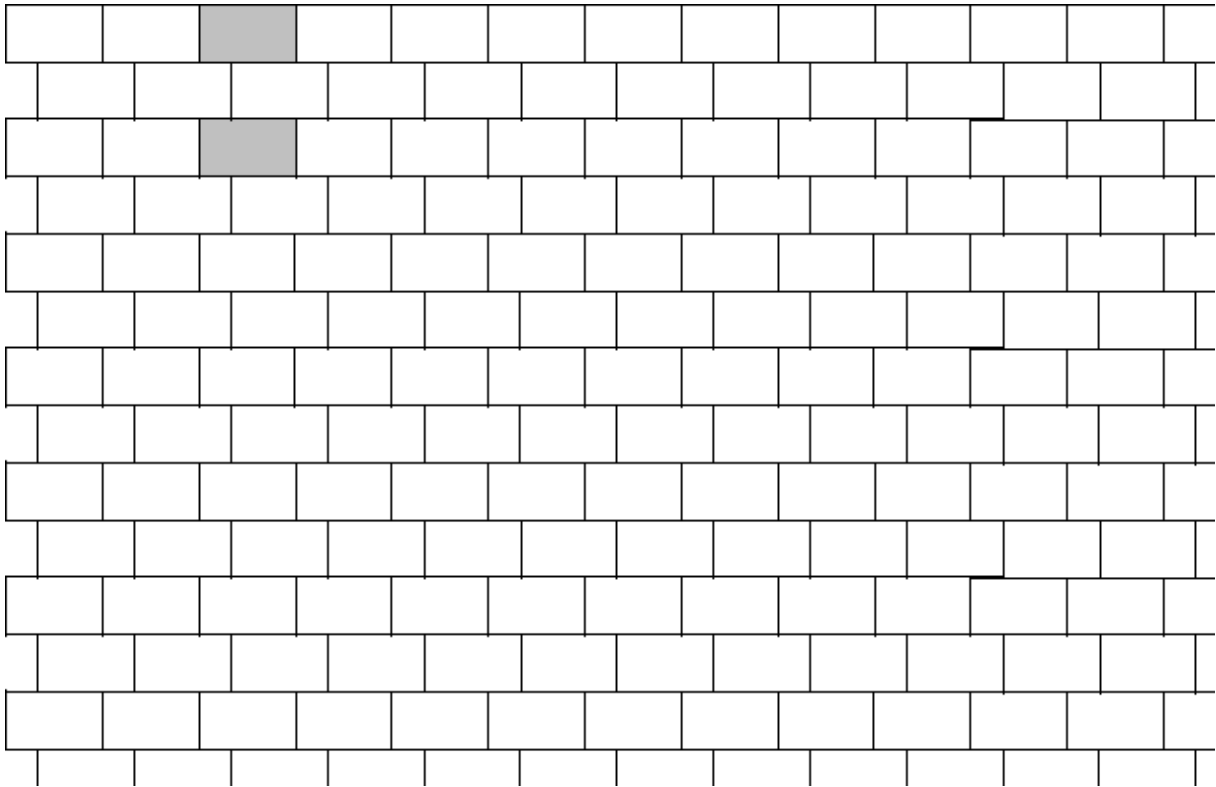


Typ 071

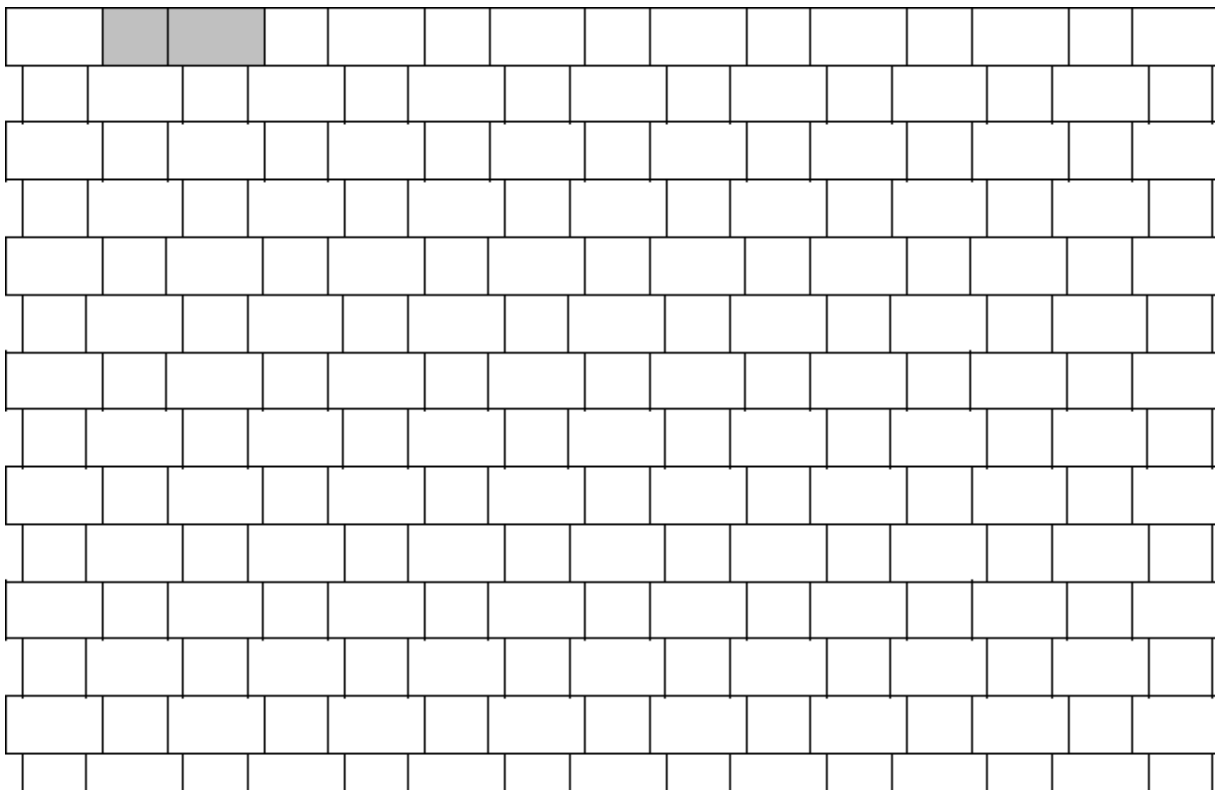


Typ 072

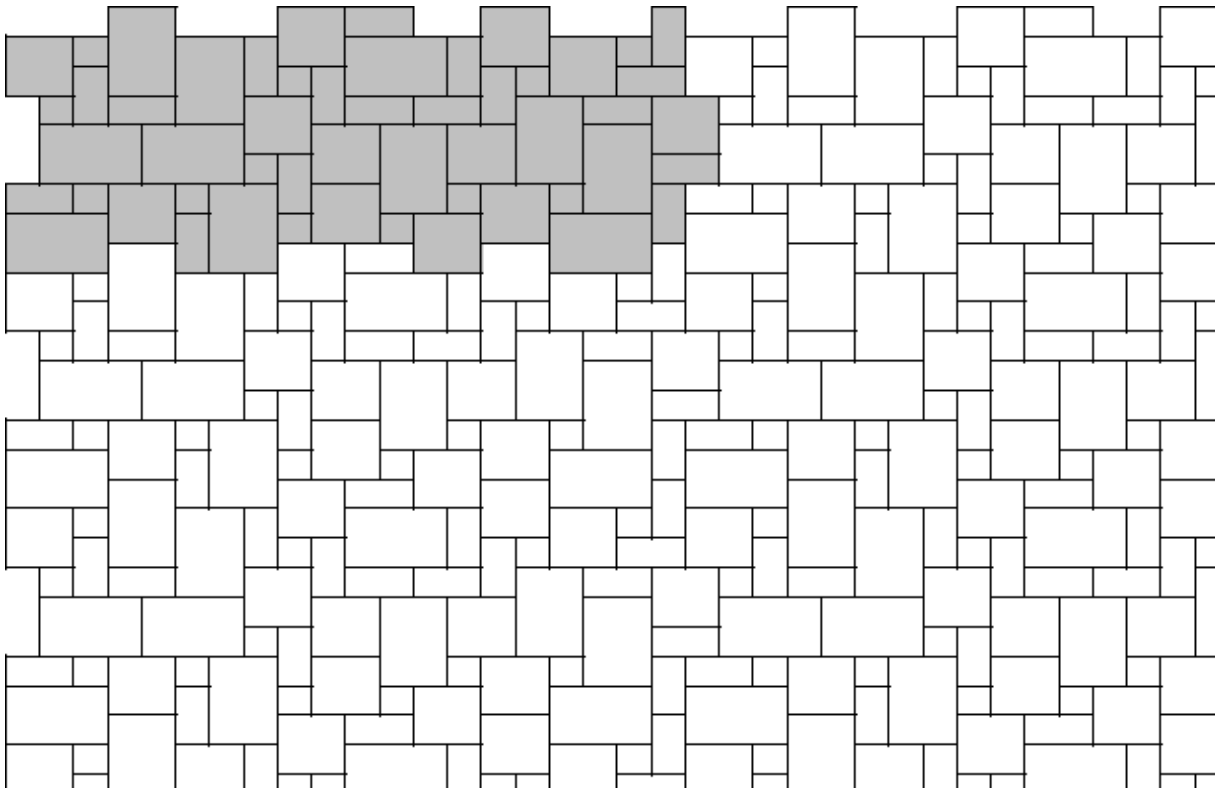


Typ 073

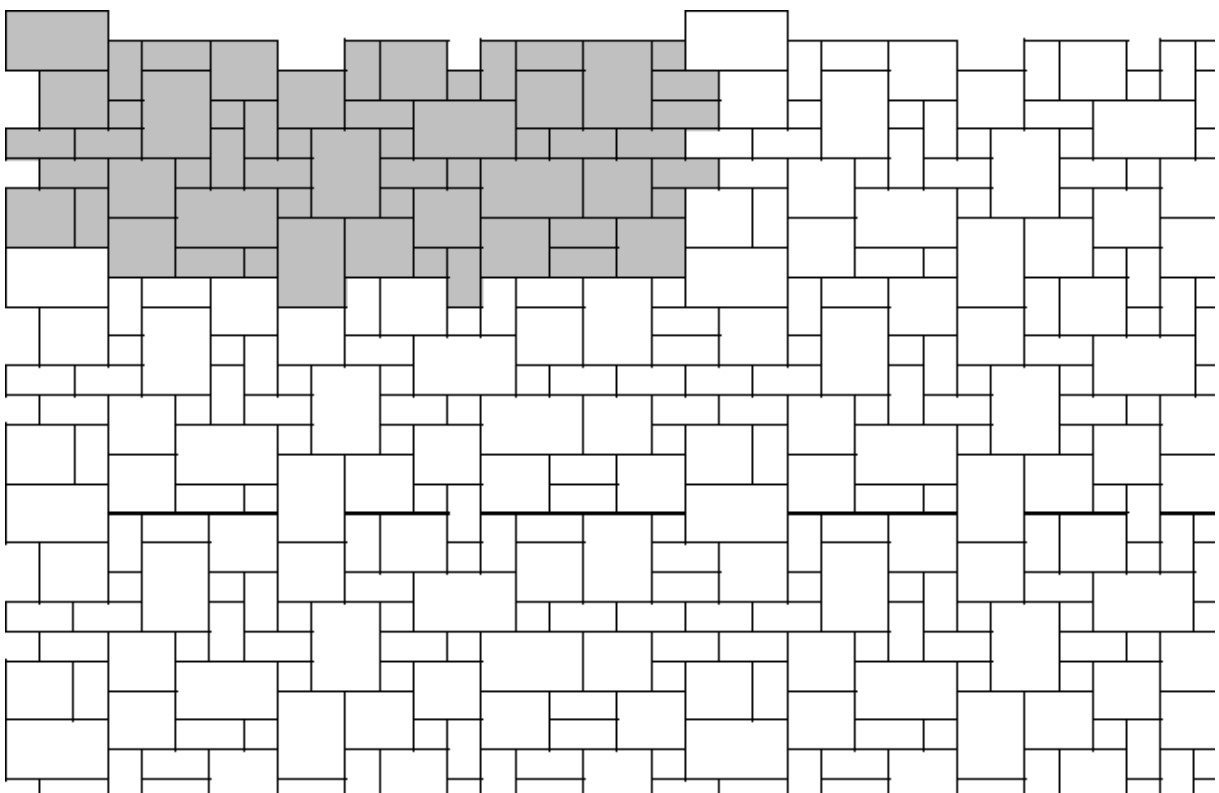


Typ 074

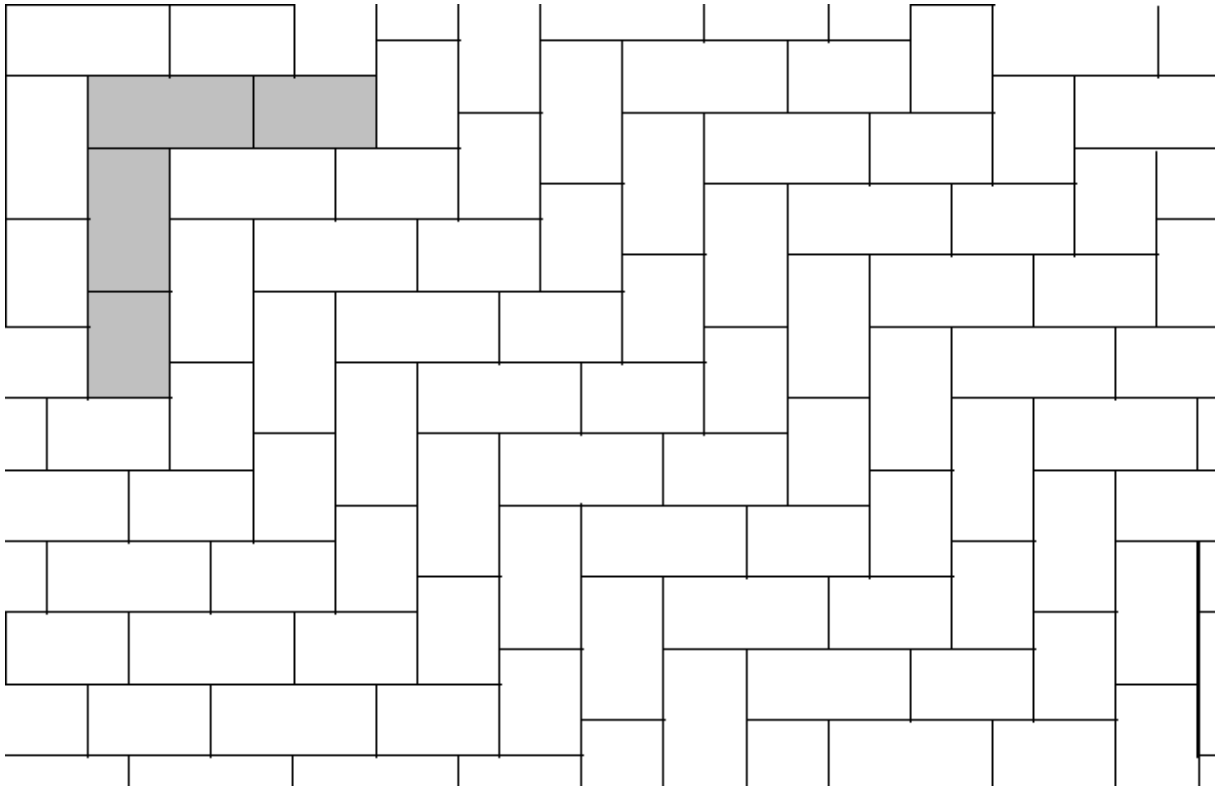


Typ 077

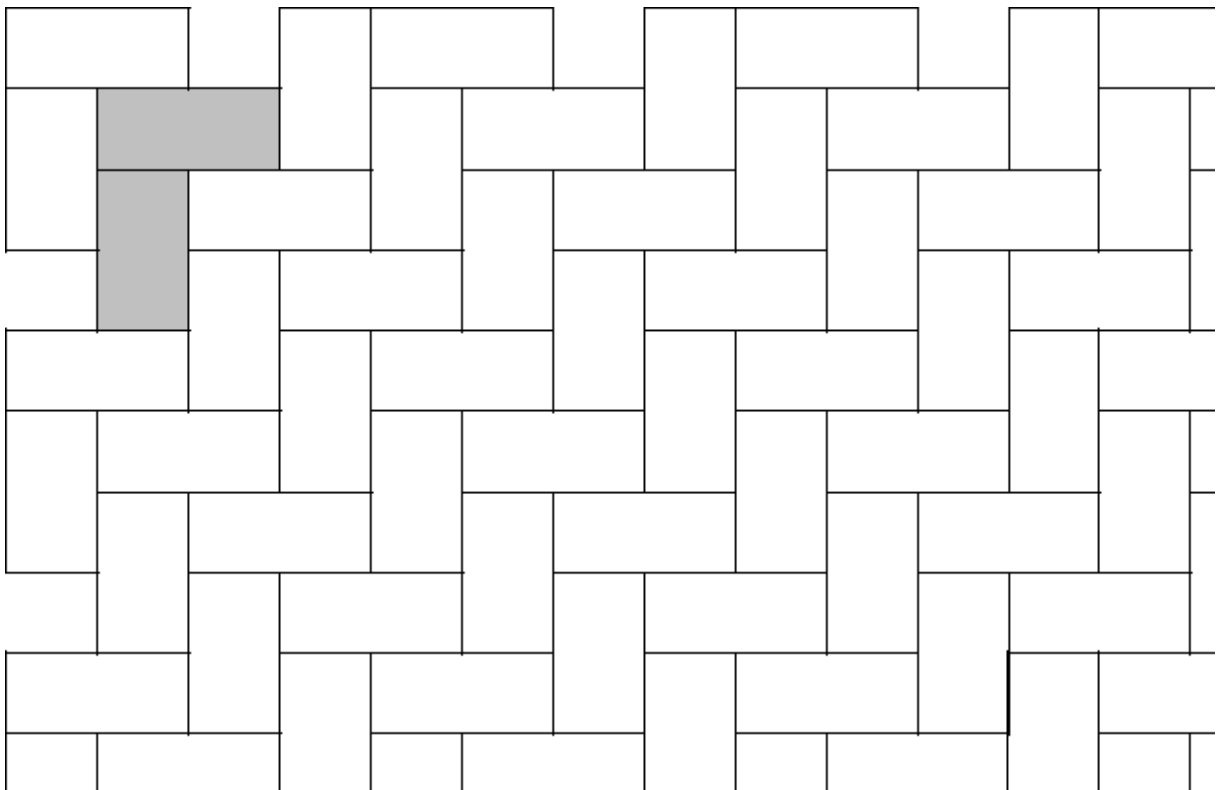


Typ 078

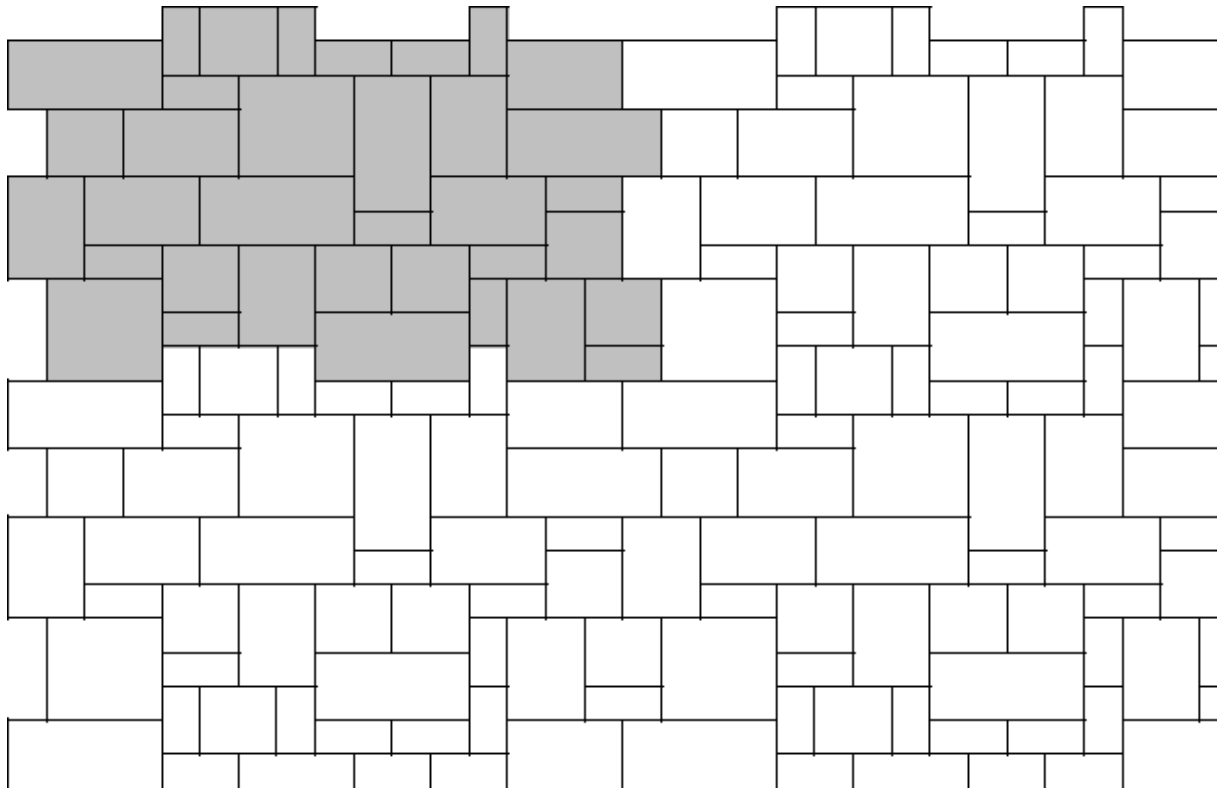


Typ 079

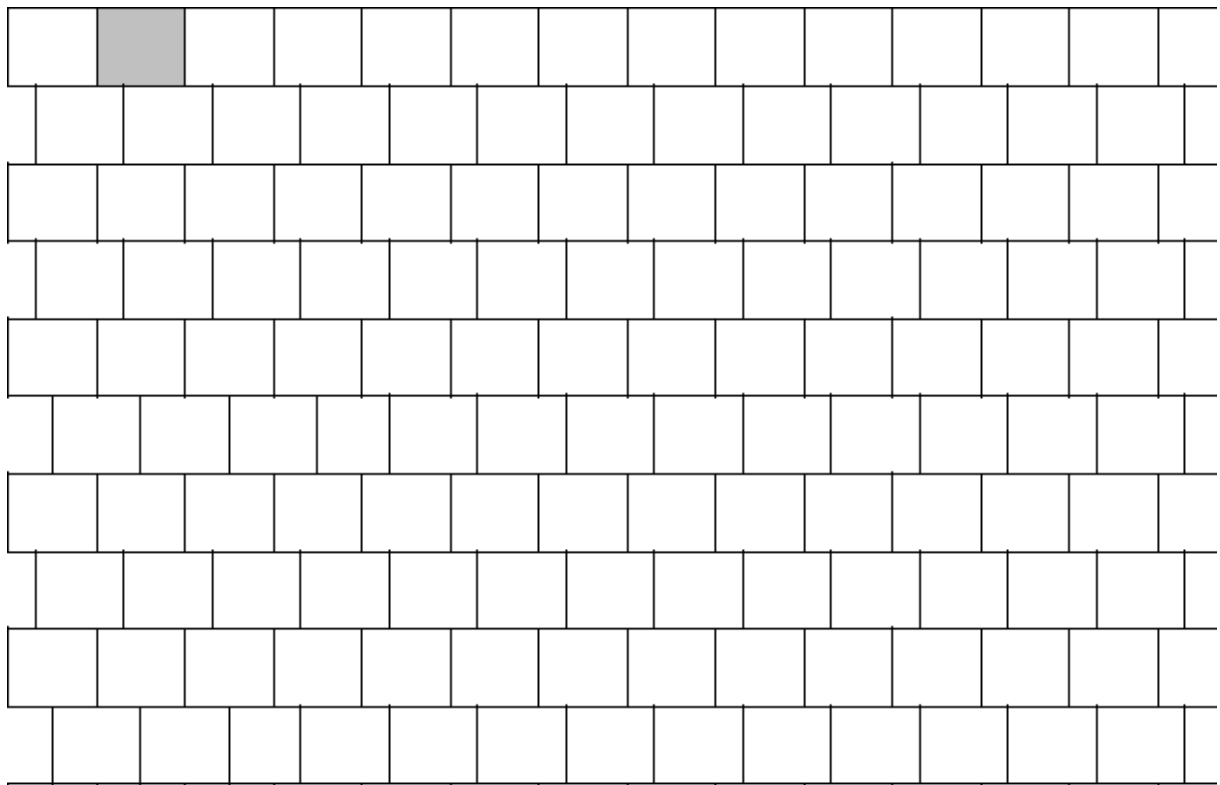


Typ 080

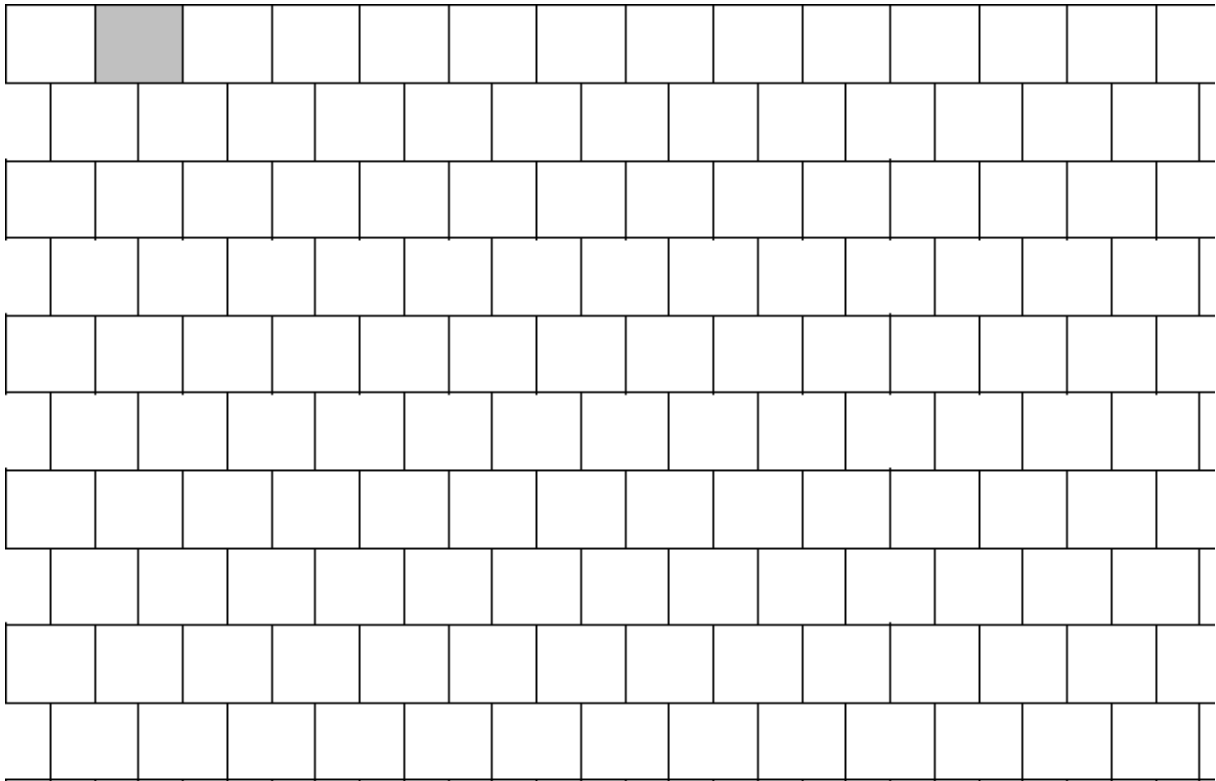


Typ 081

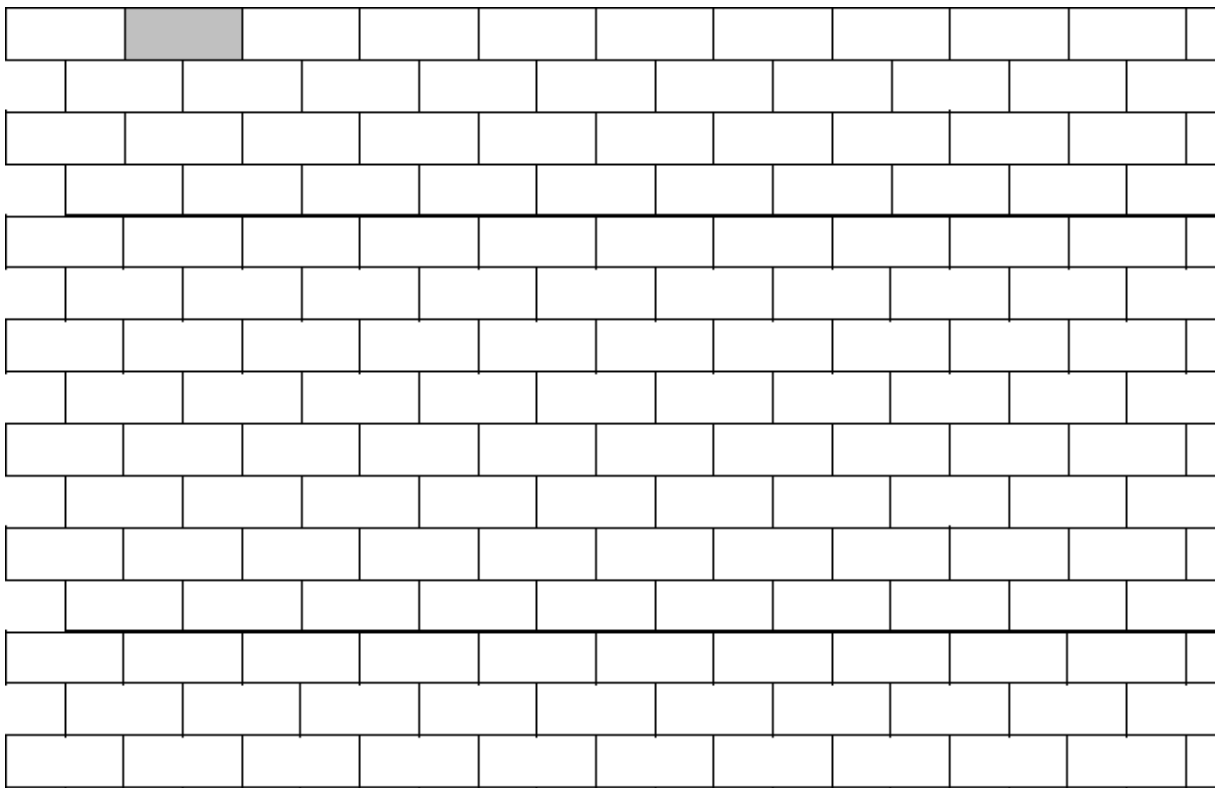


Typ 082

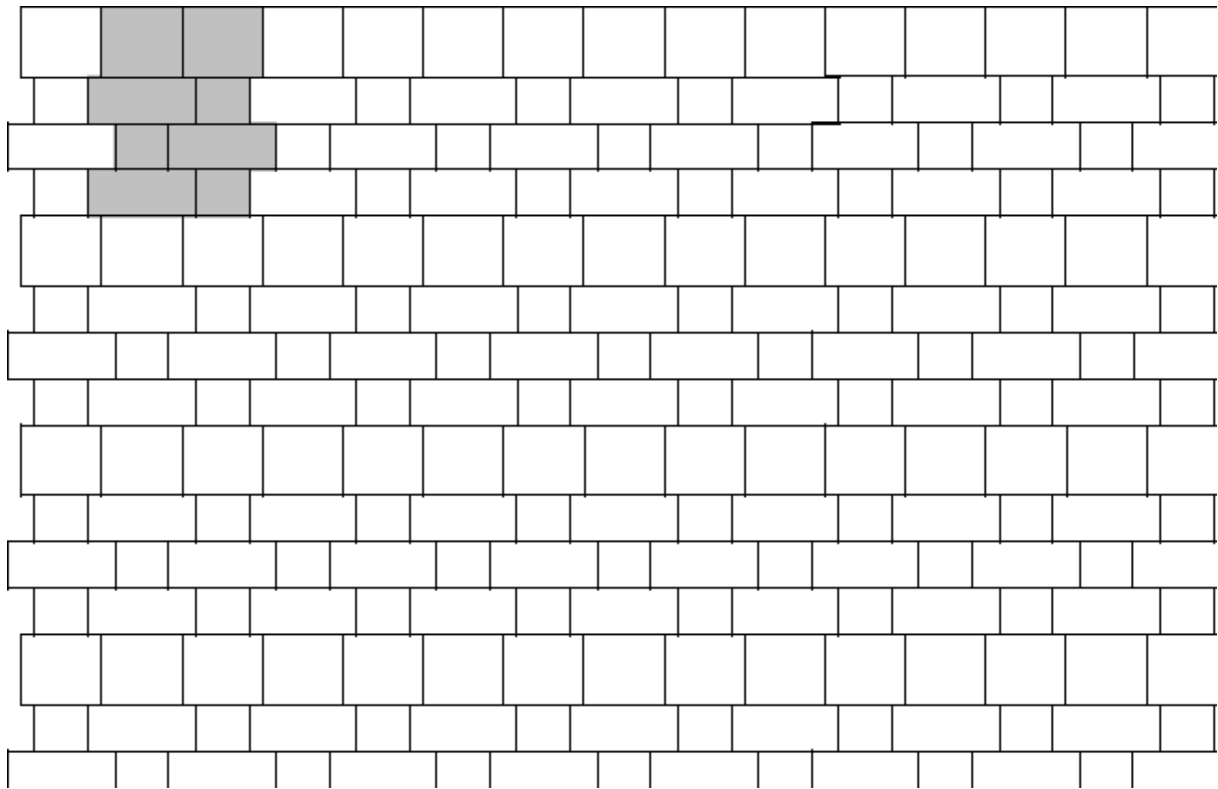

Typ 083

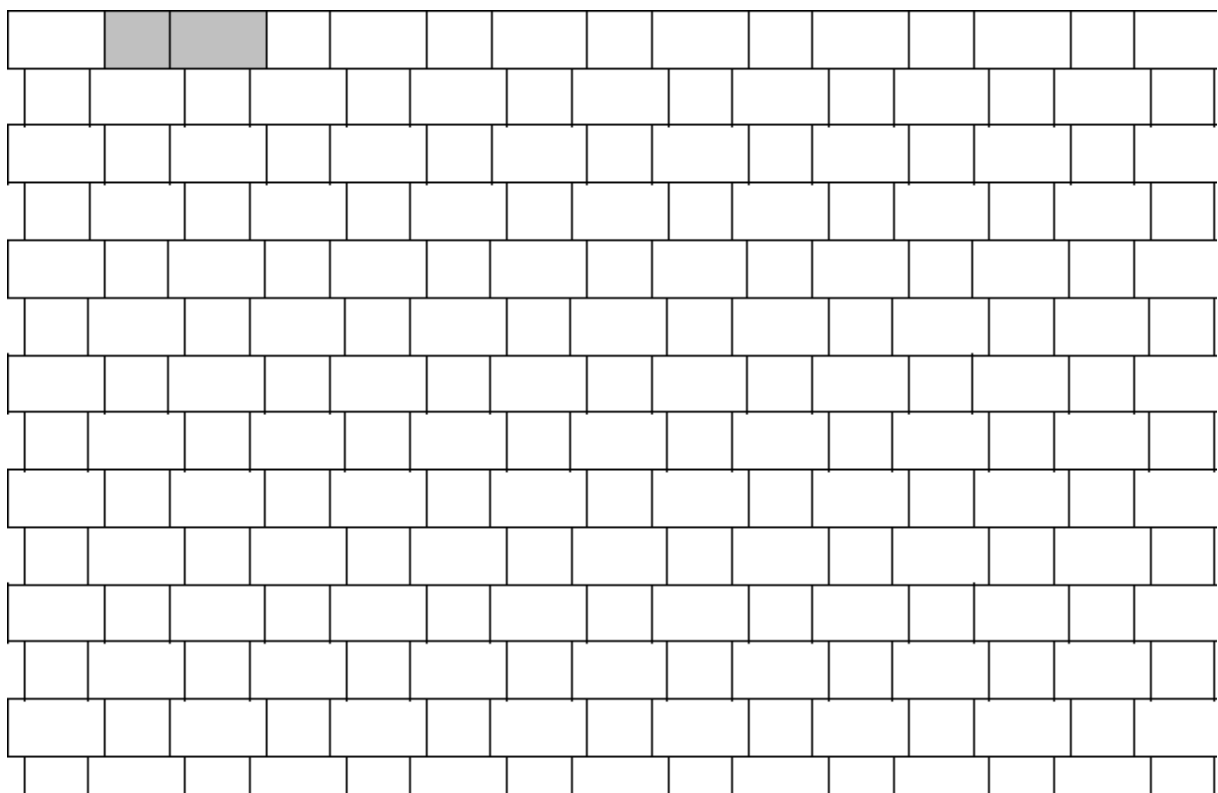


Typ 084

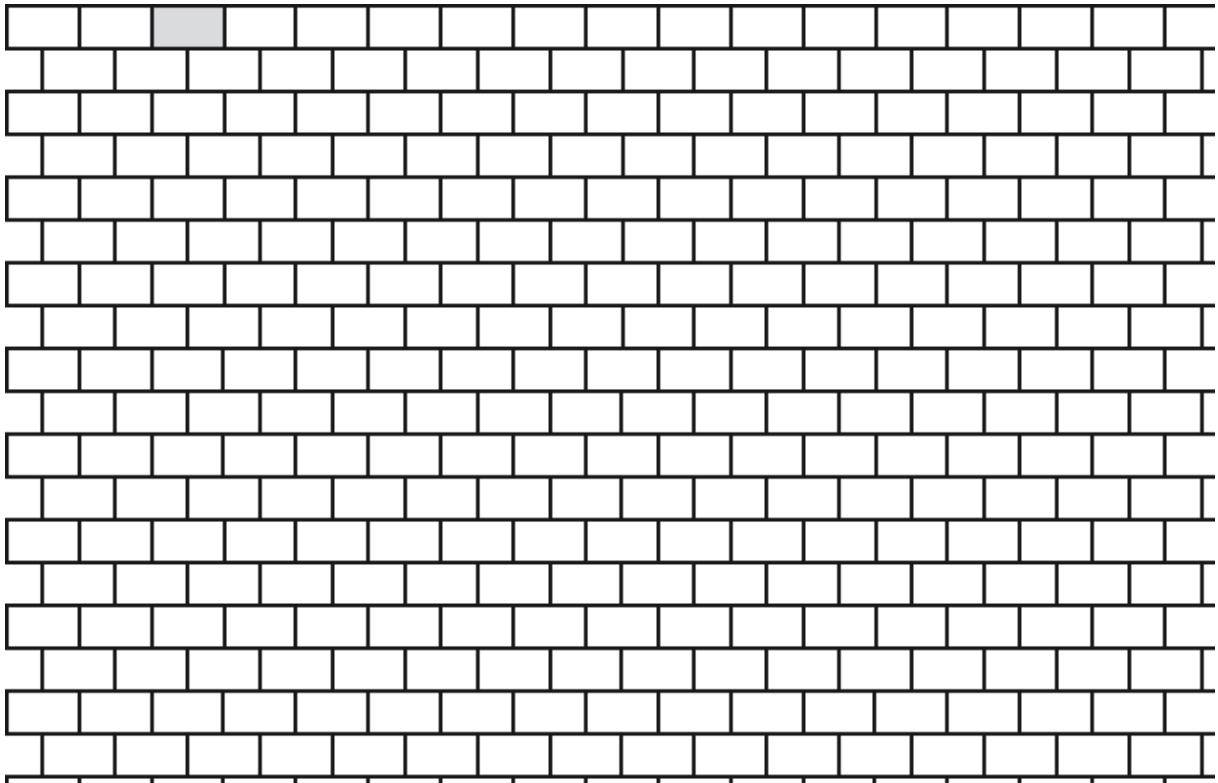


Typ 085


La Linia Aqua Fuga

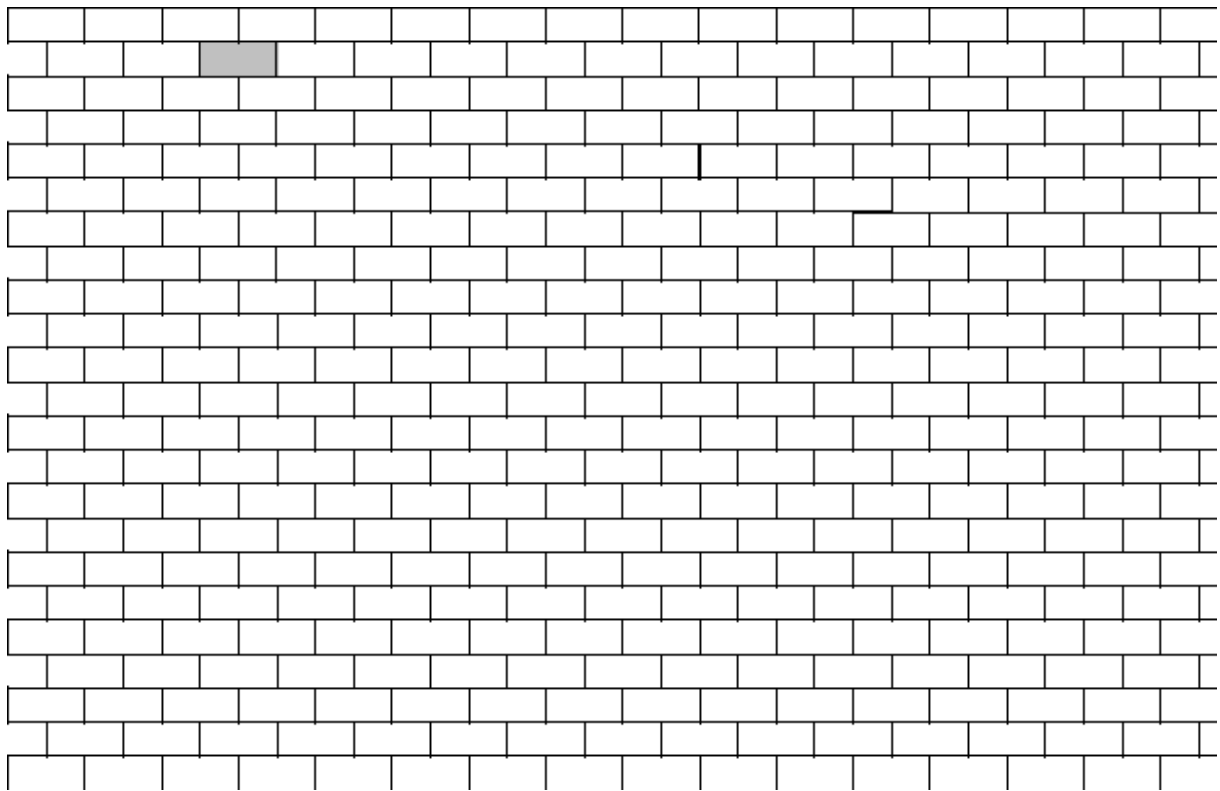


Typ 086

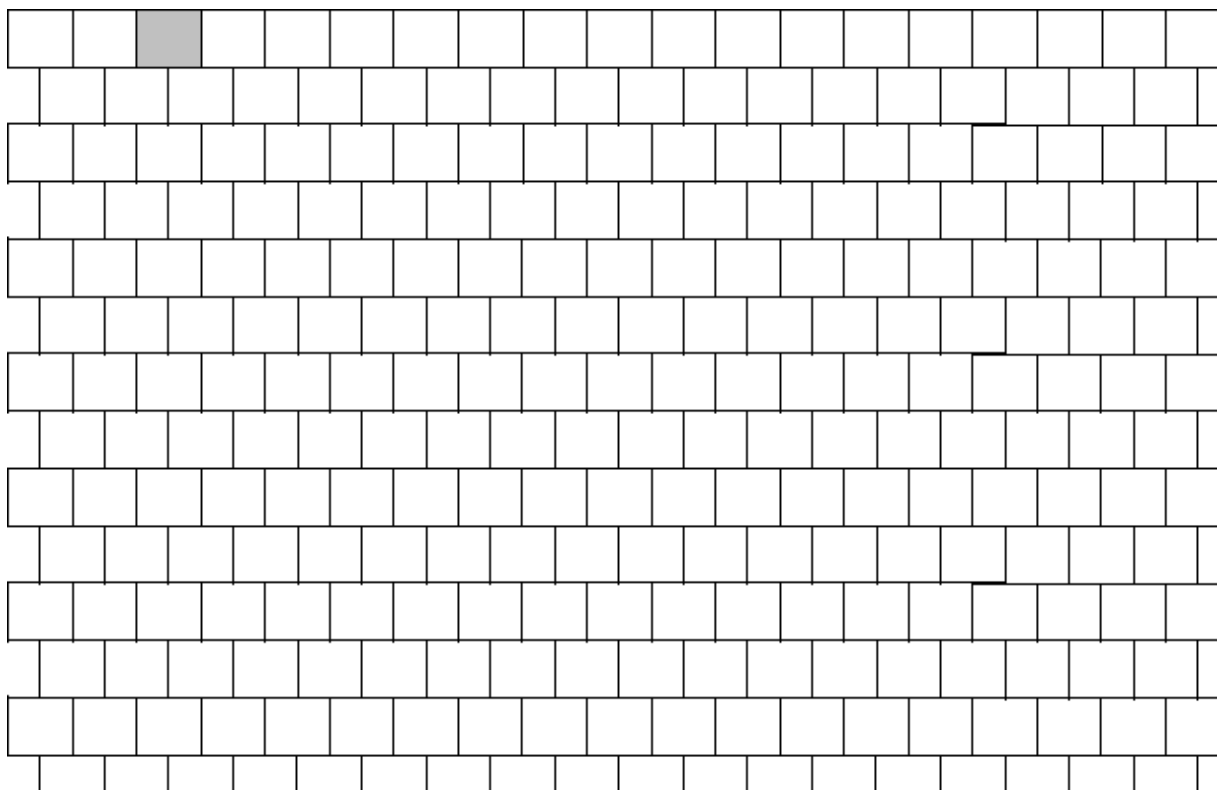


Typ 087

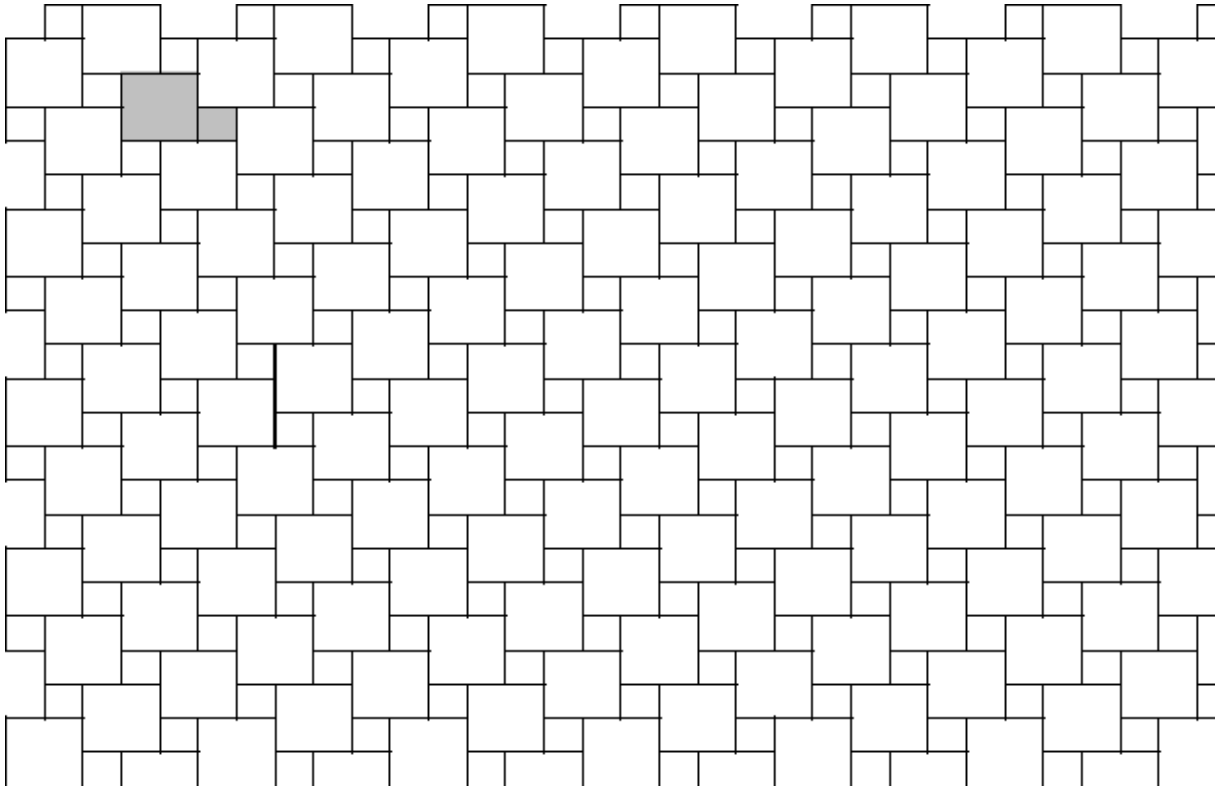


Typ 088

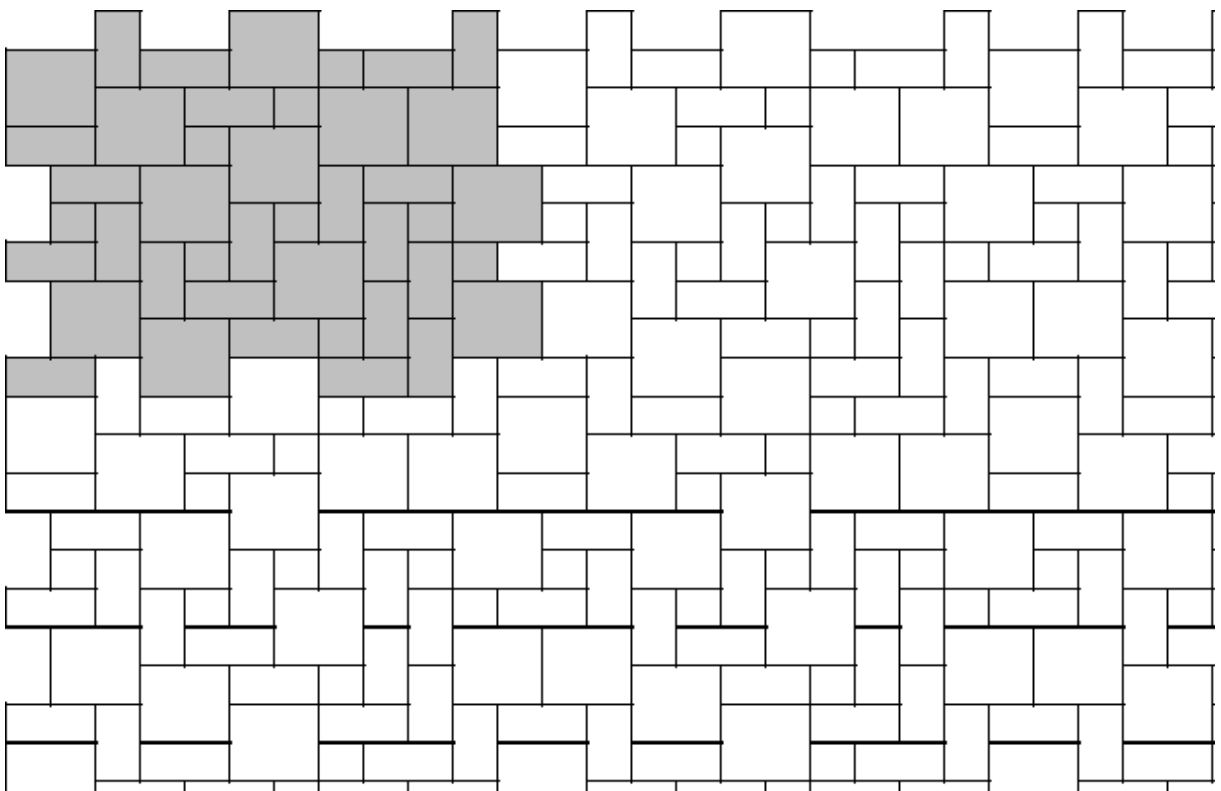

Typ 089

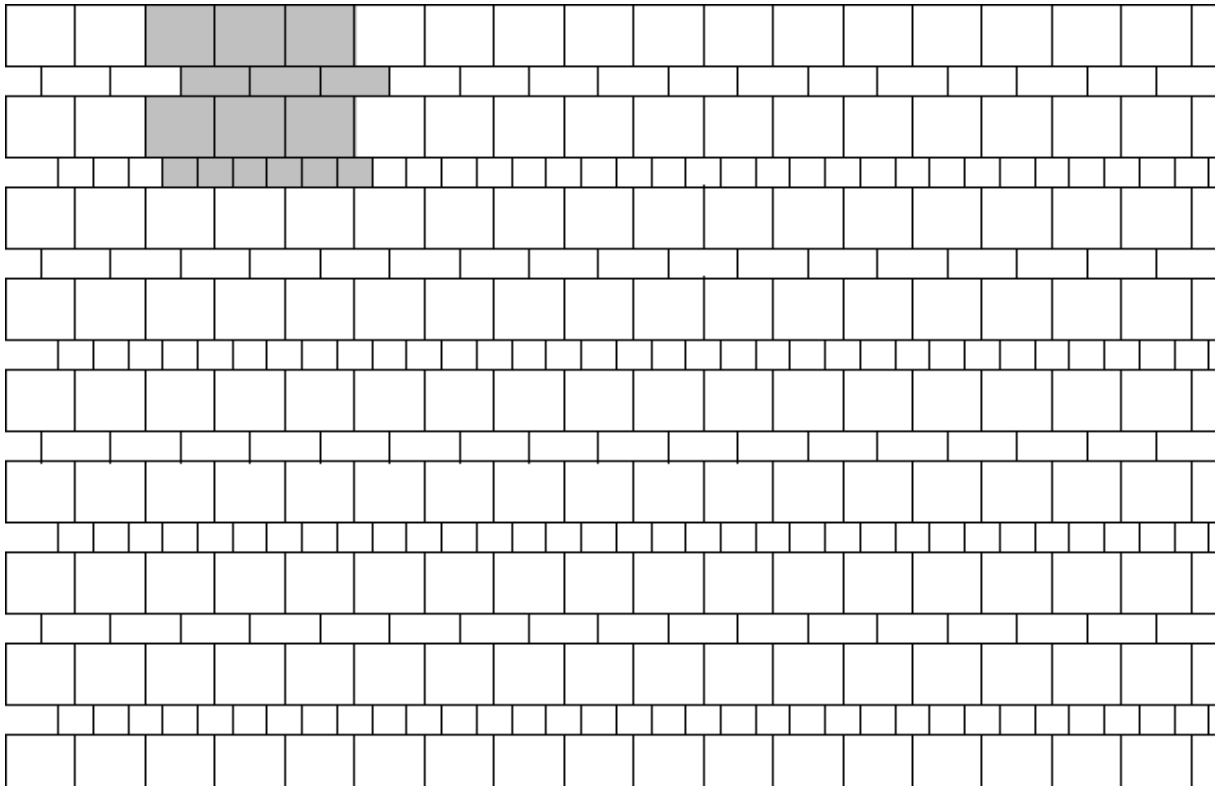


Typ 090

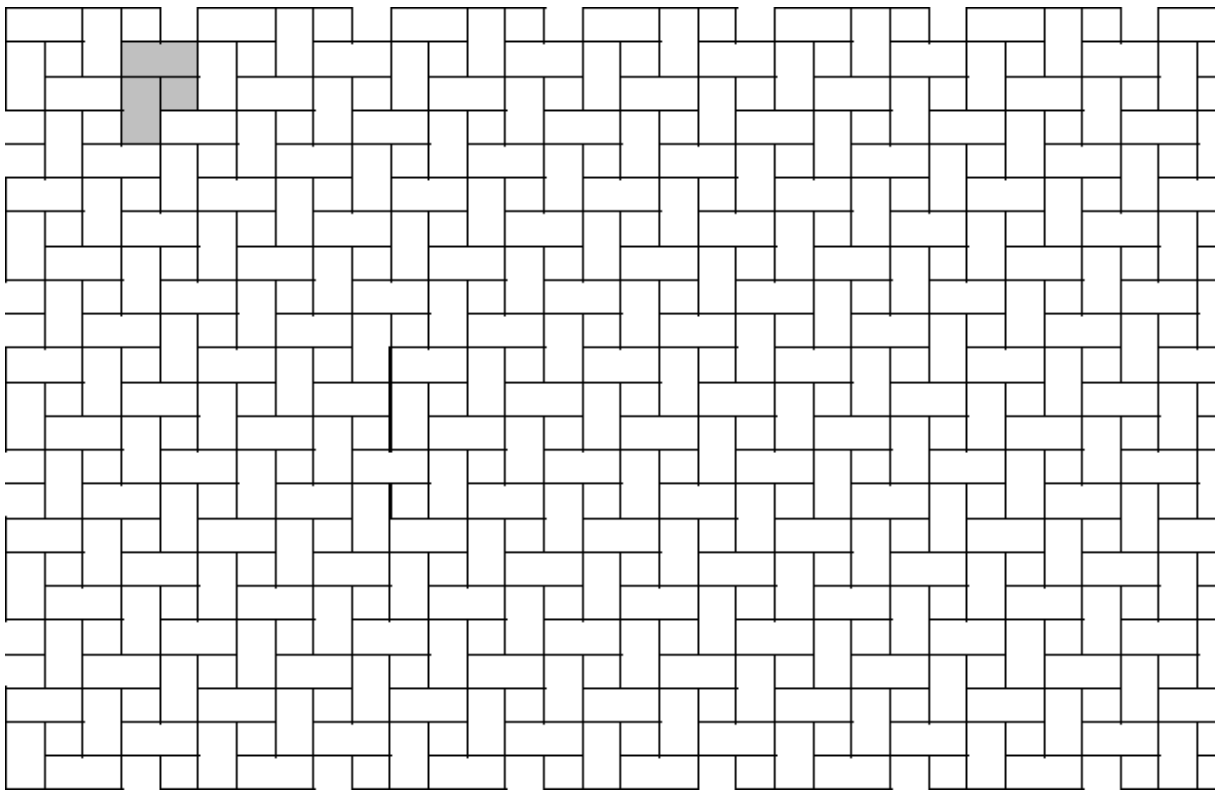


Typ 091


La Linia Aqua Prima

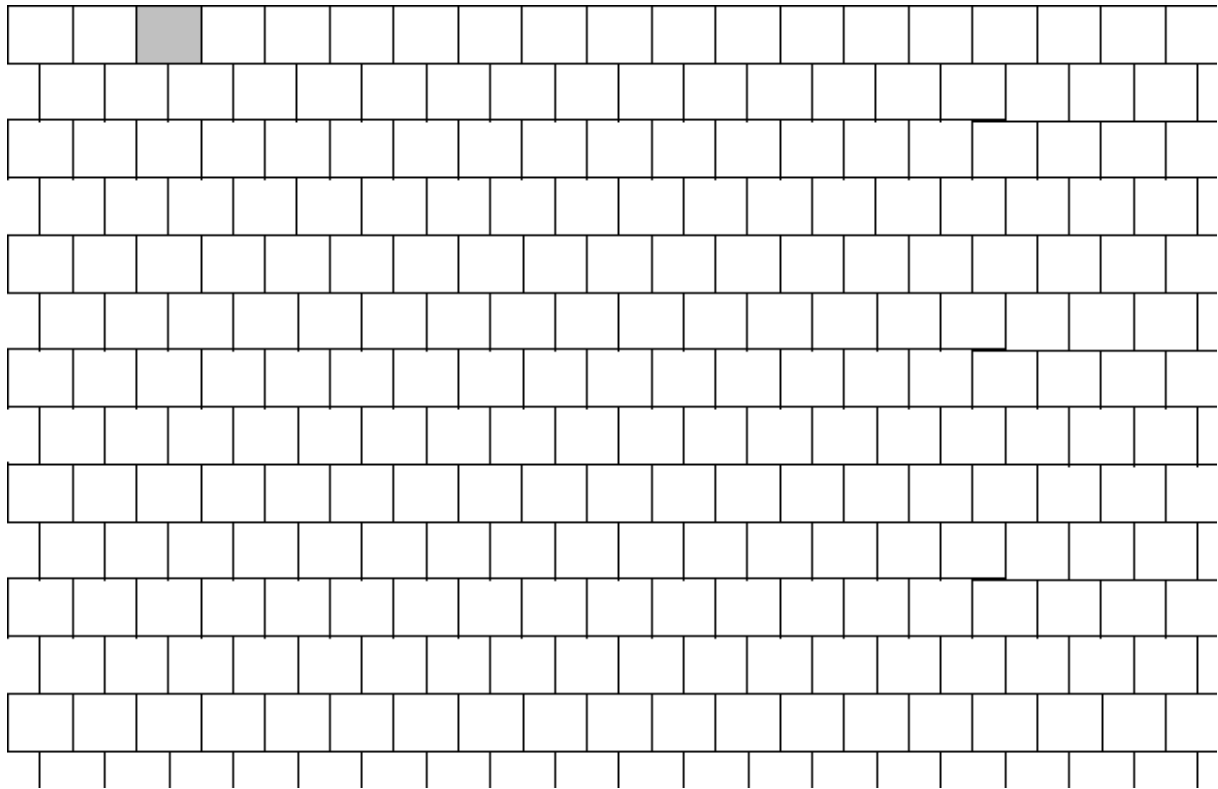

Typ 092

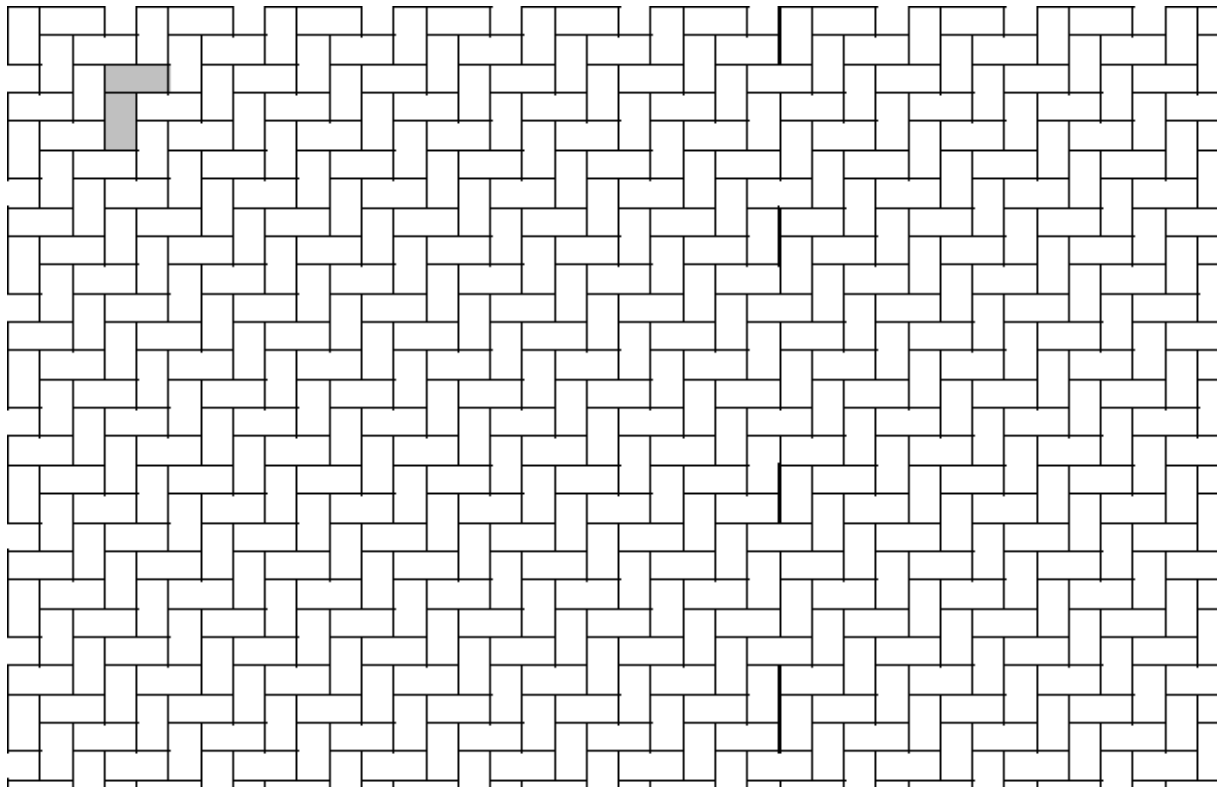


Typ 093

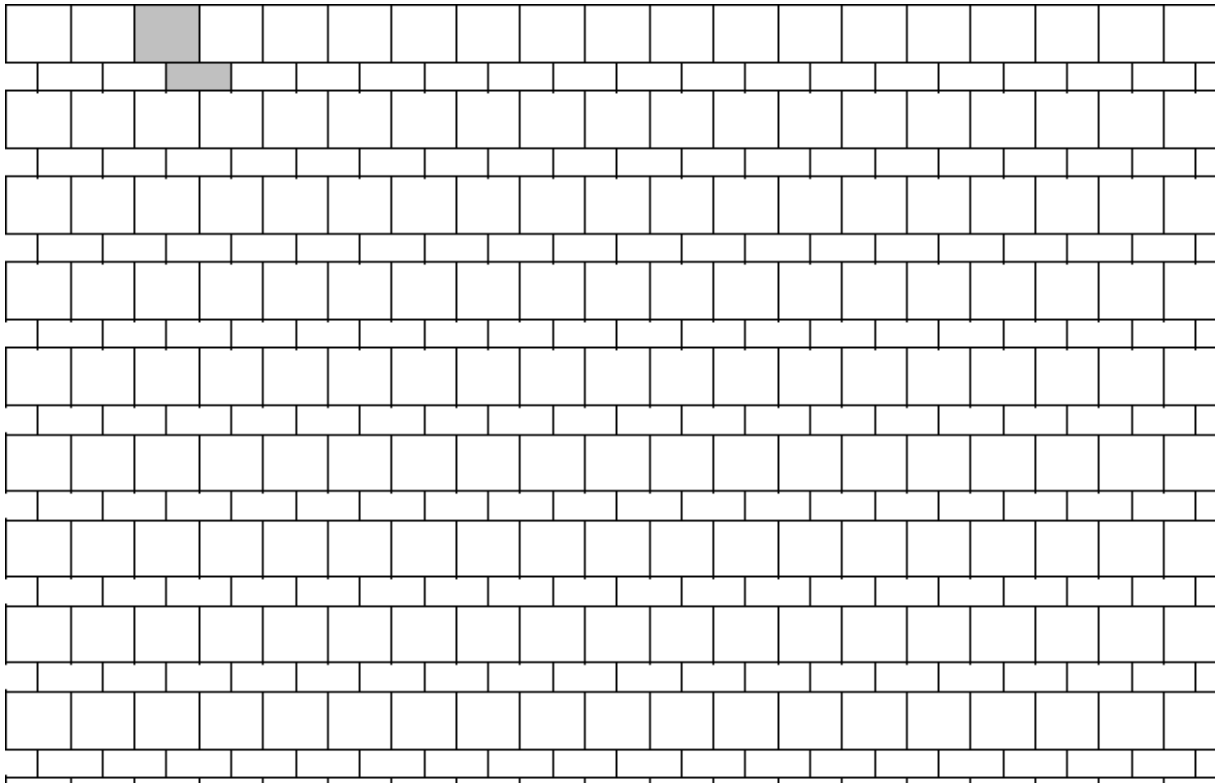


Typ 094


La Linia Öko Kombi

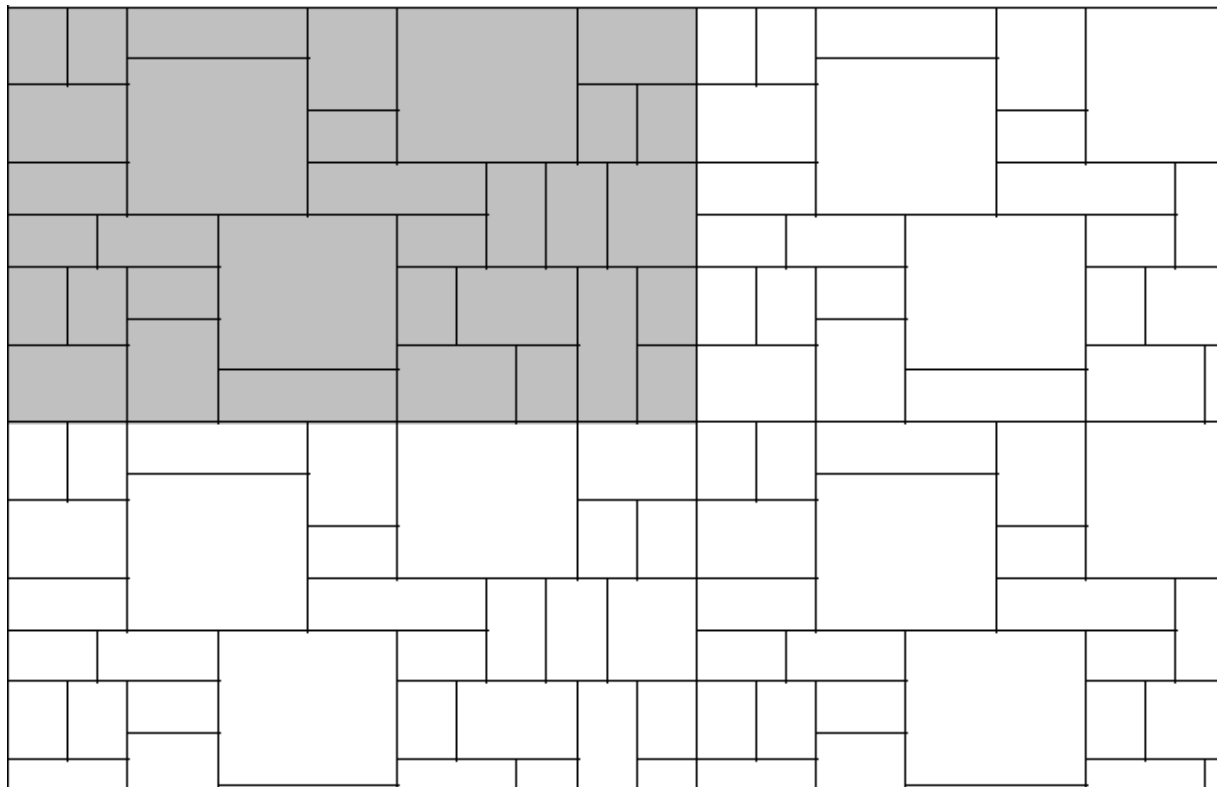


Typ 095

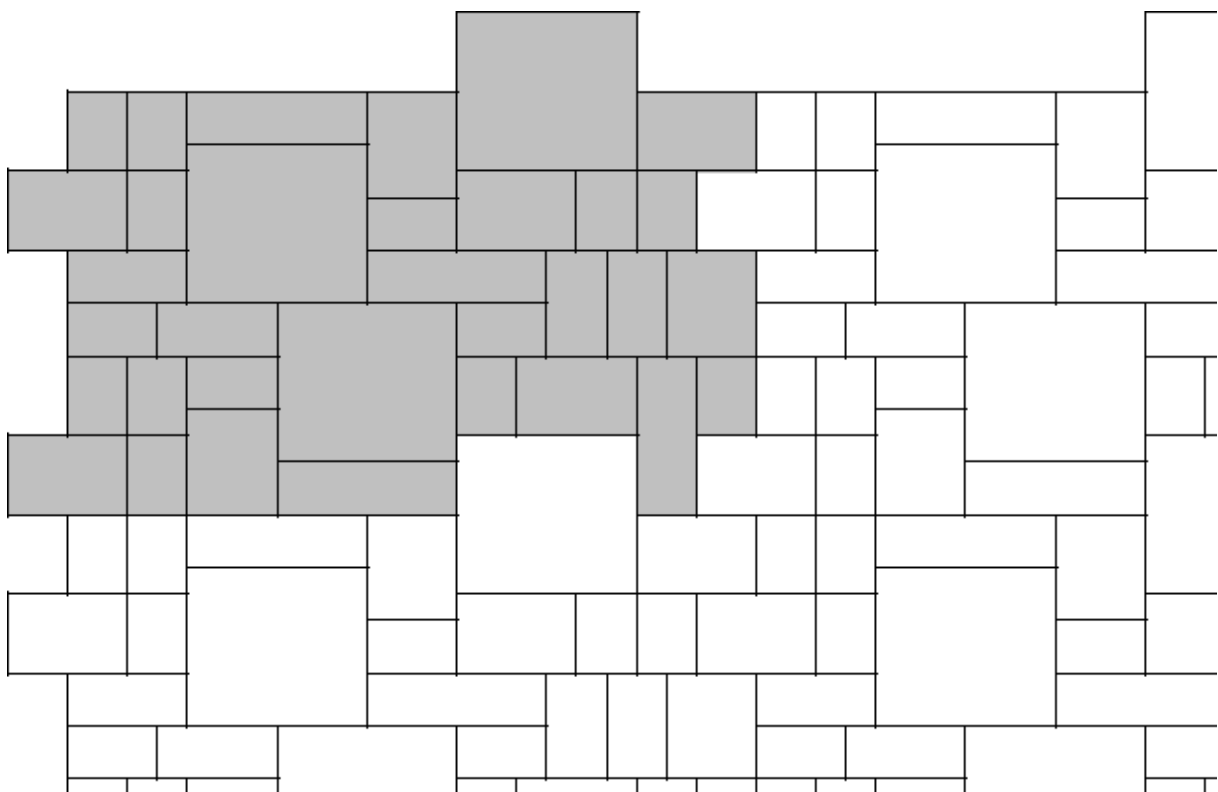

Typ 096

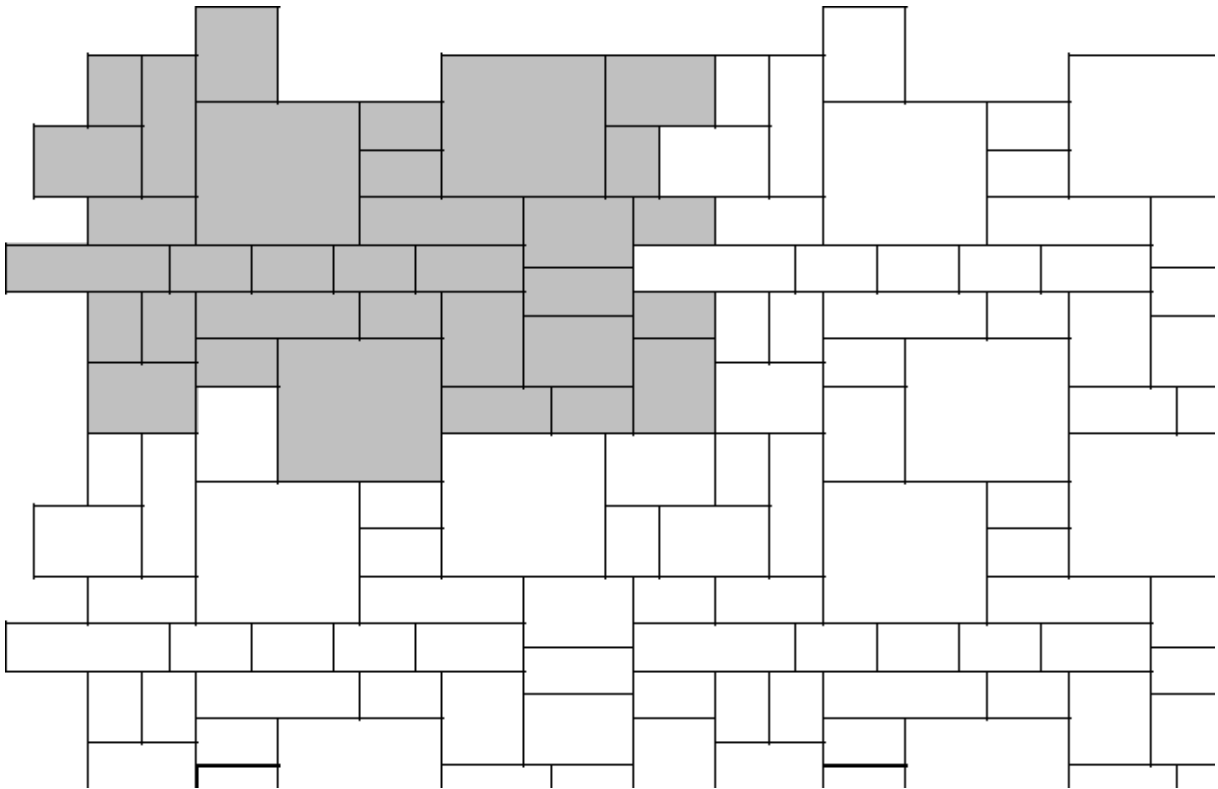


Typ 097

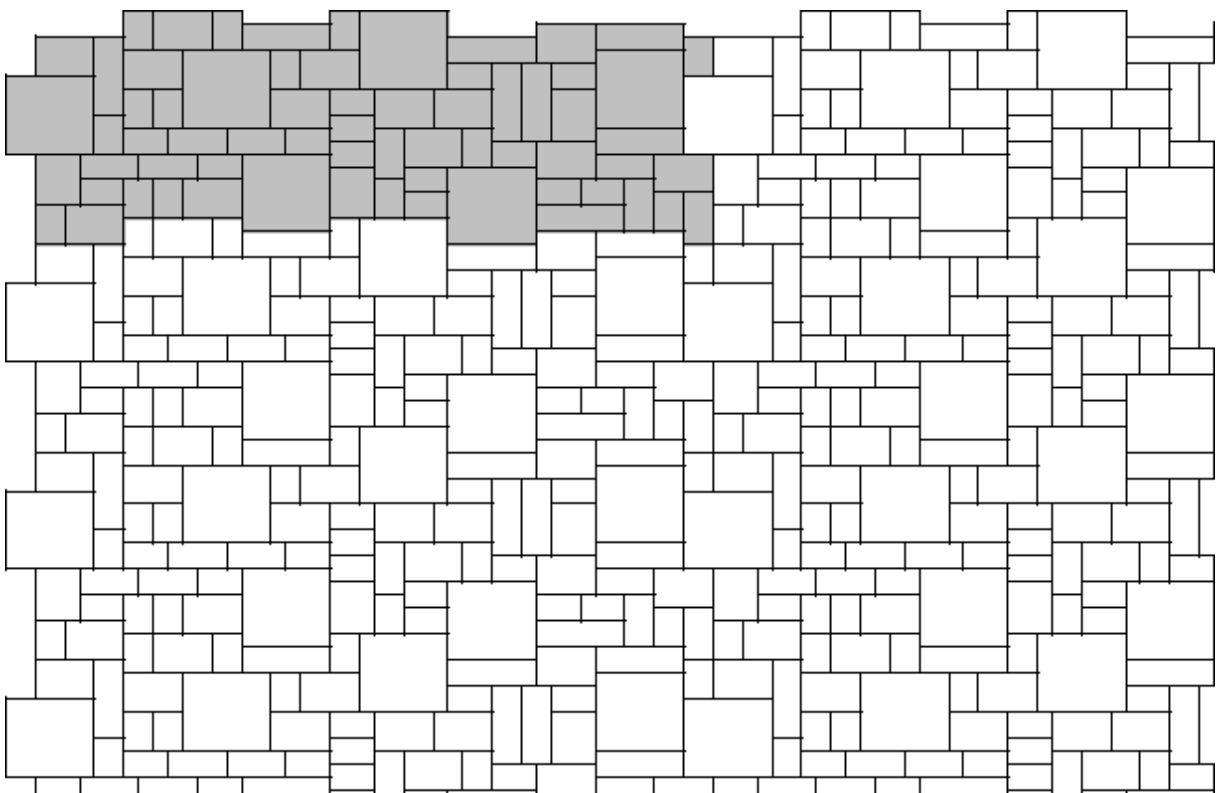


Typ 098


Pastella

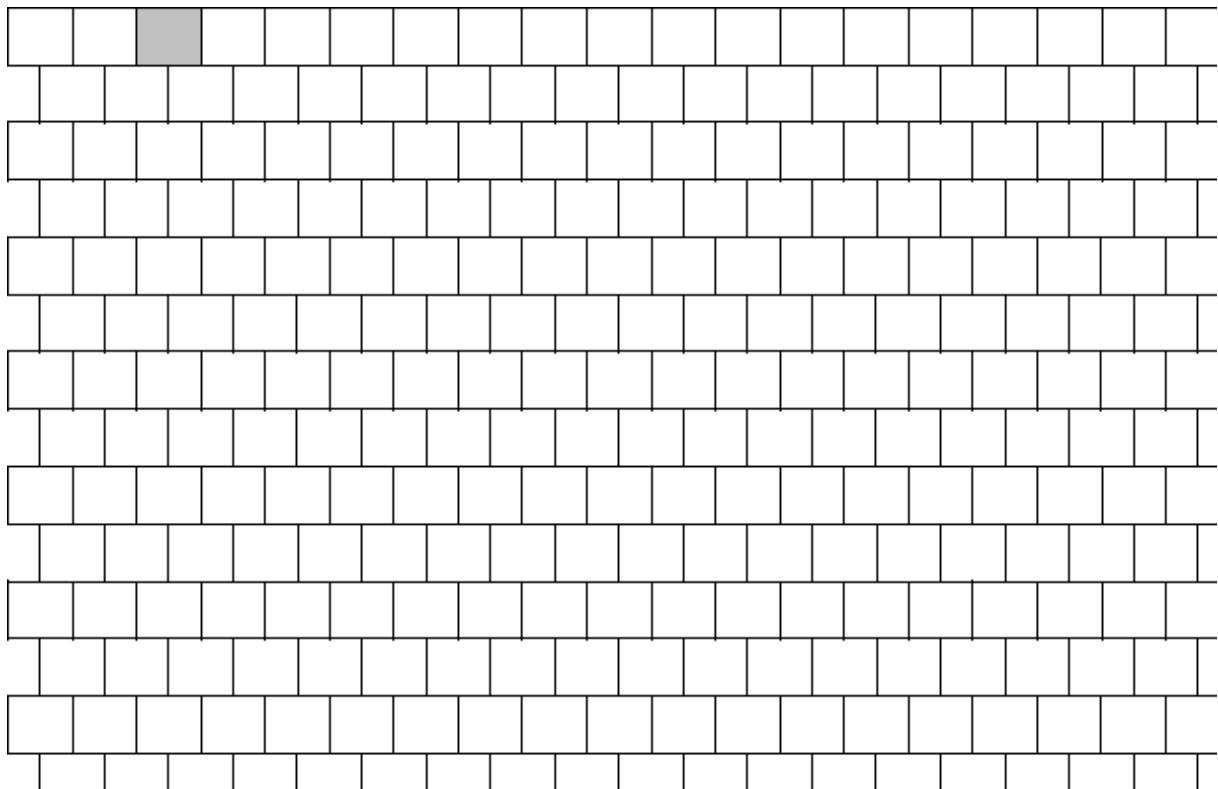


Typ 099

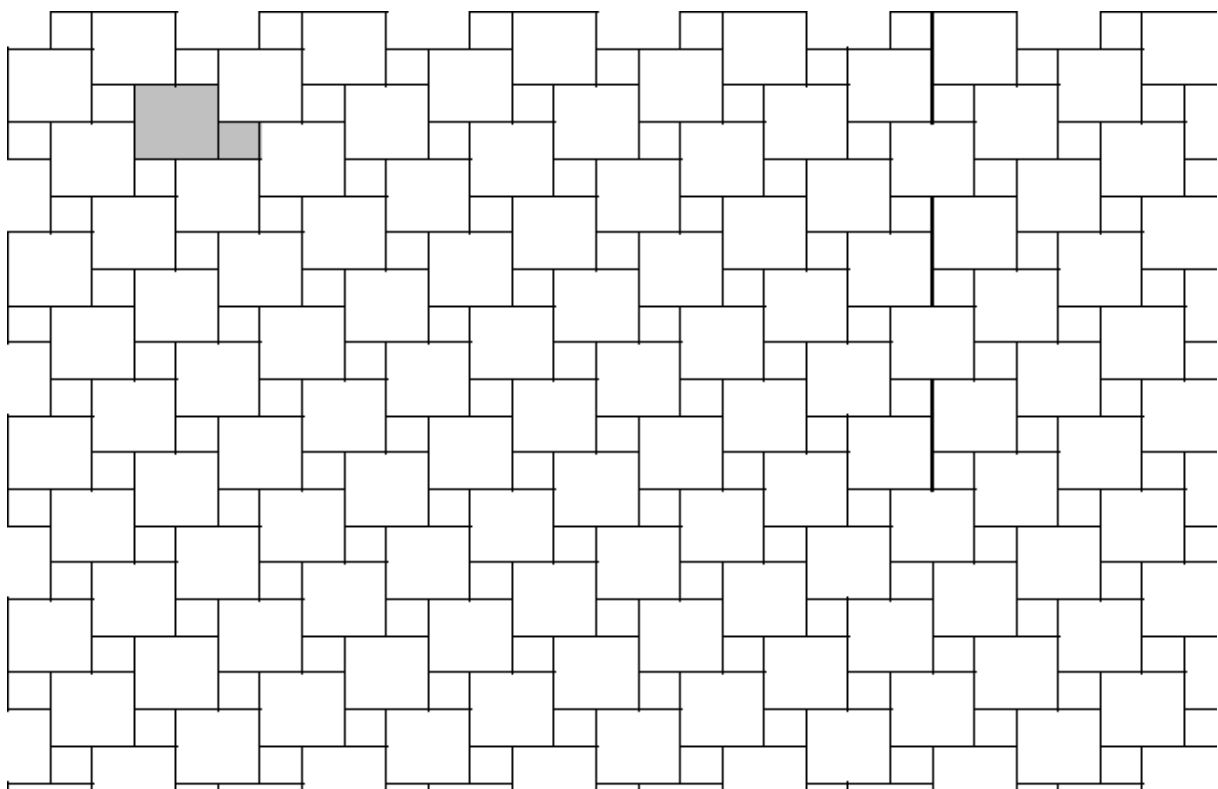


Typ 100

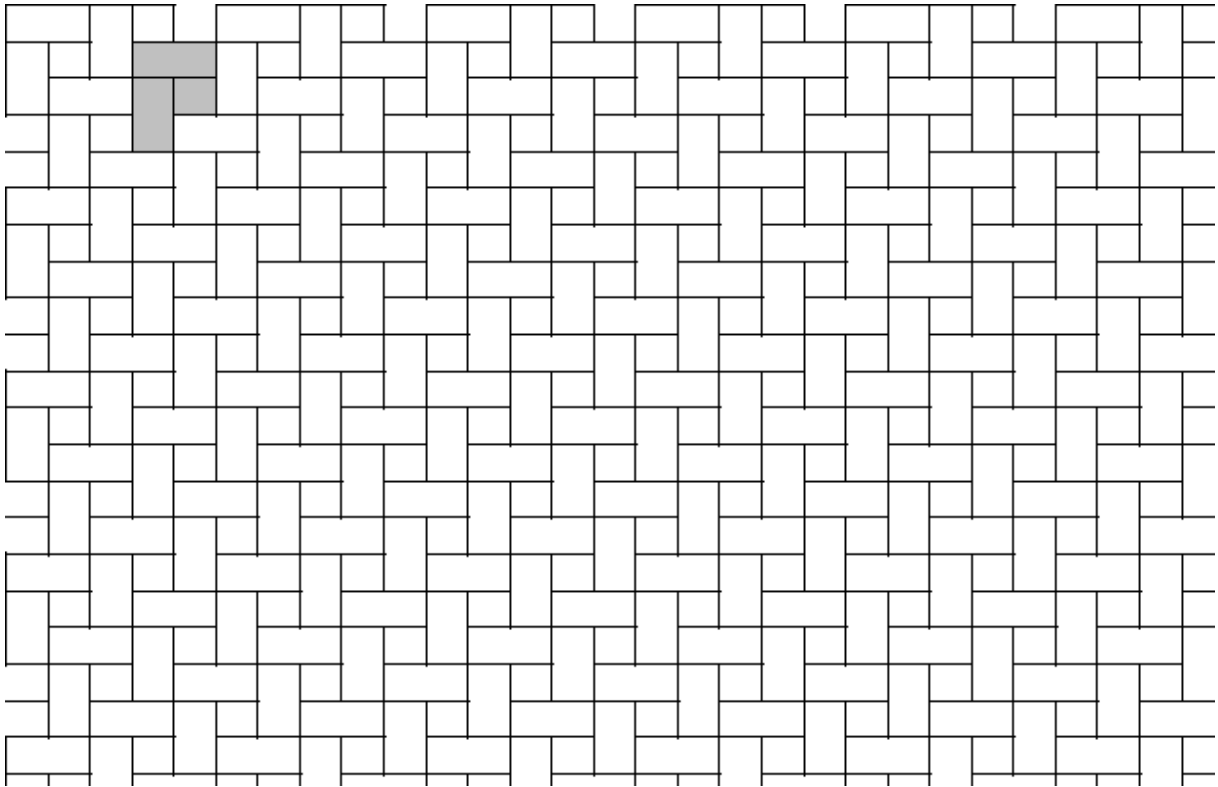


Typ 101

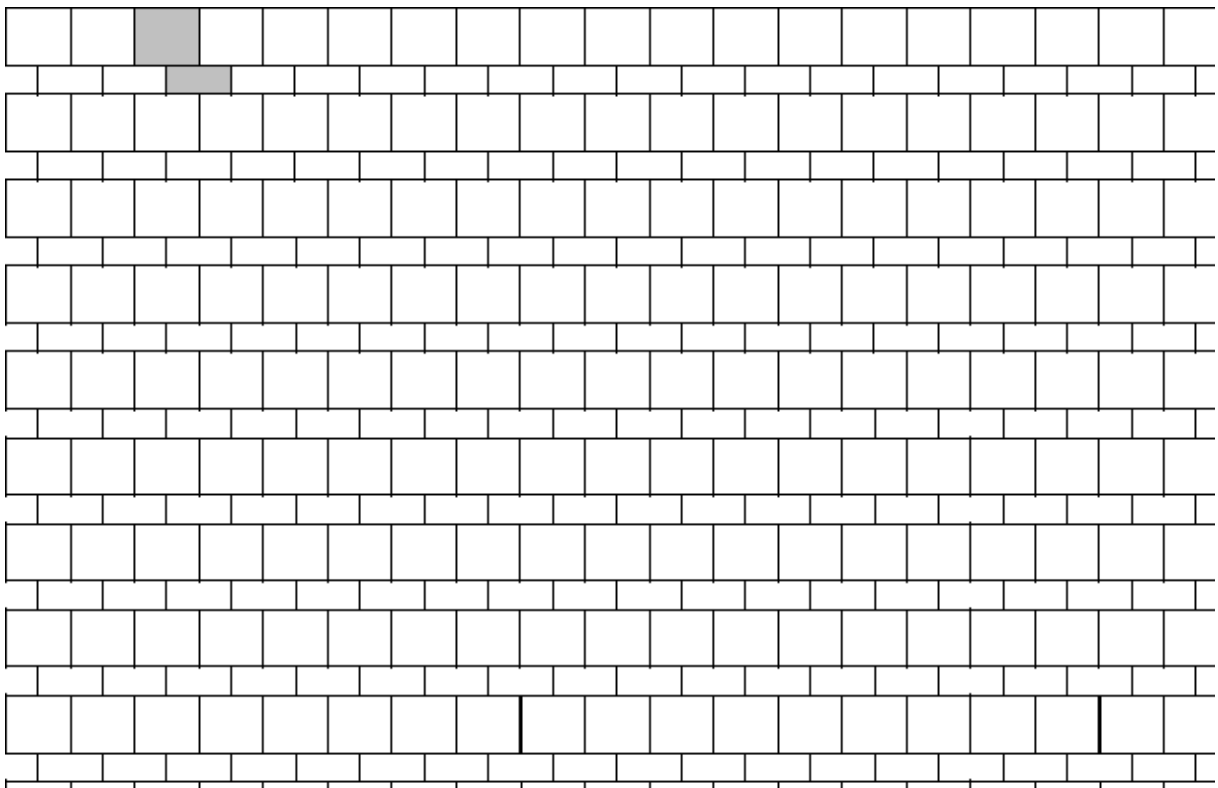

Typ 102

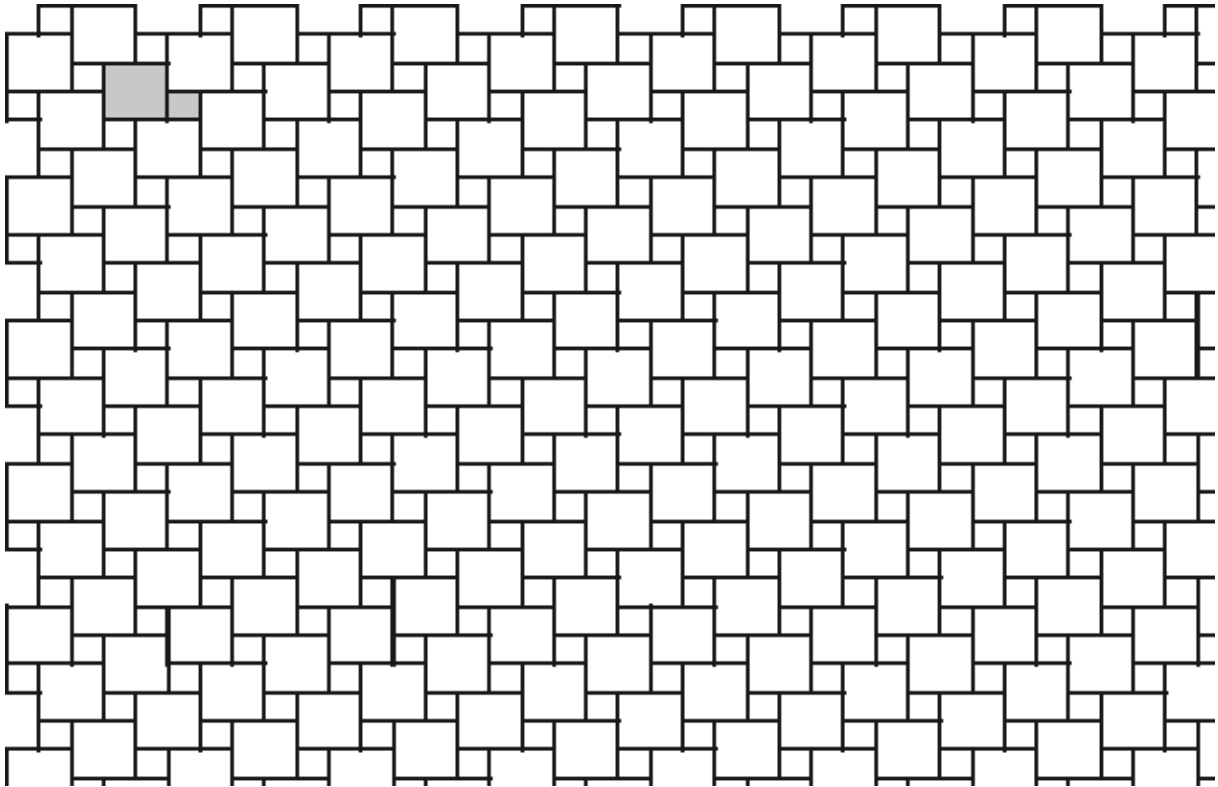


Typ 103

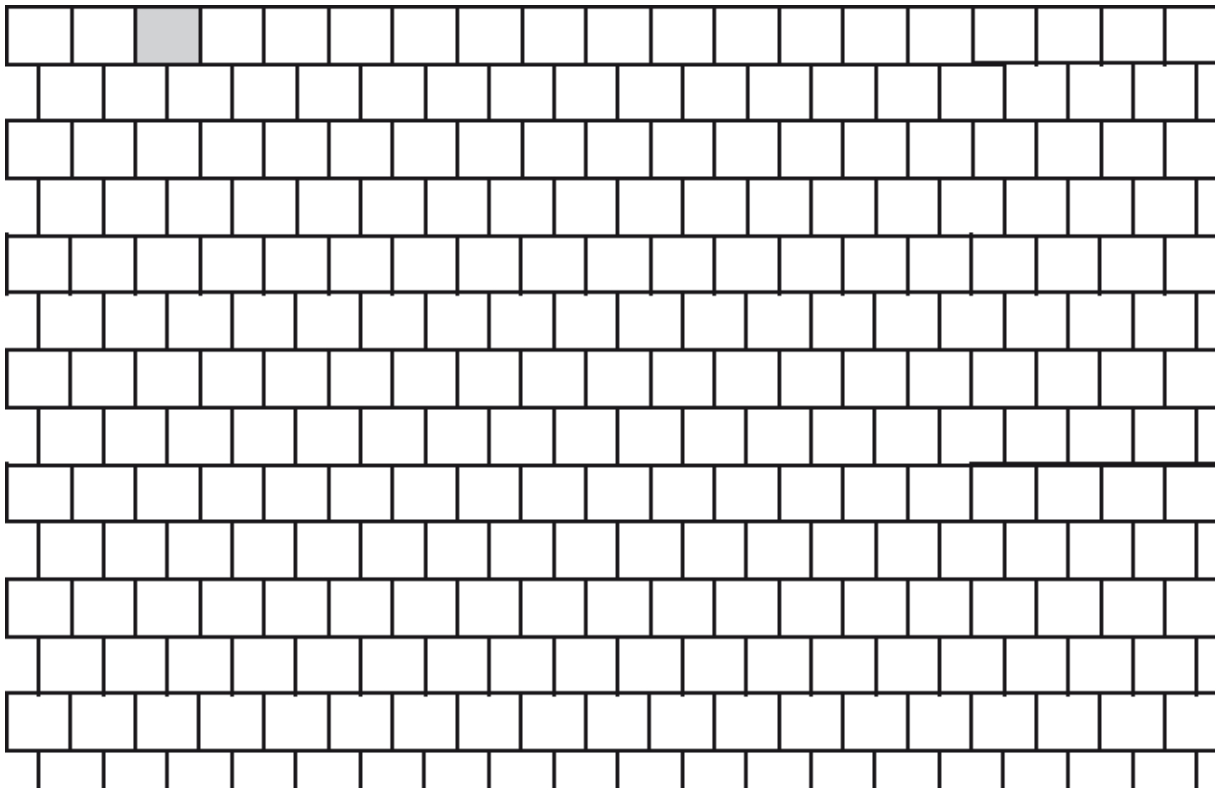


Typ 104


Safelock

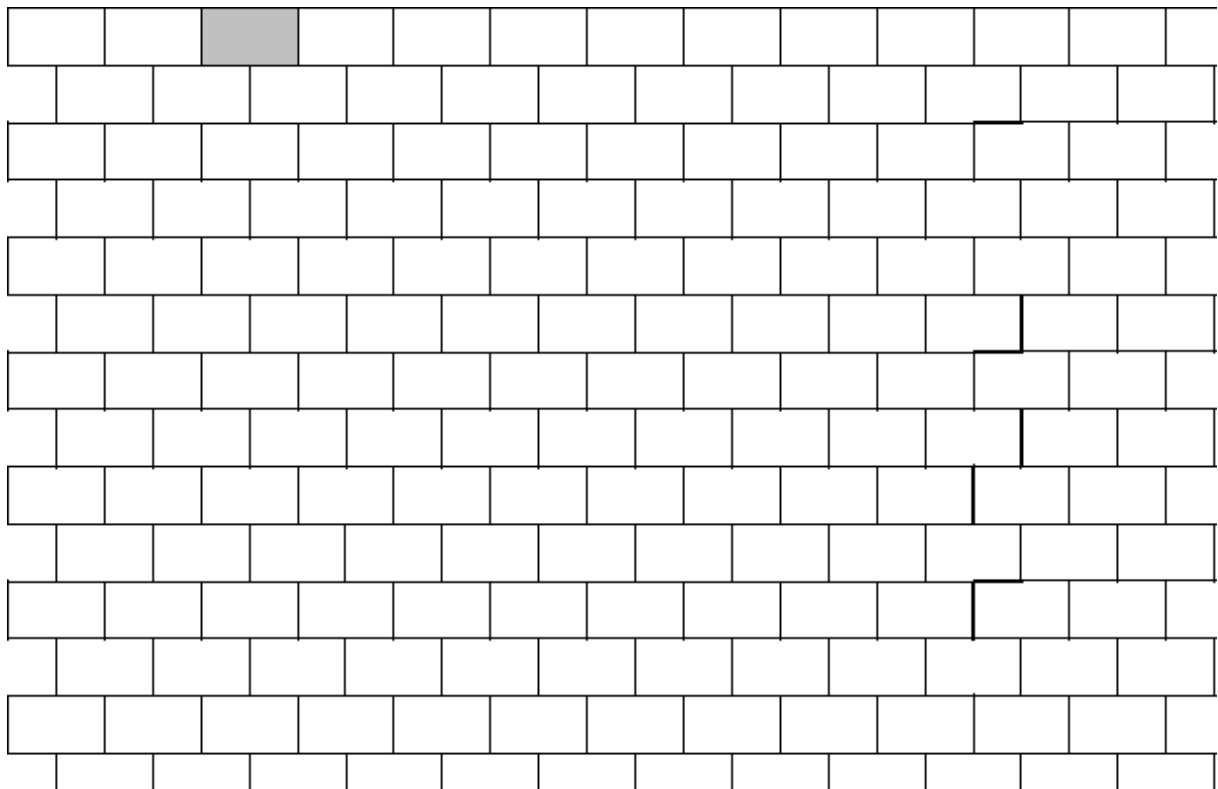


Typ 105

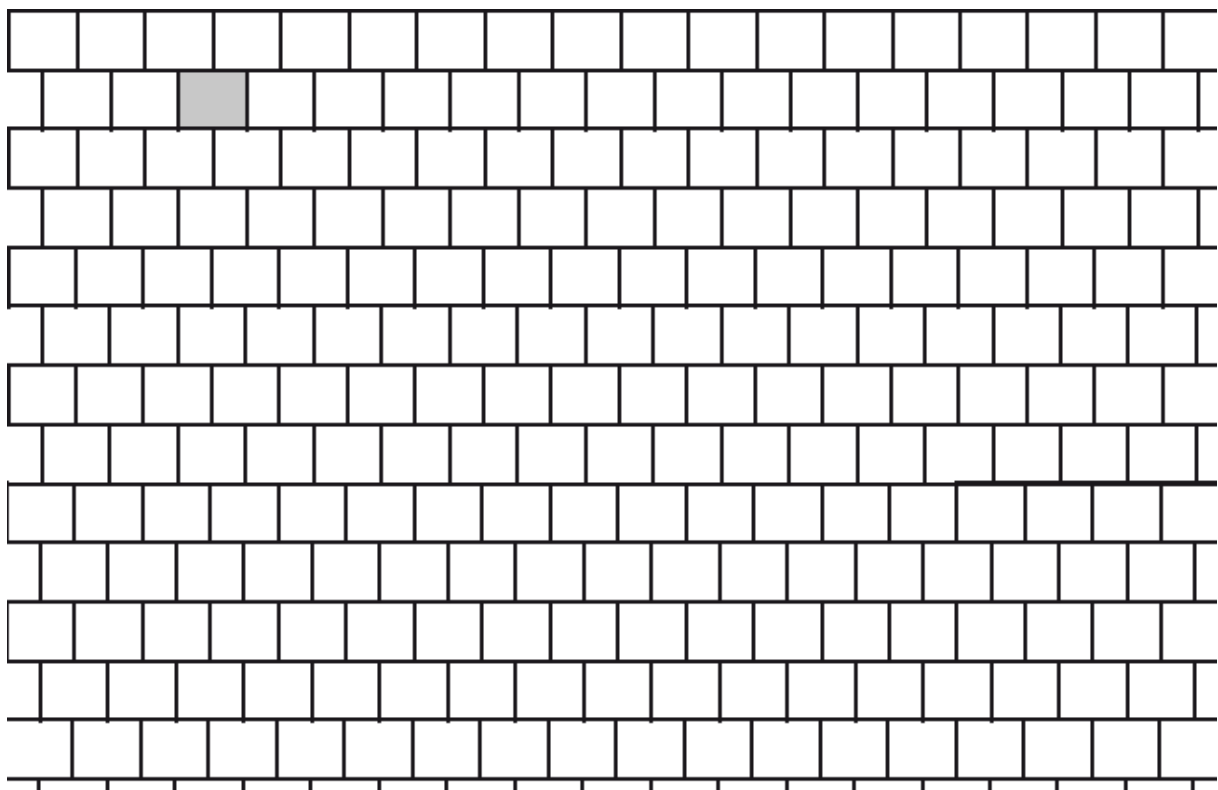


Typ 106

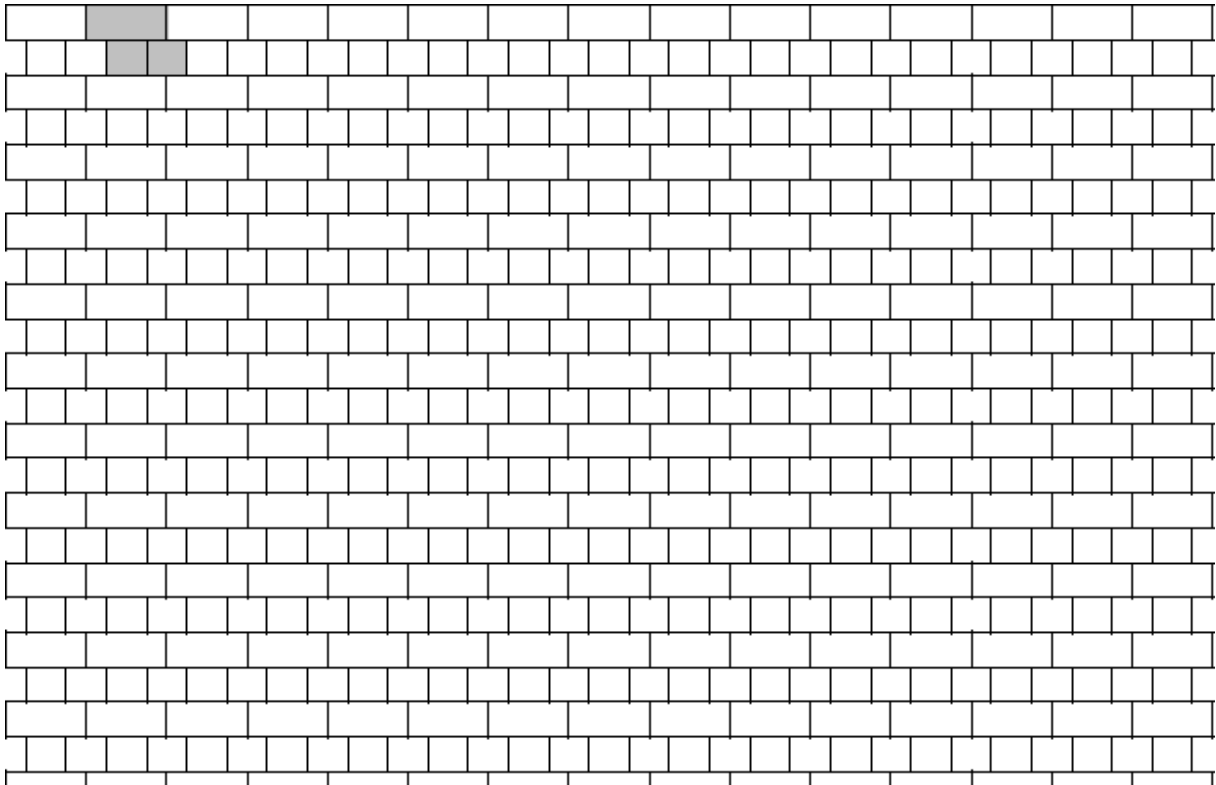


Typ 107

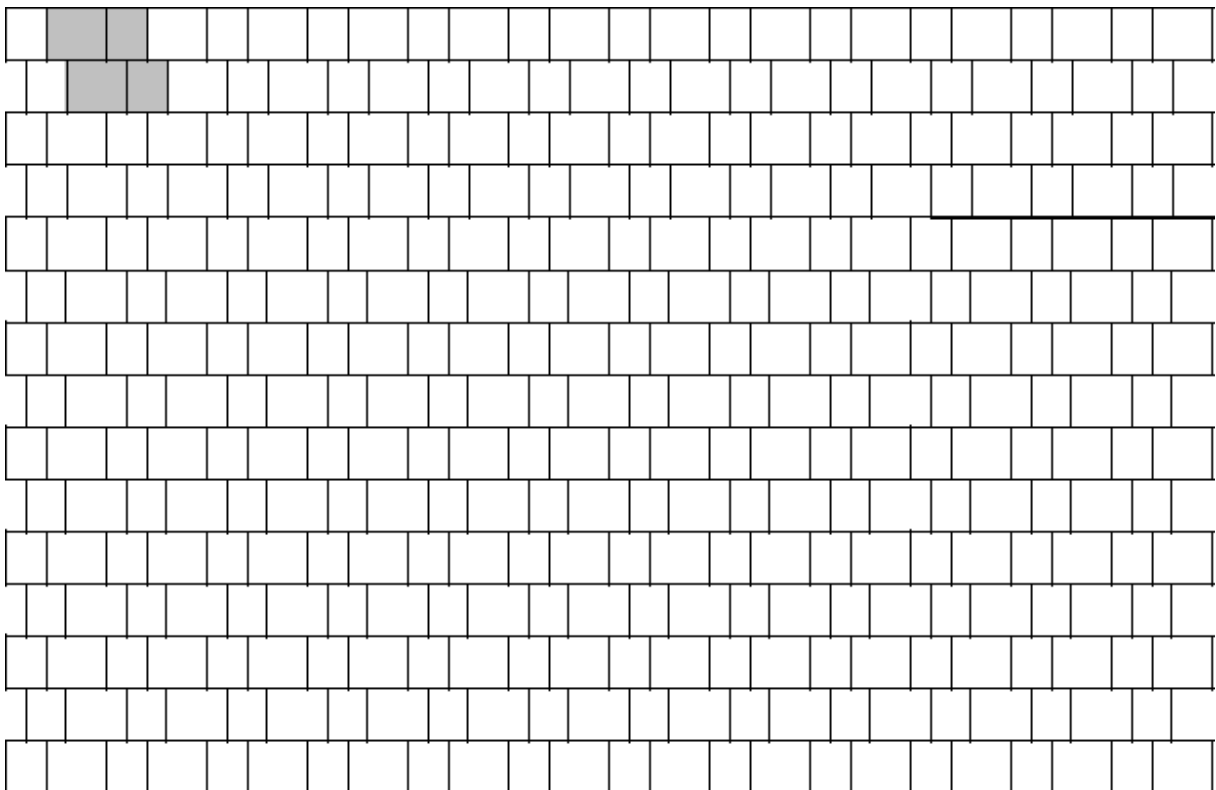


Typ 108

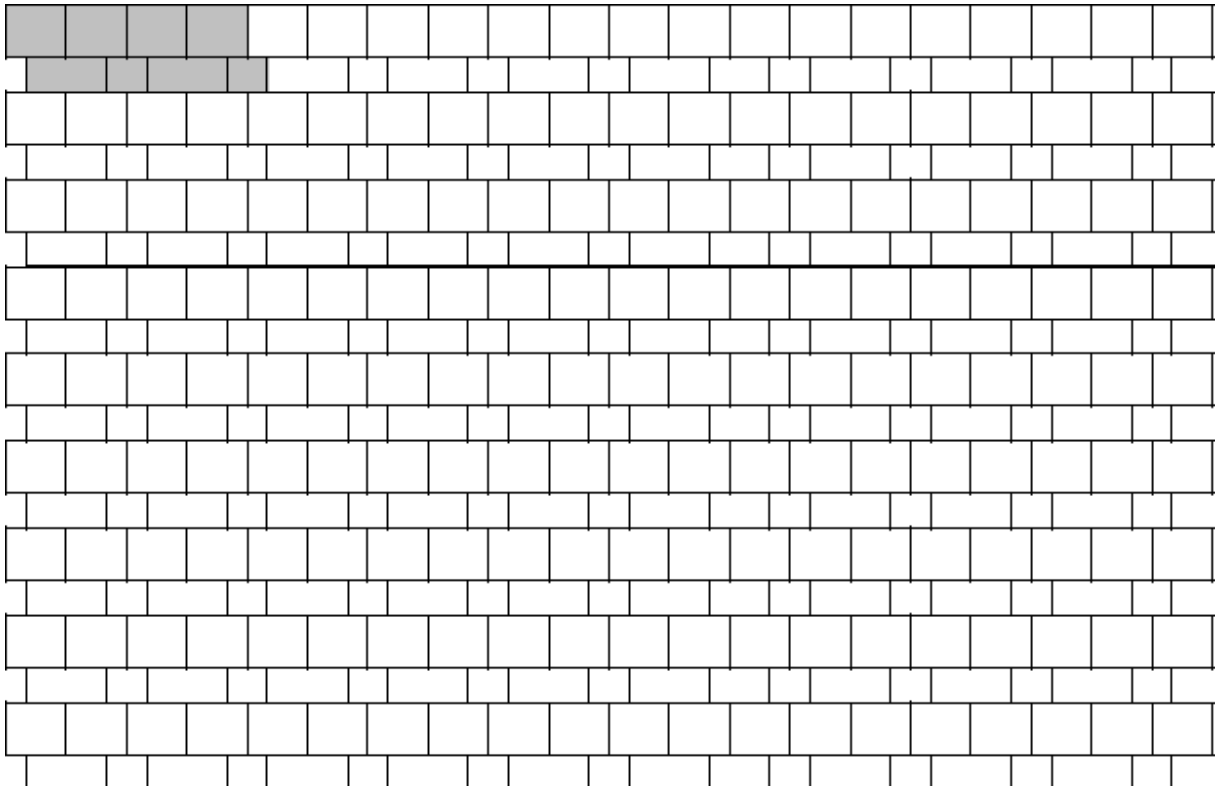


Typ 109

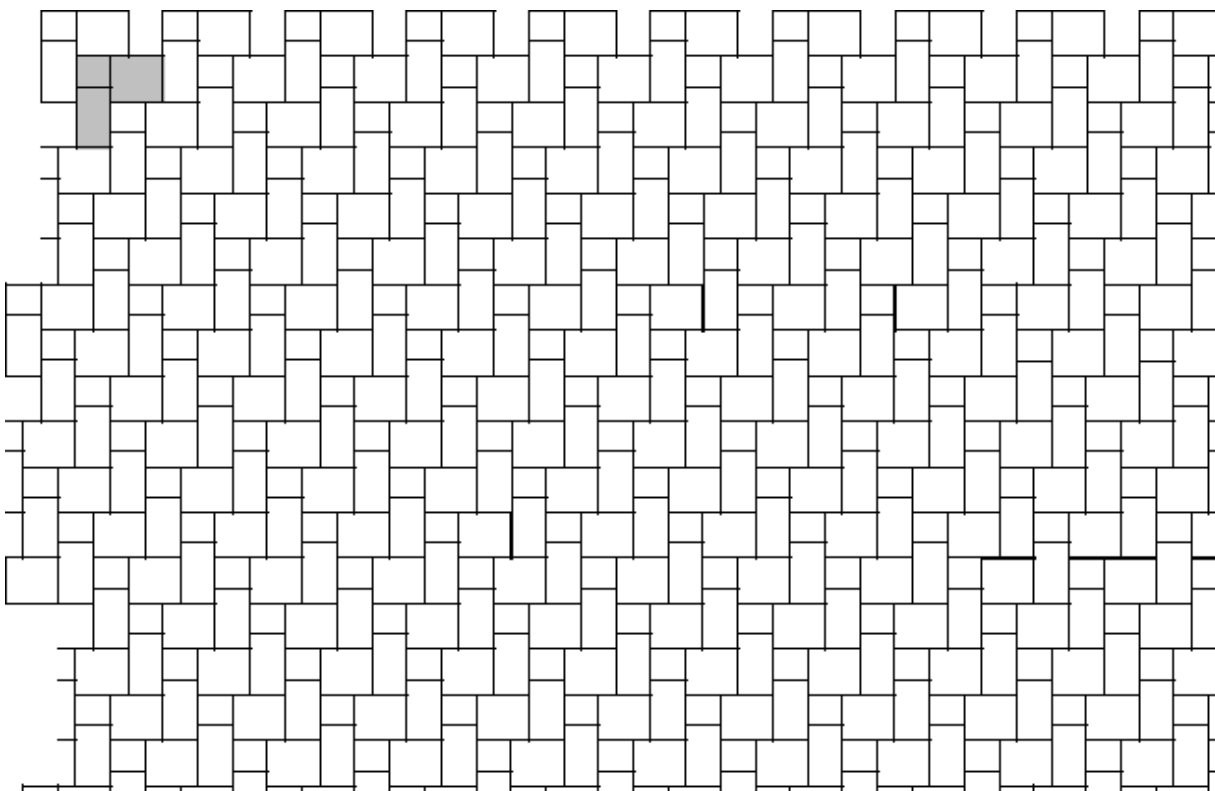


Typ 110

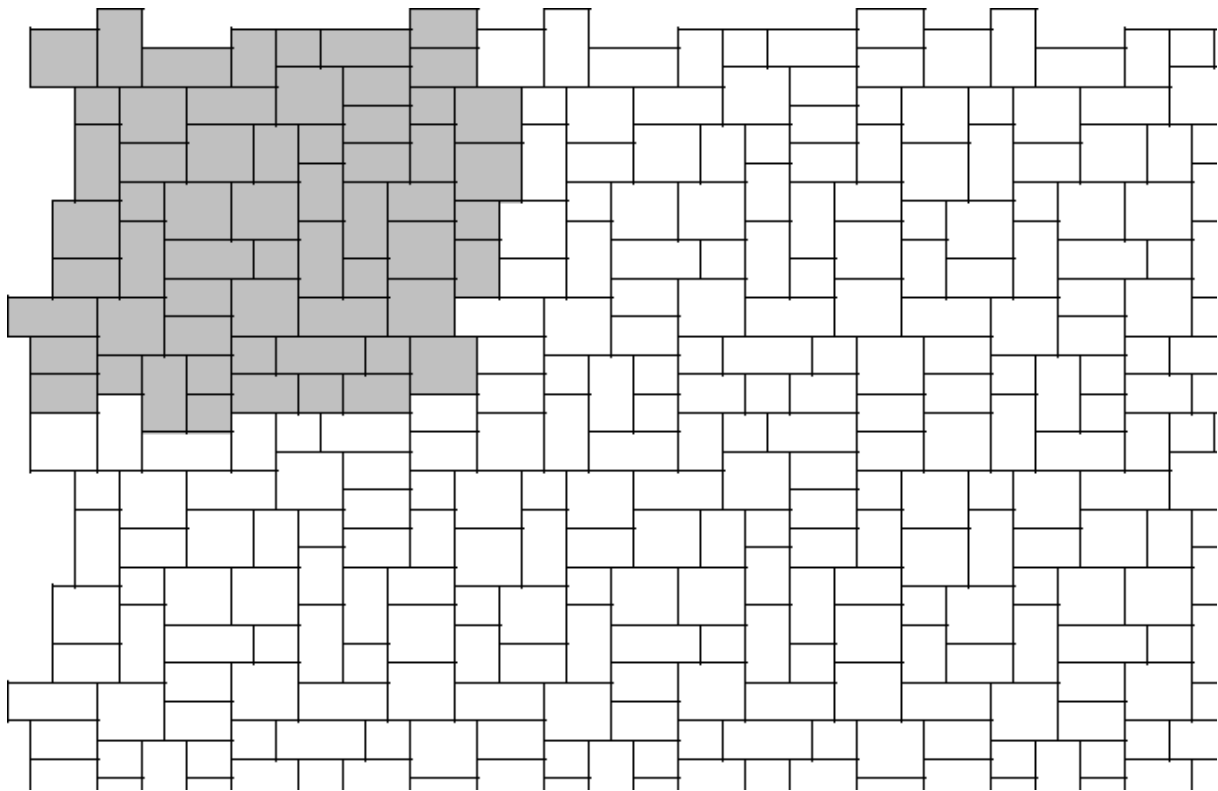


Typ 111

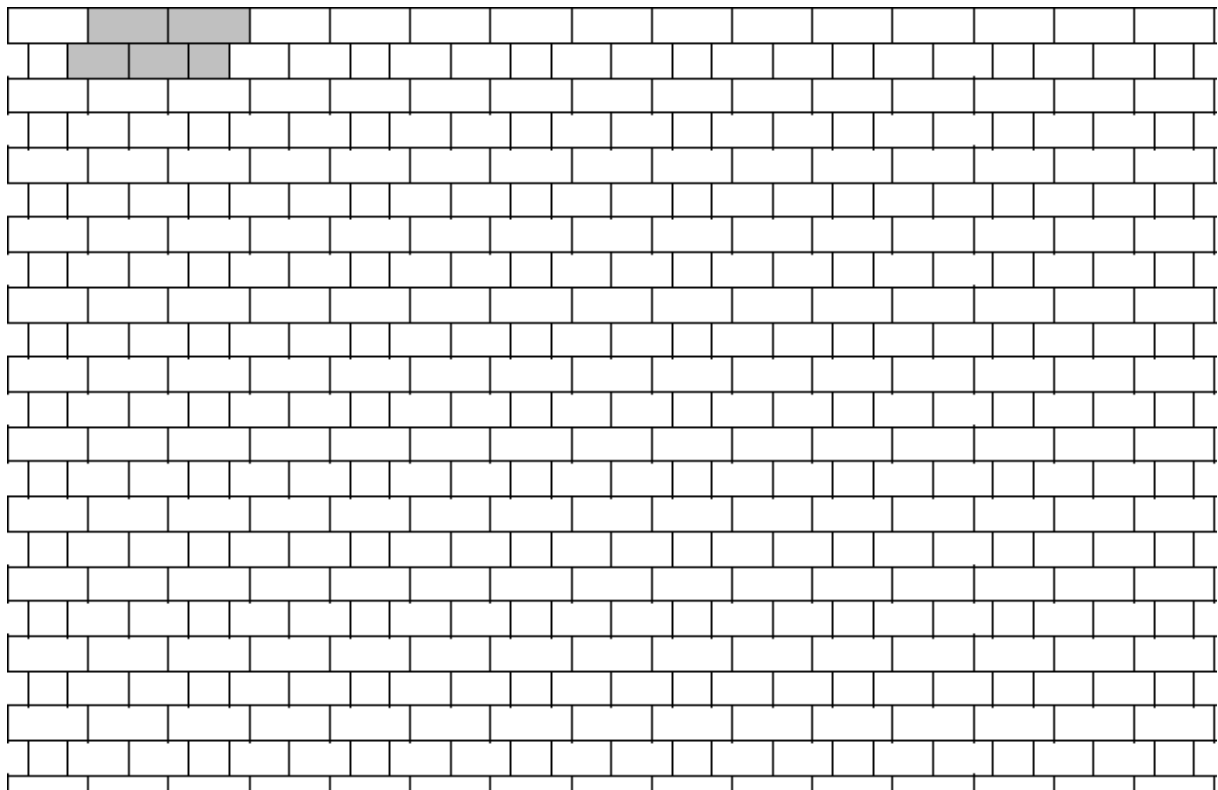


Typ 112

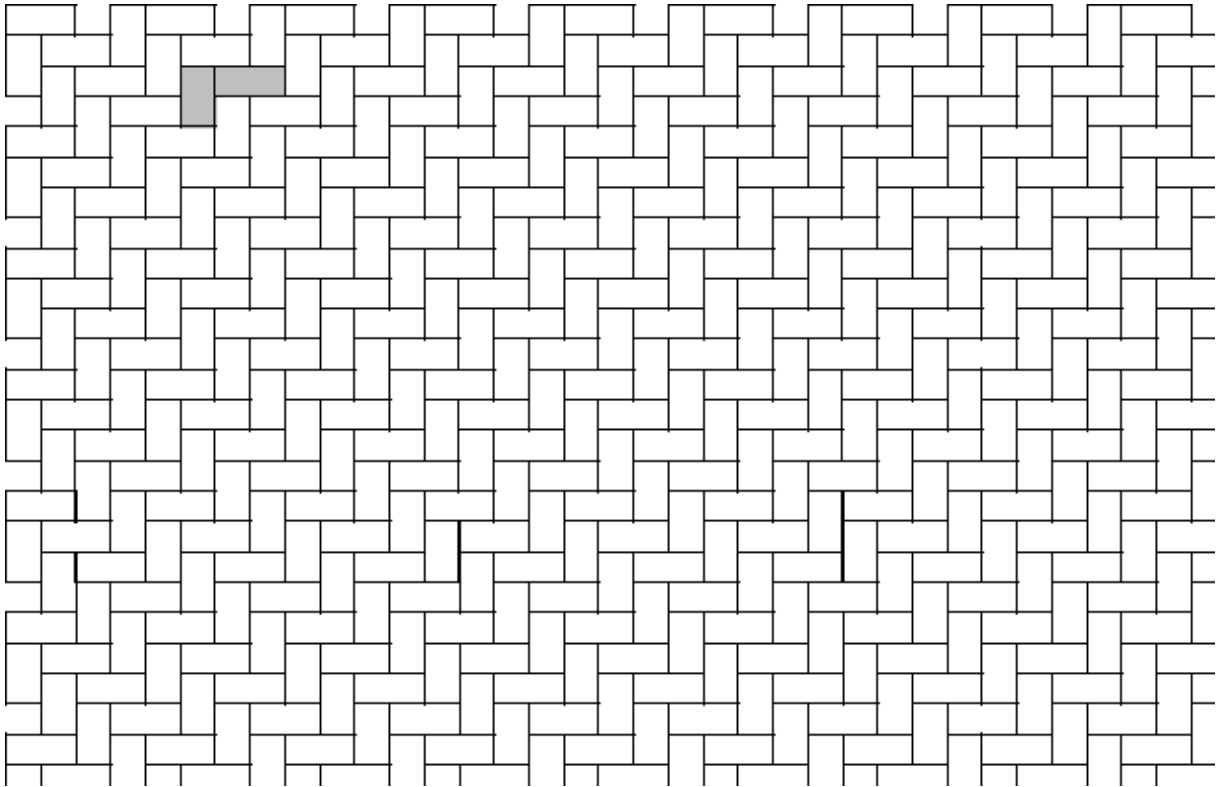


Typ 113

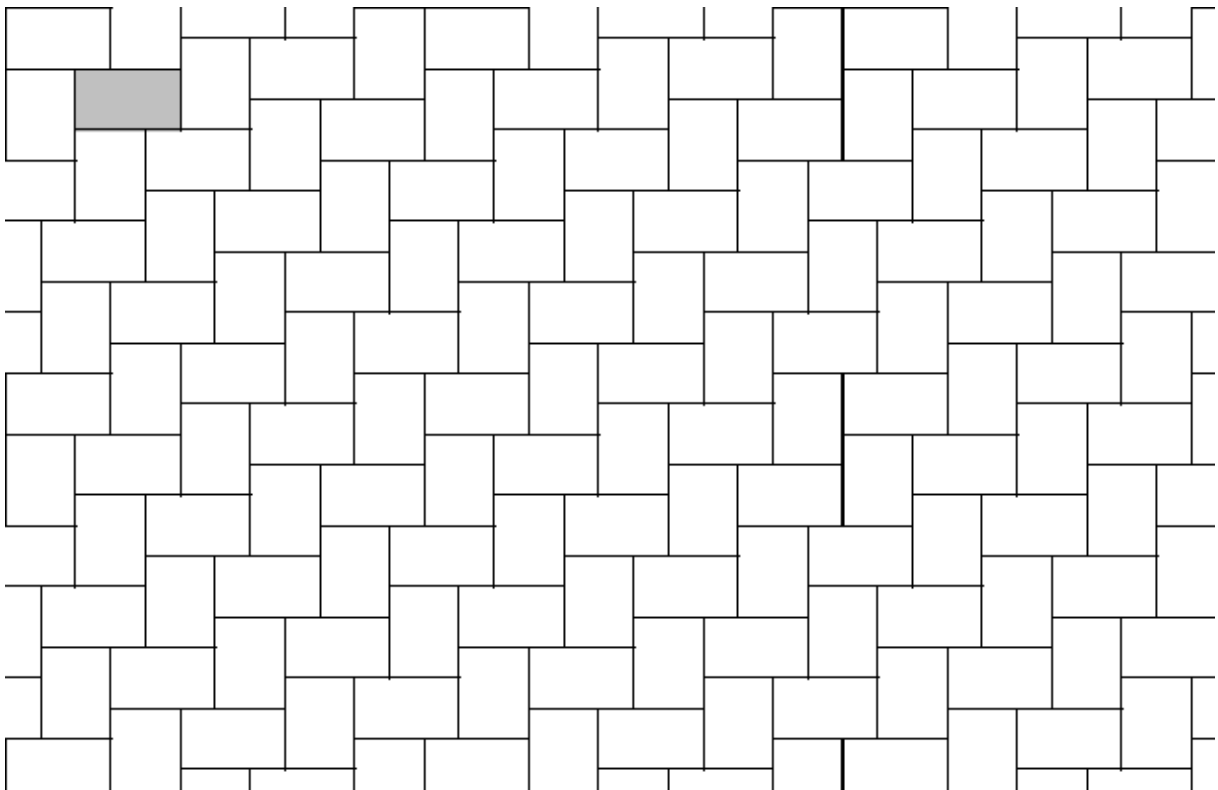


Typ 114

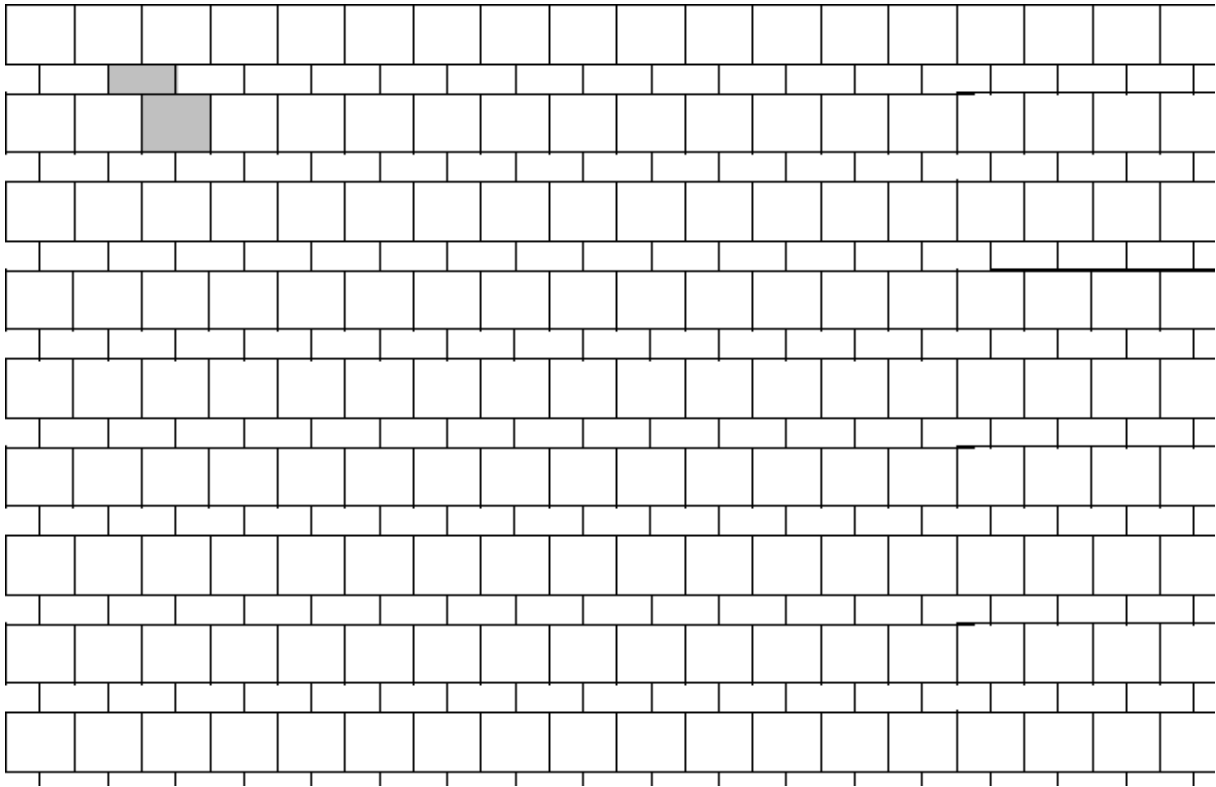


Typ 115

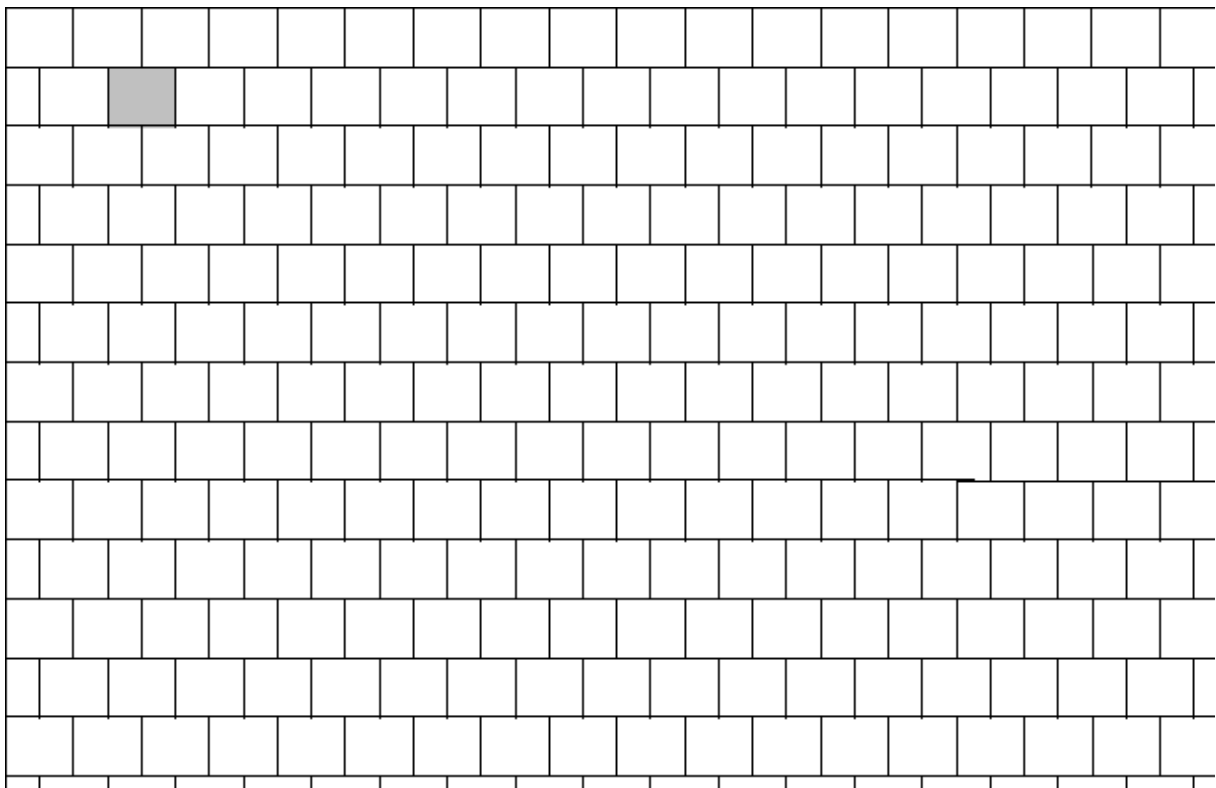


Typ 116

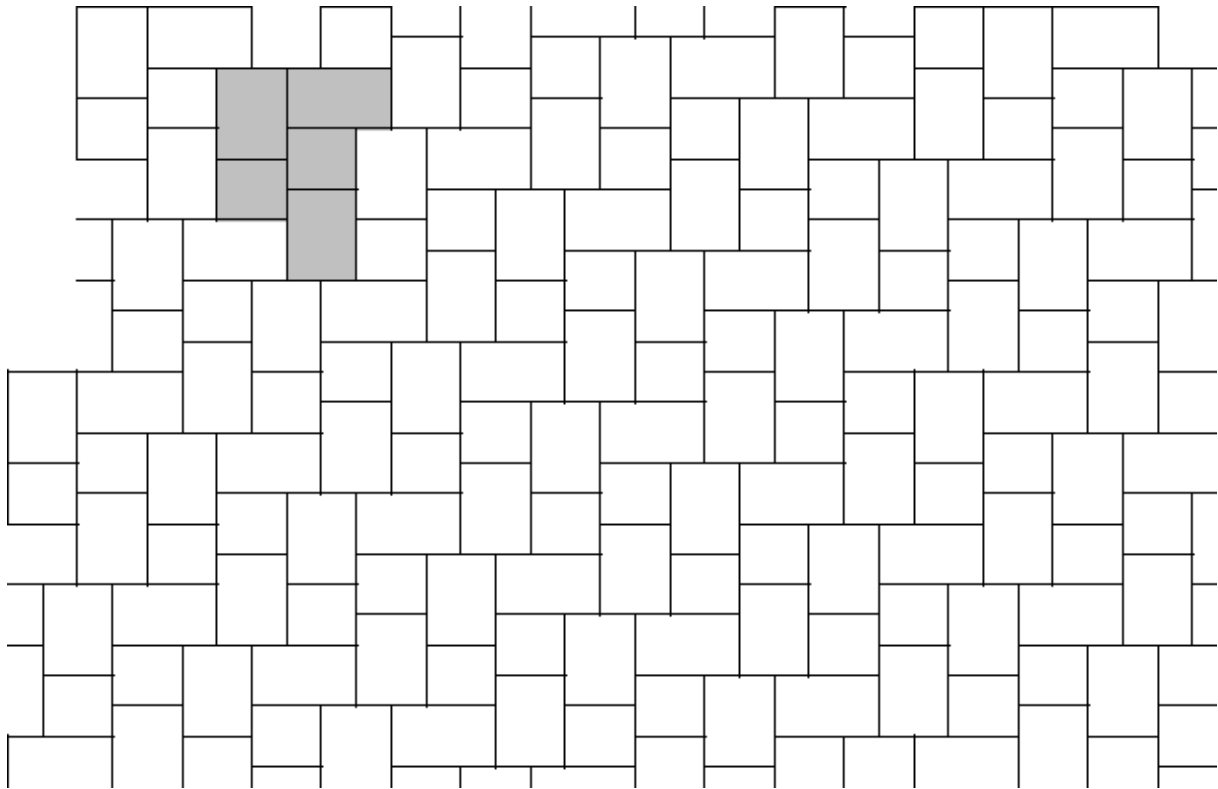


Typ 117

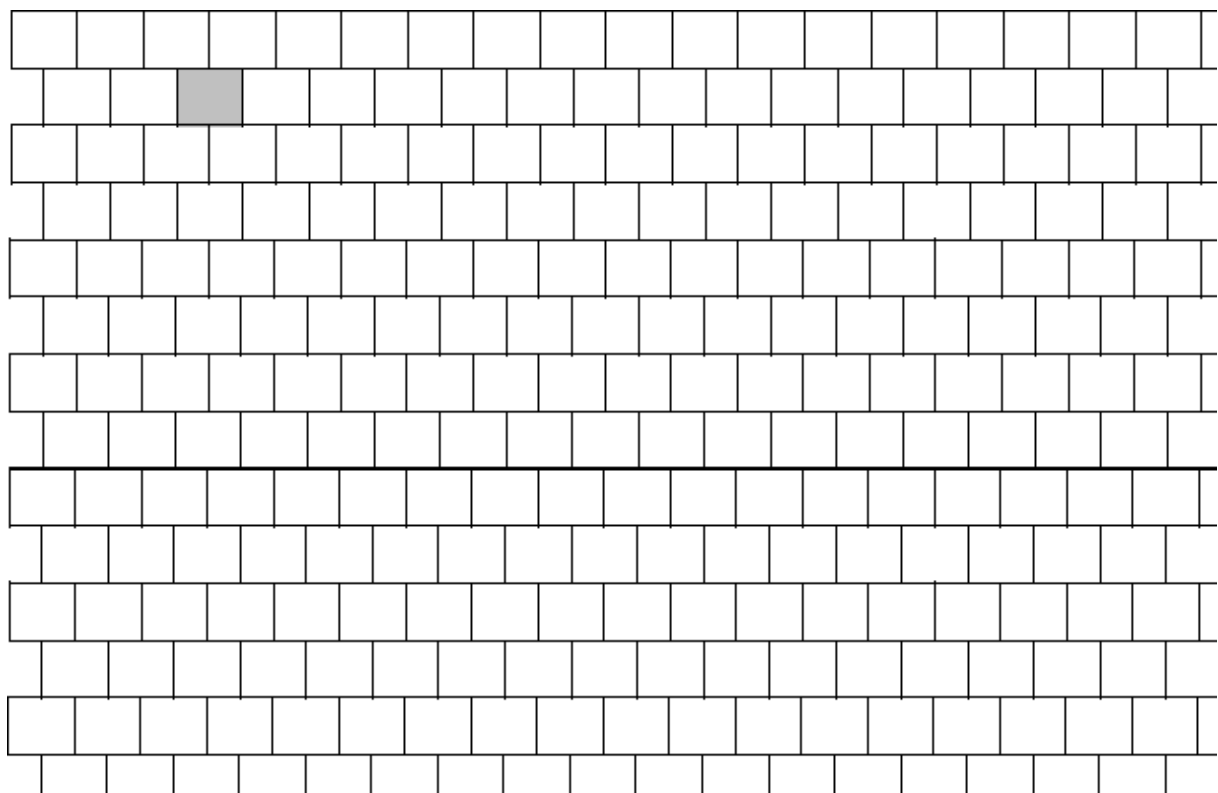


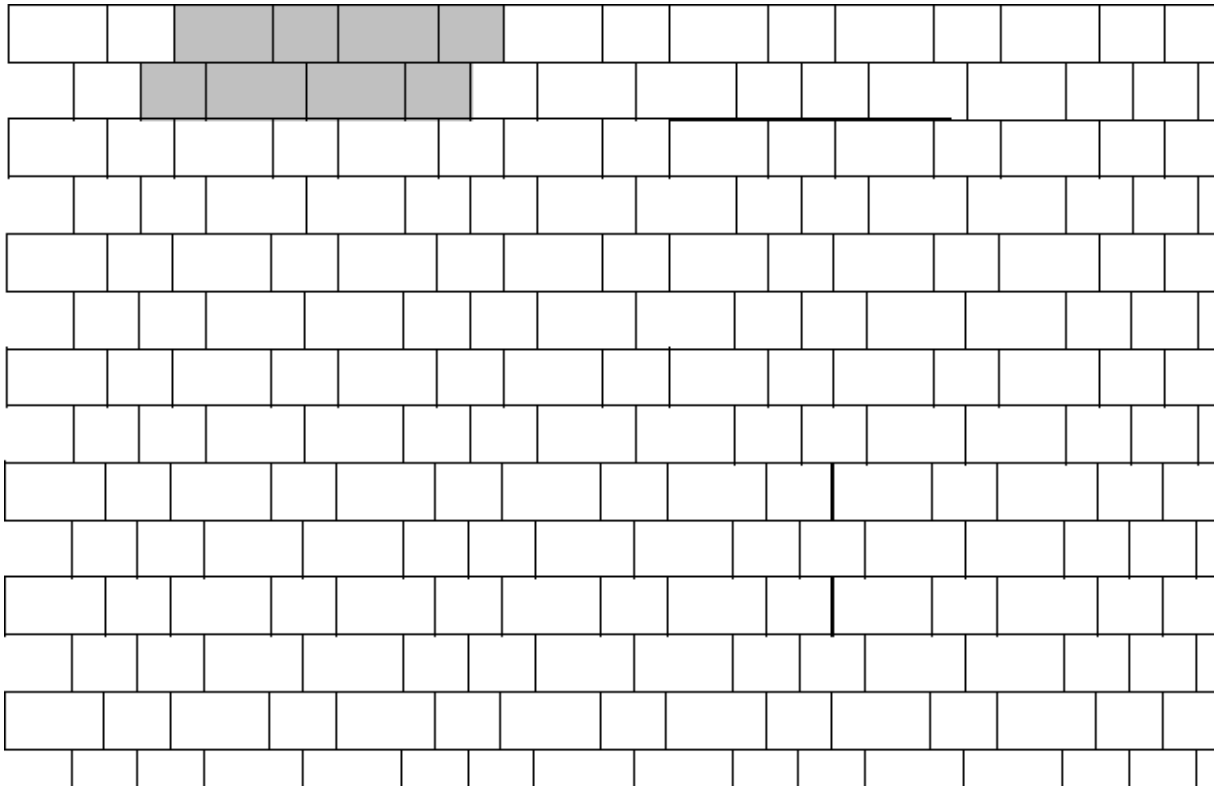


Typ 119

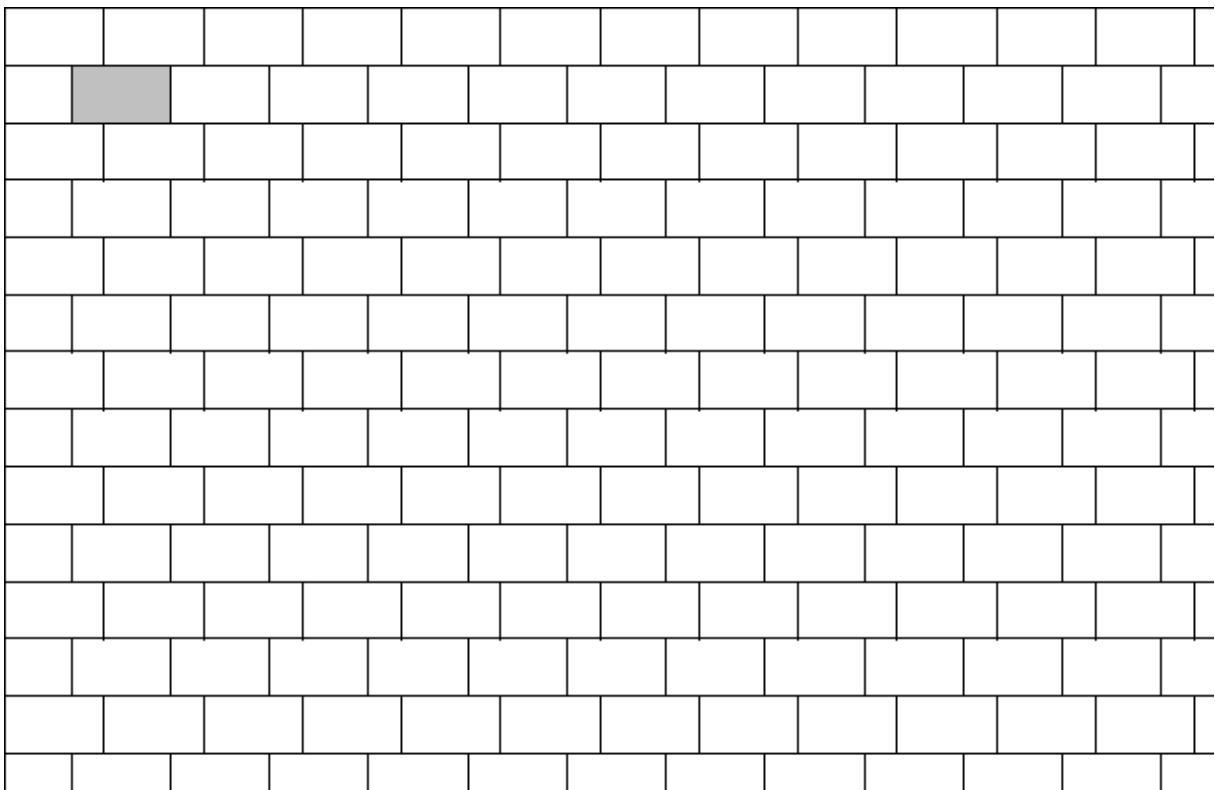


Typ 120

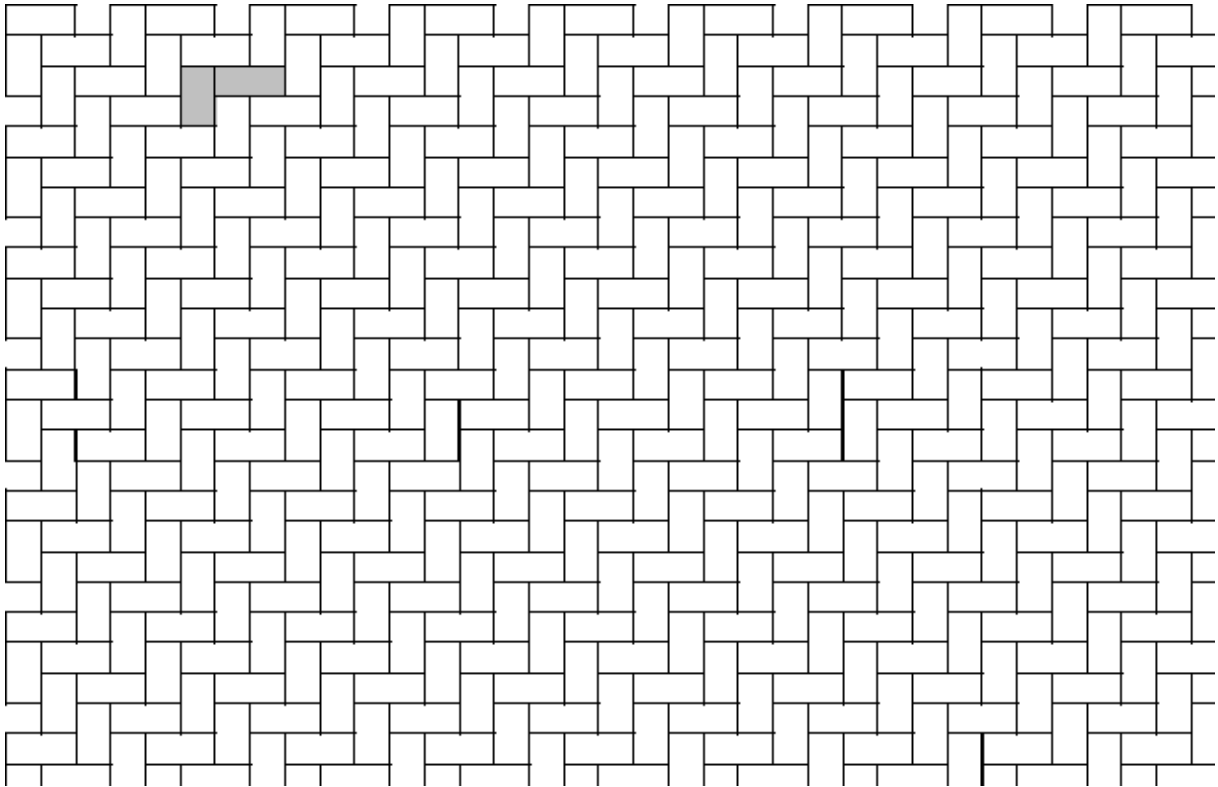


Typ 121

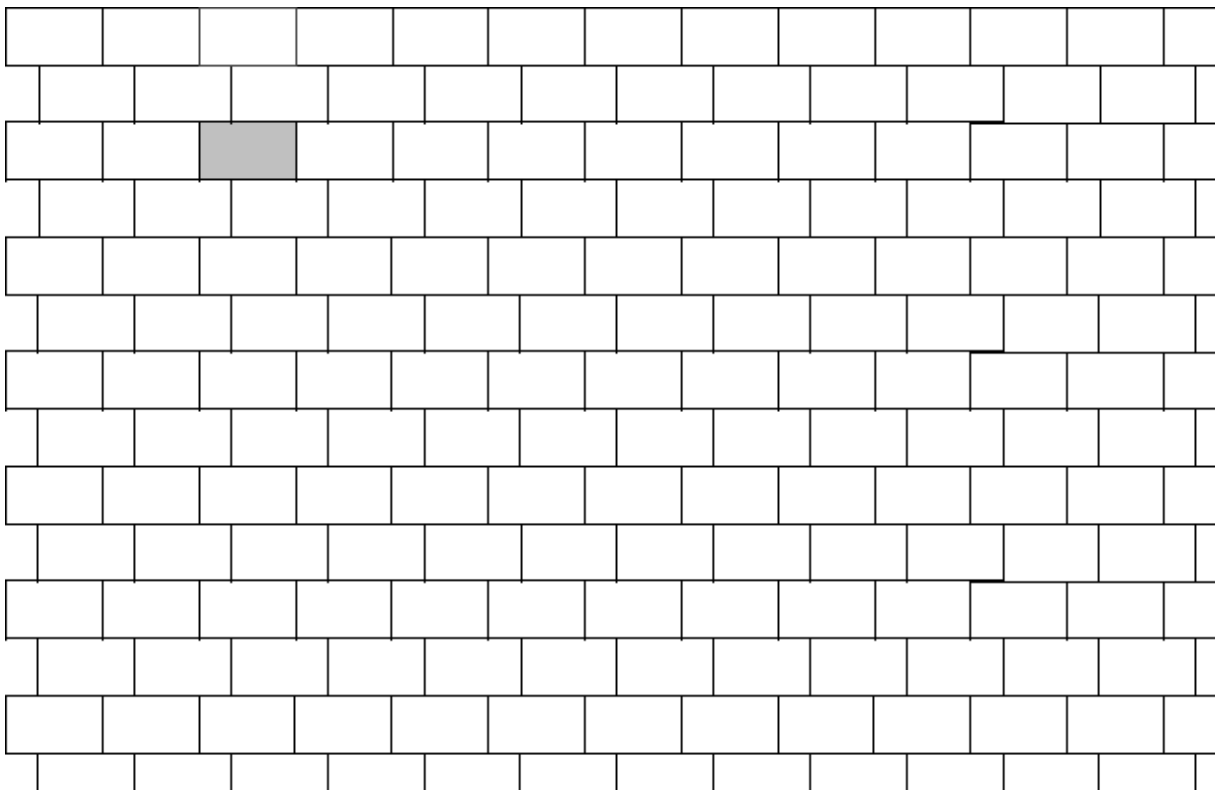


Typ 122

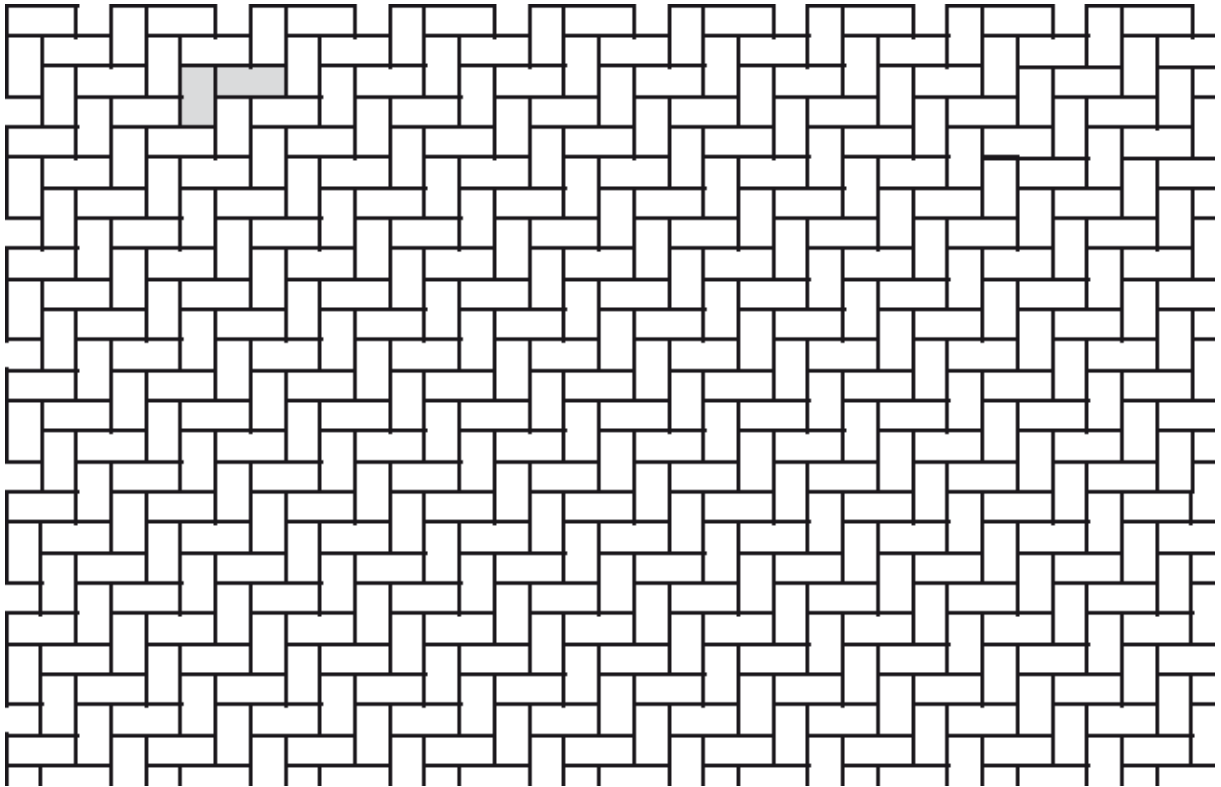


Typ 123

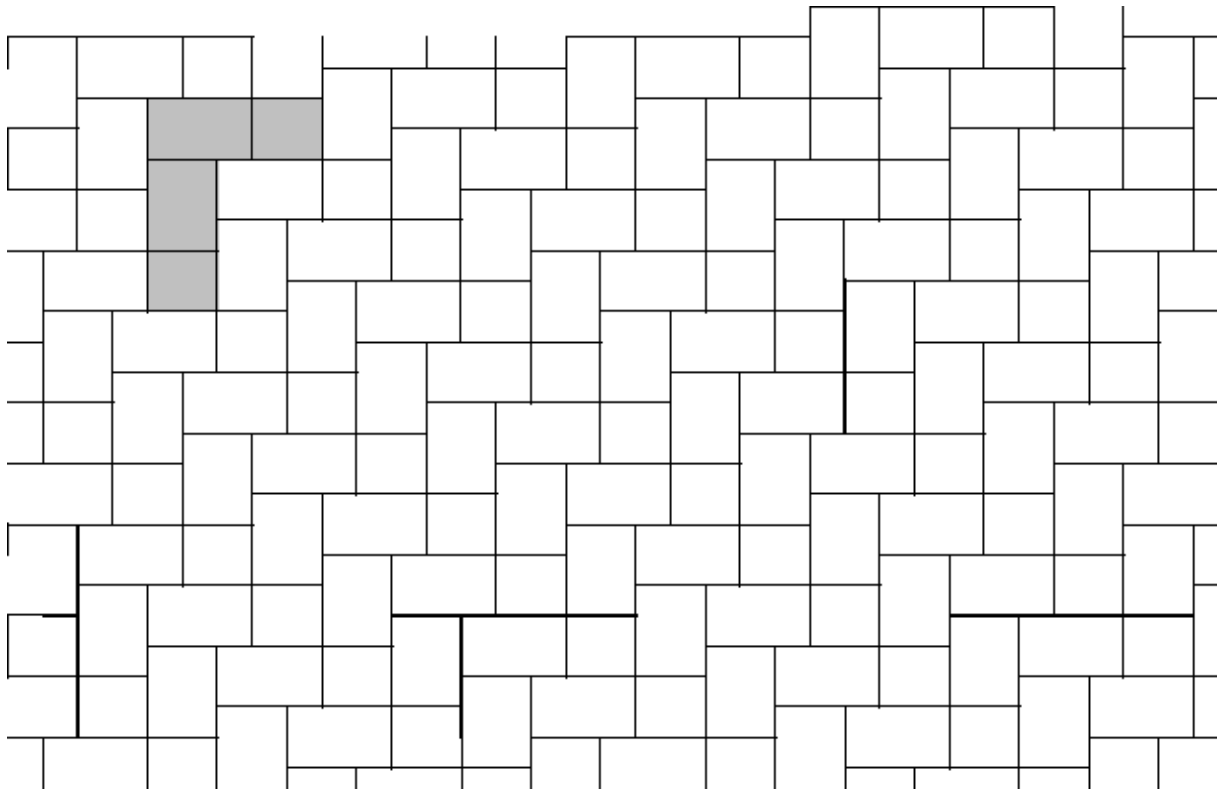


Typ 126

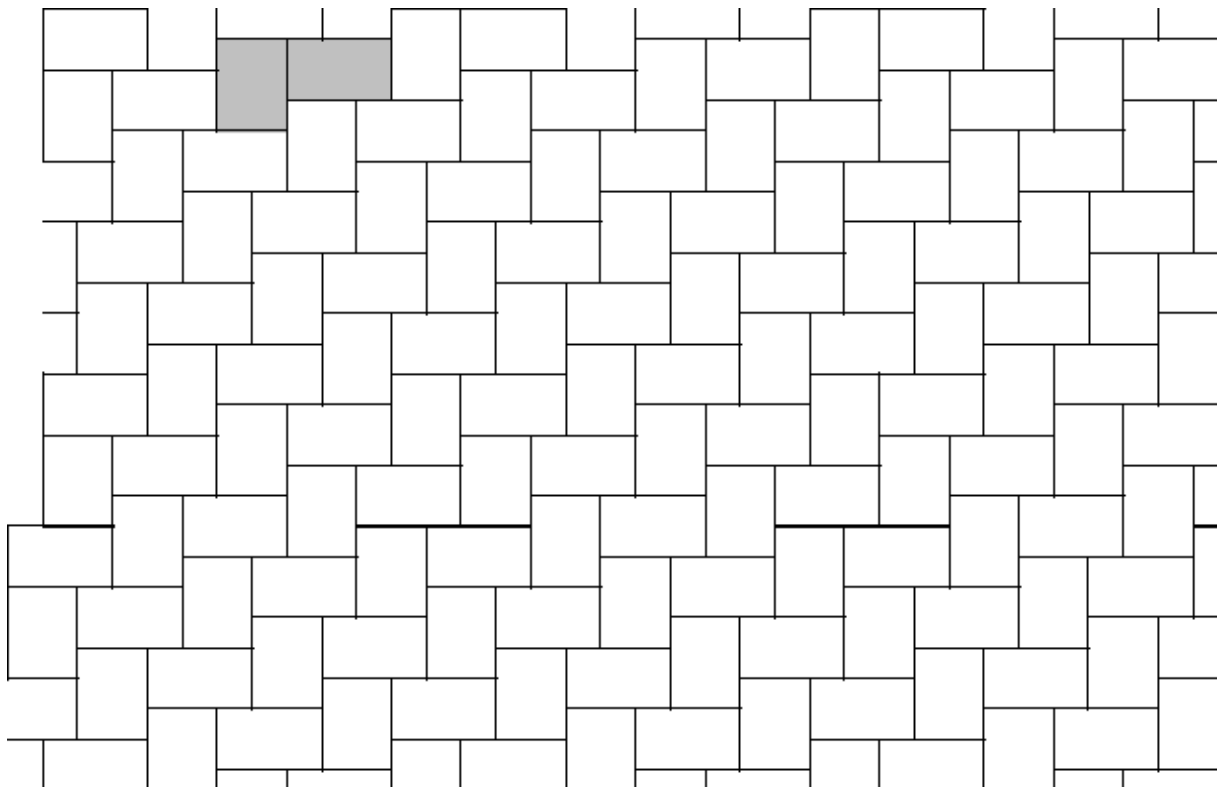


Typ 127

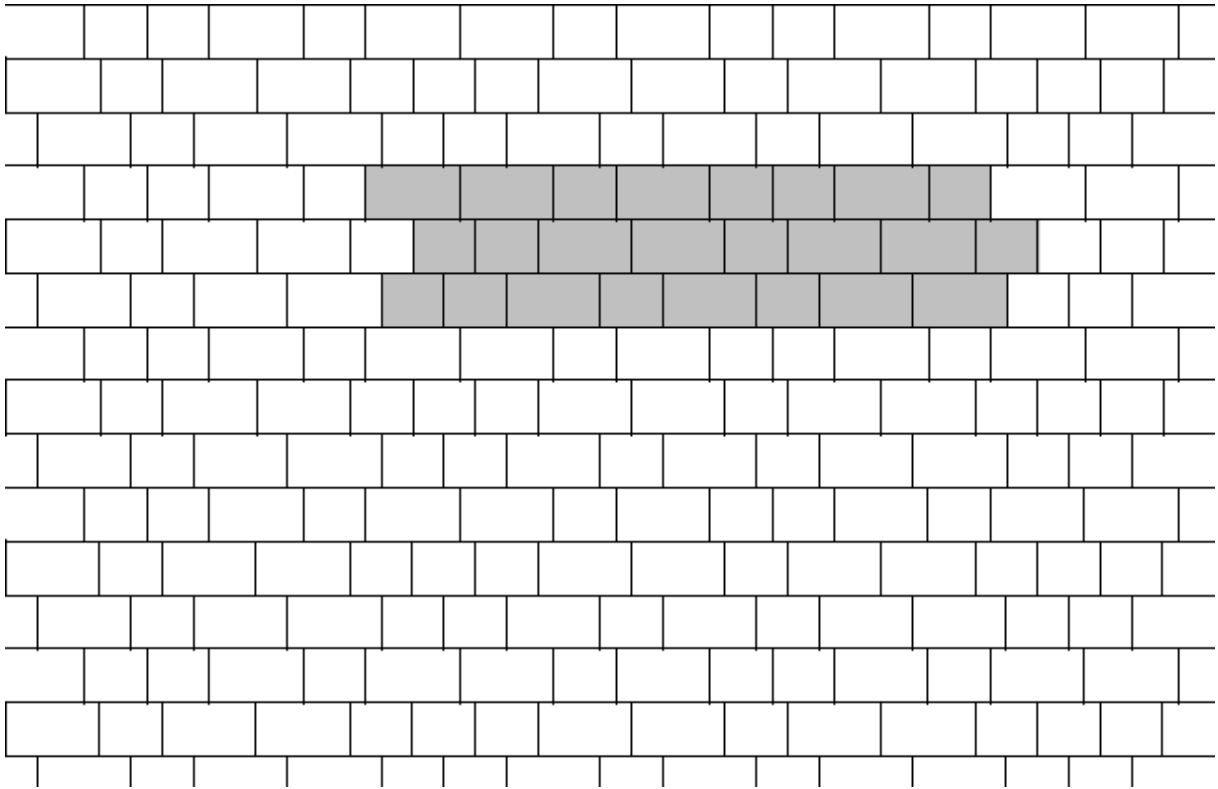


Typ 128

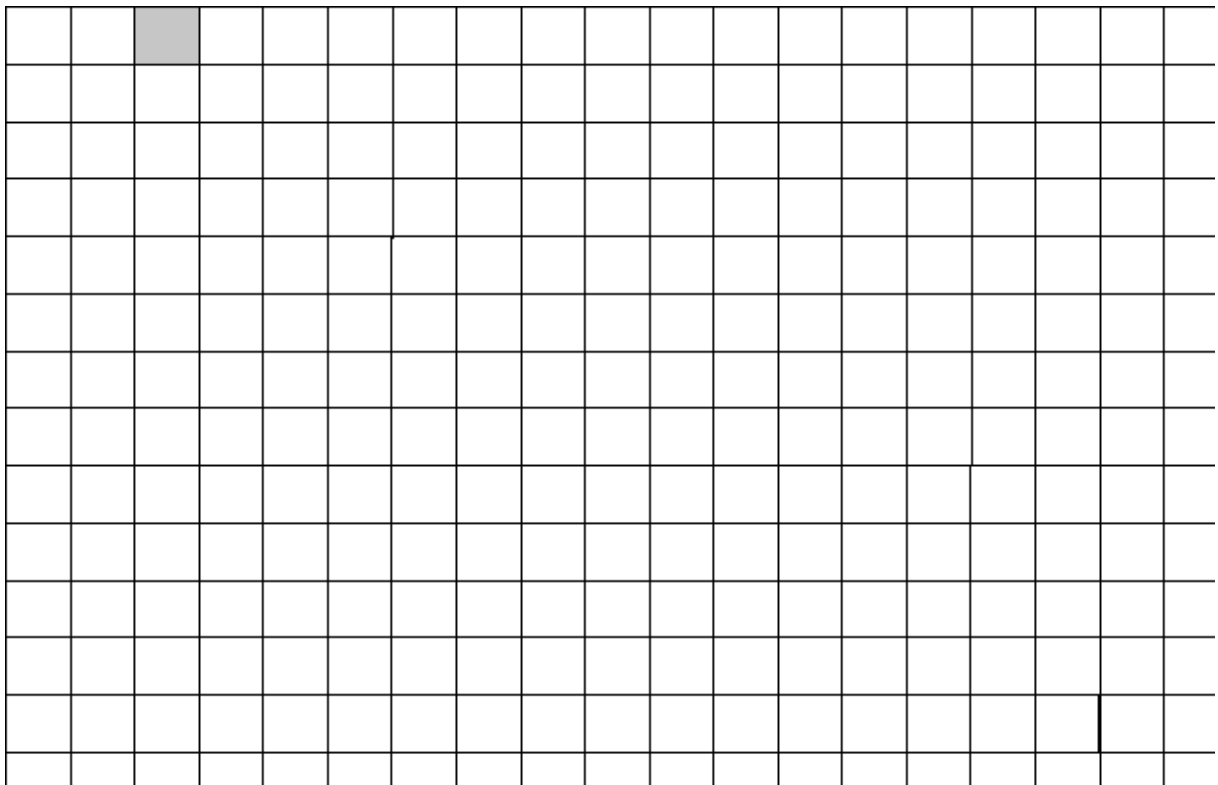


Typ 129

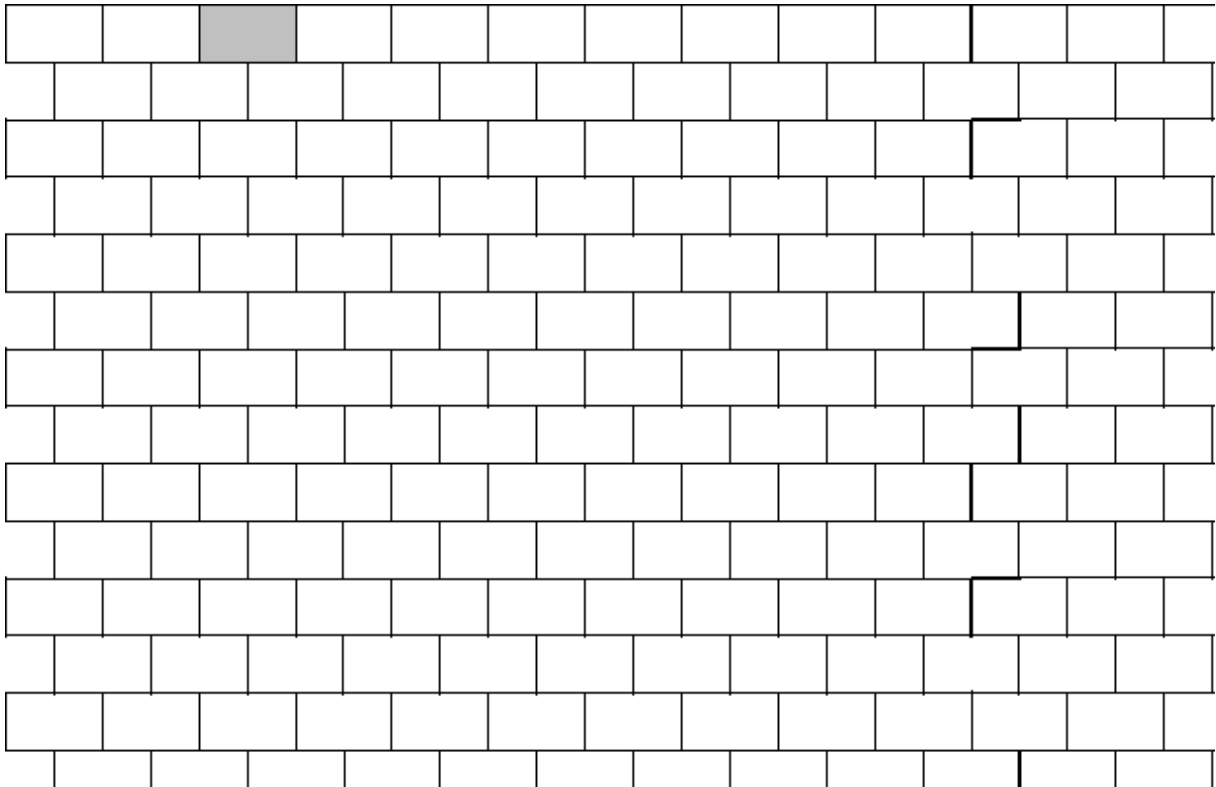

Typ 130

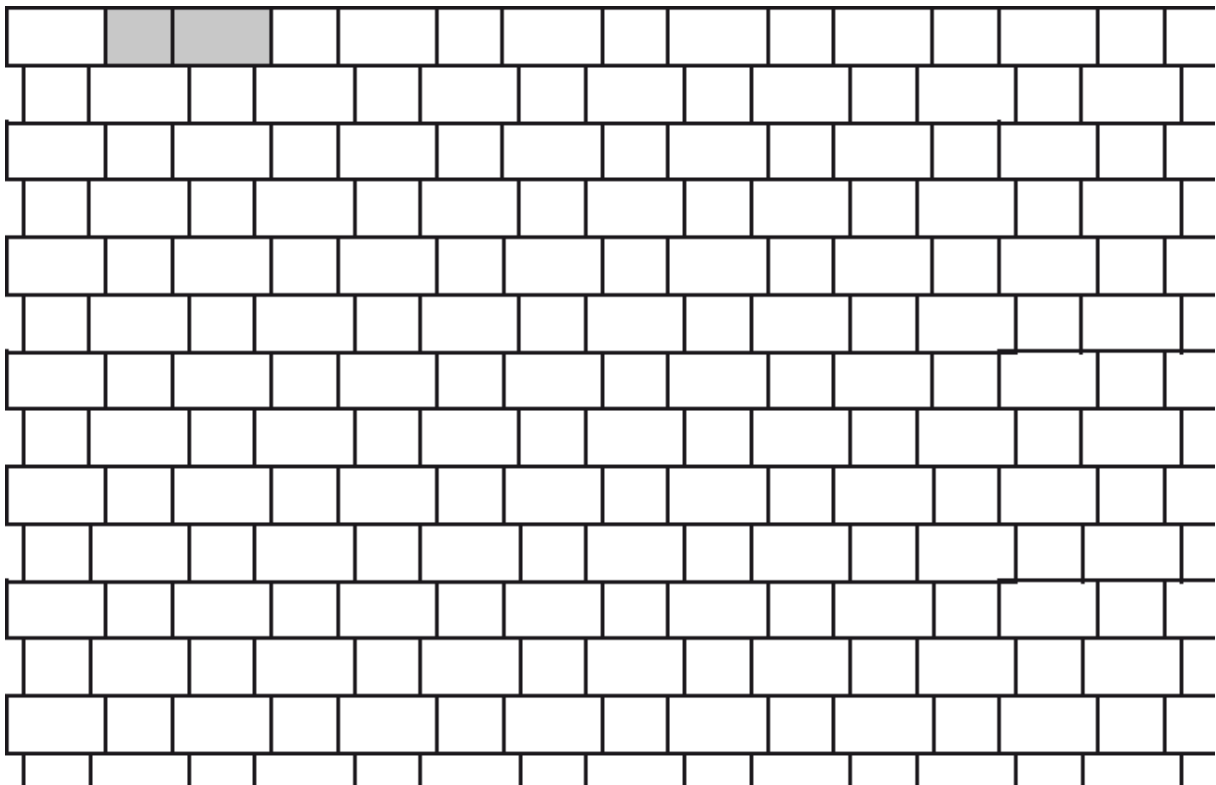


Typ 131

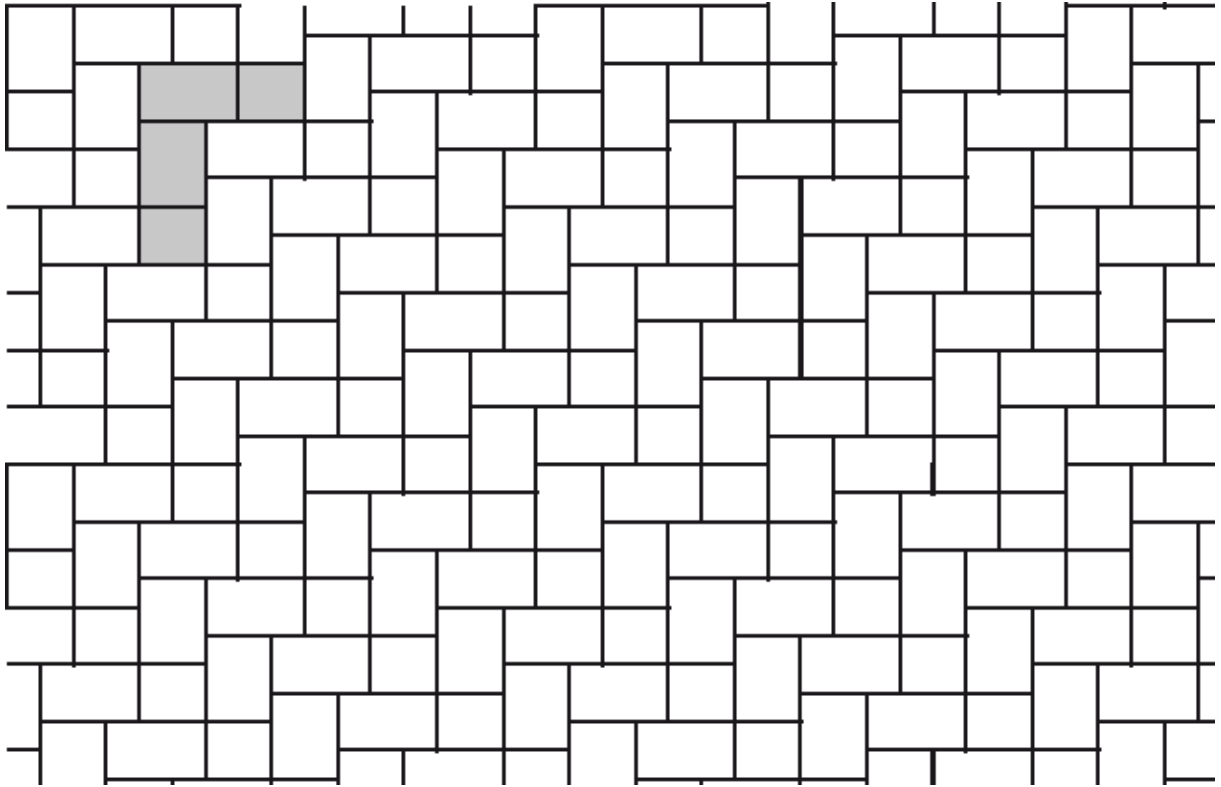


Typ 132


Umbriano

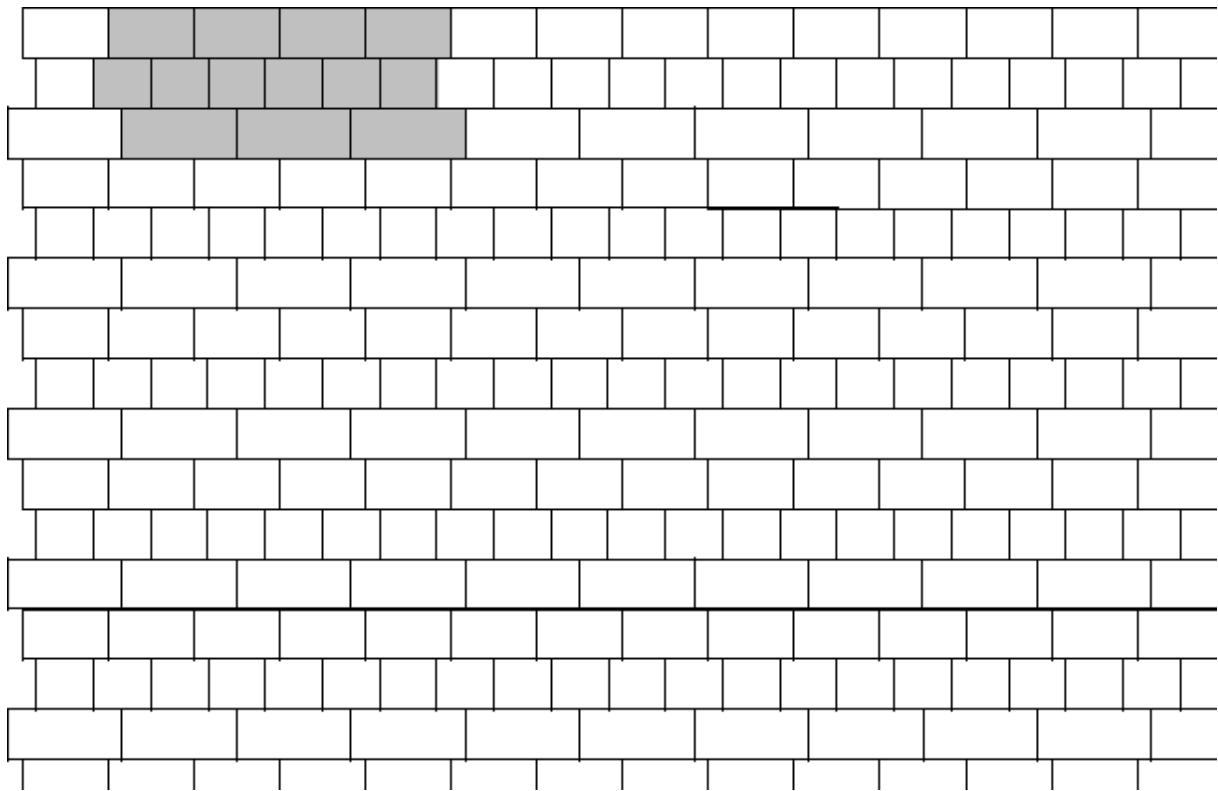


Typ 133

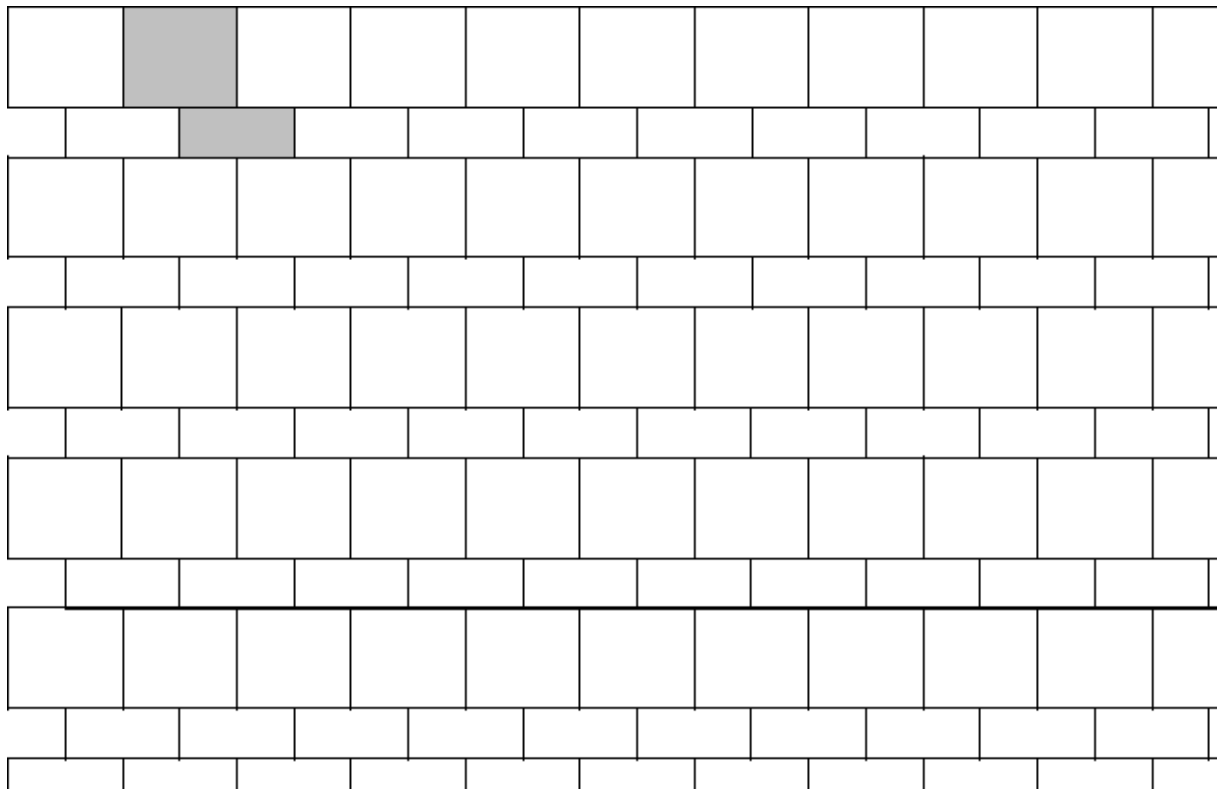


Typ 134

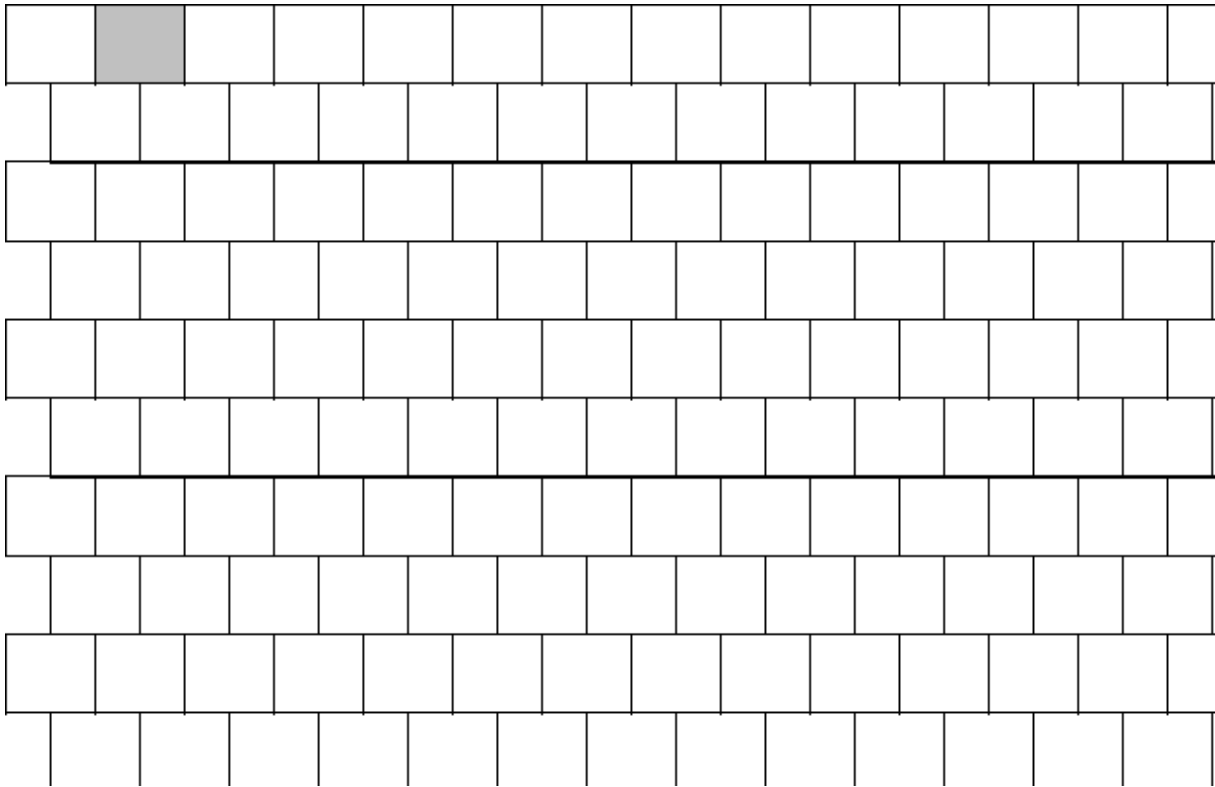


Typ 135

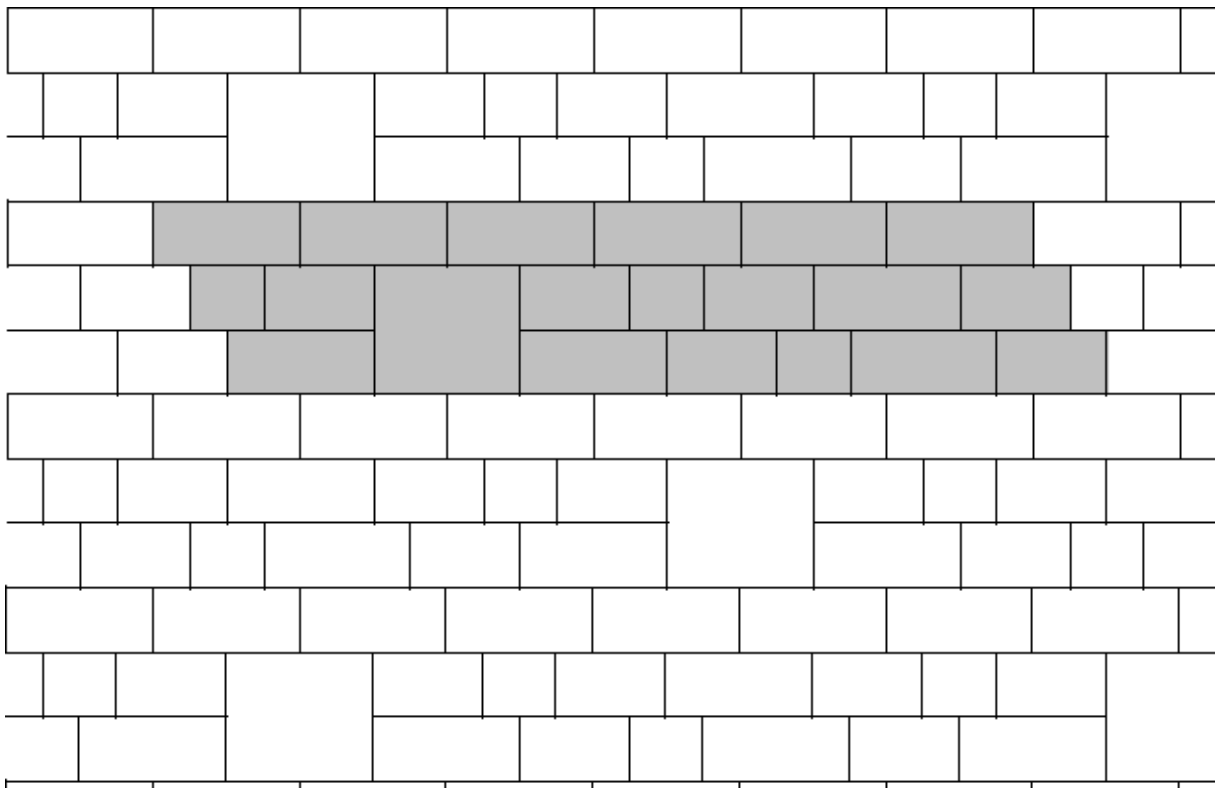


Typ 136

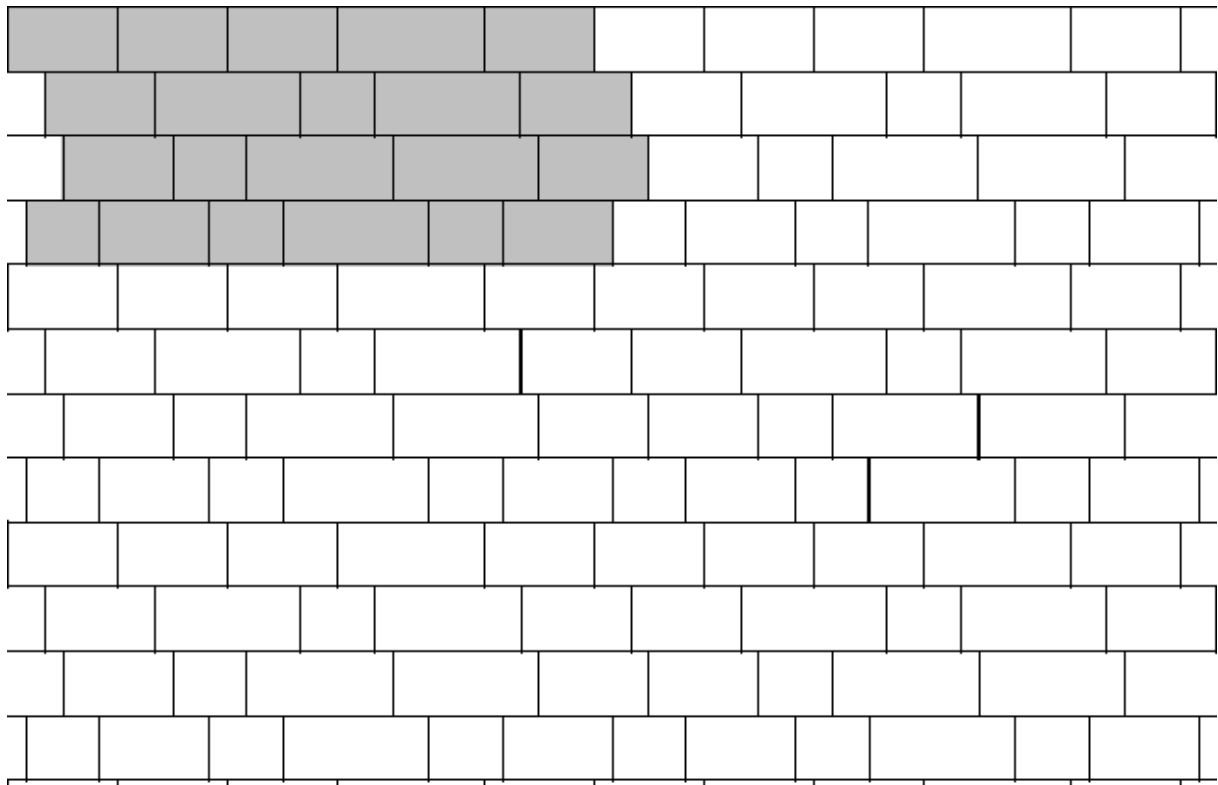

Typ 137

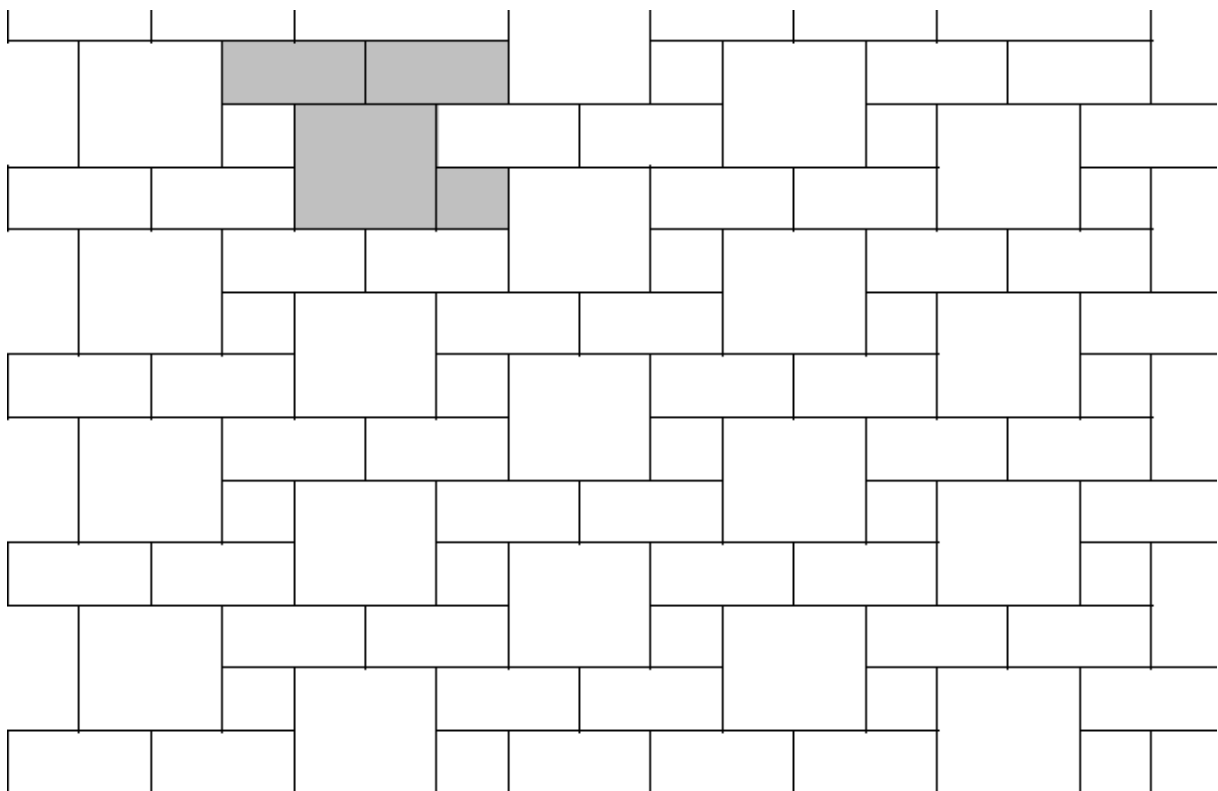


Typ 138

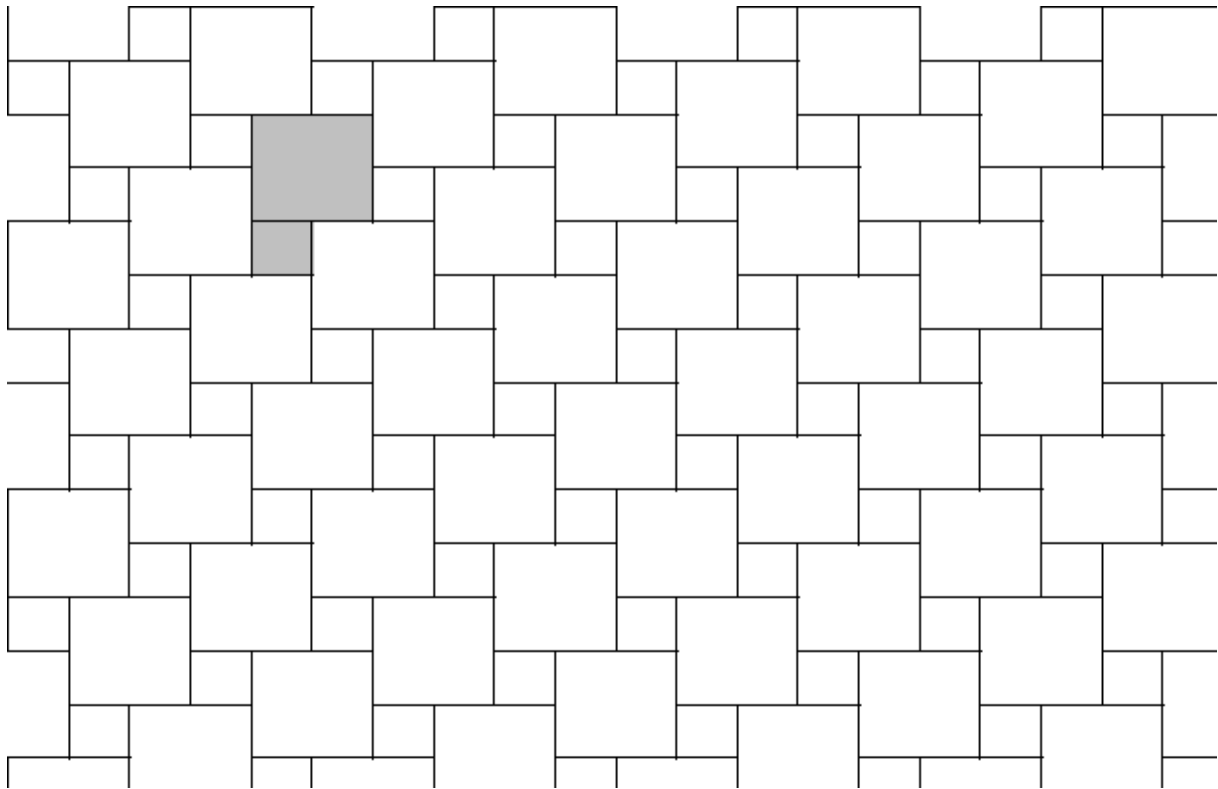


Typ 139

Umbriano AquaFuga

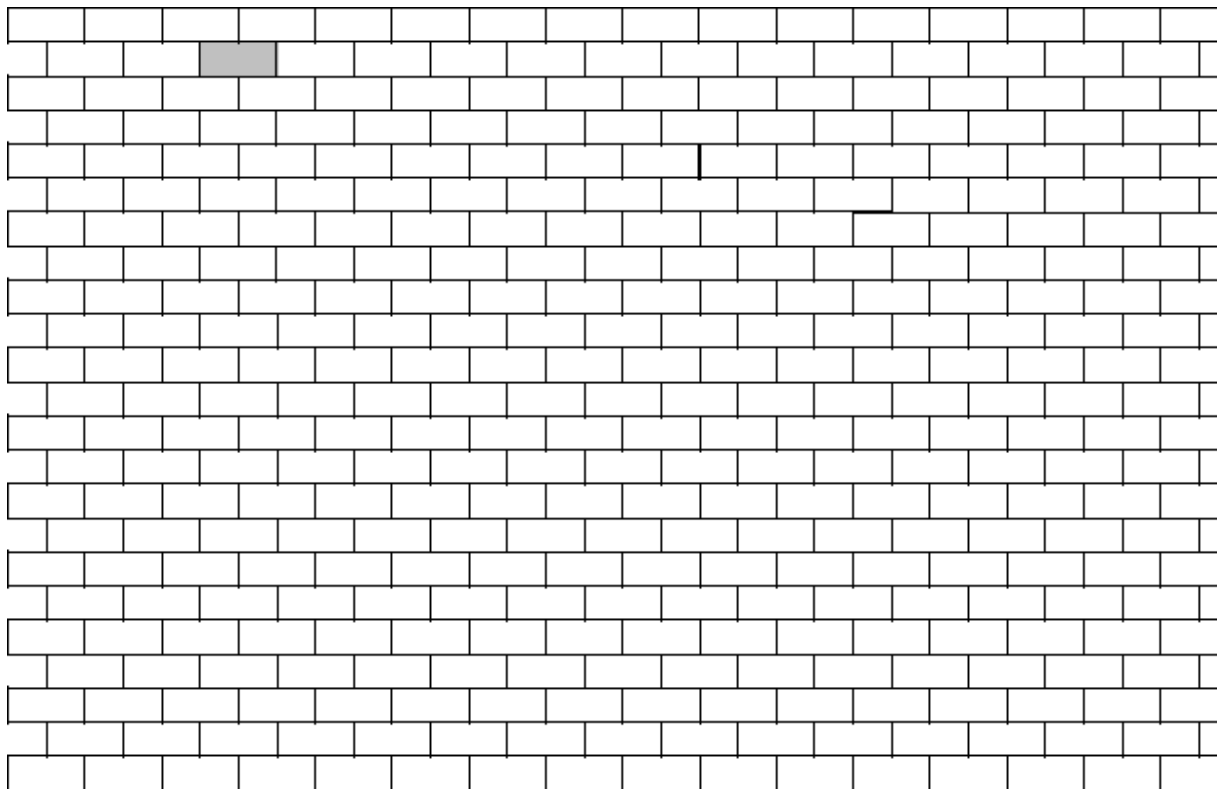


Typ 140

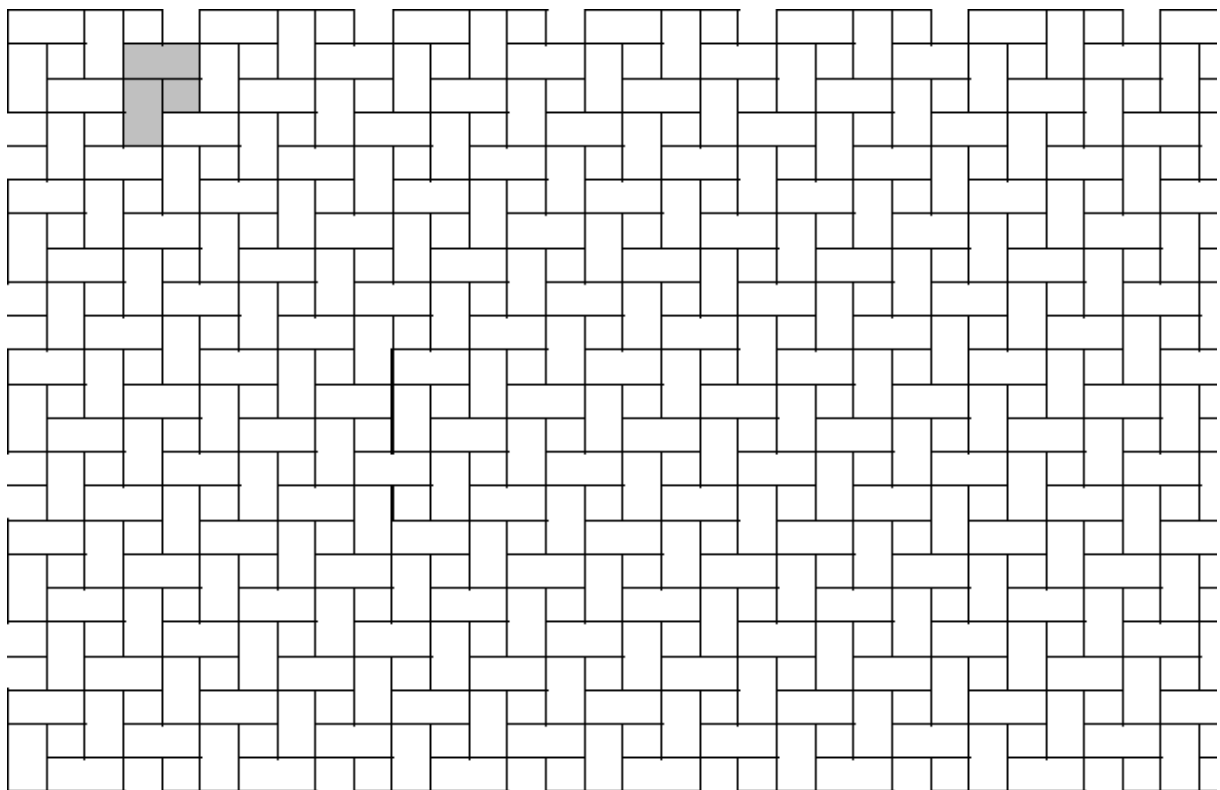


Typ 141


Umbriano Öko Kombi

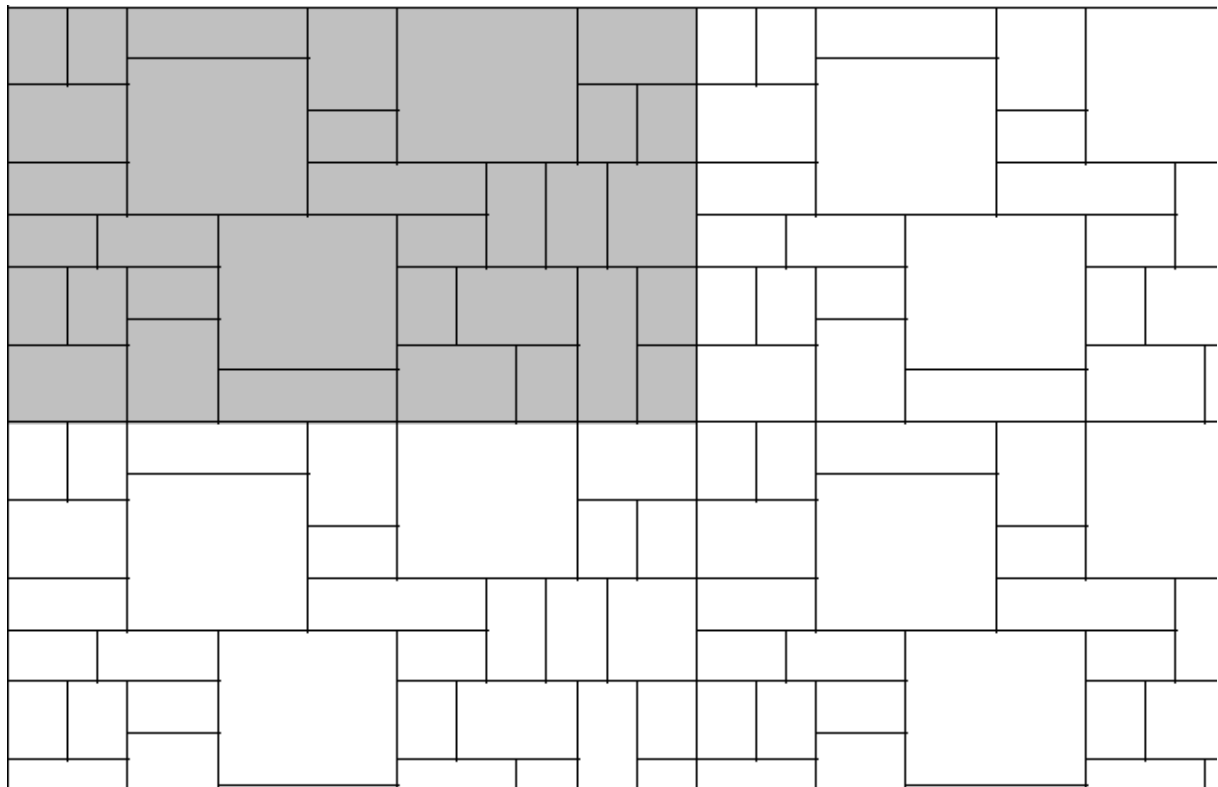


Typ 142

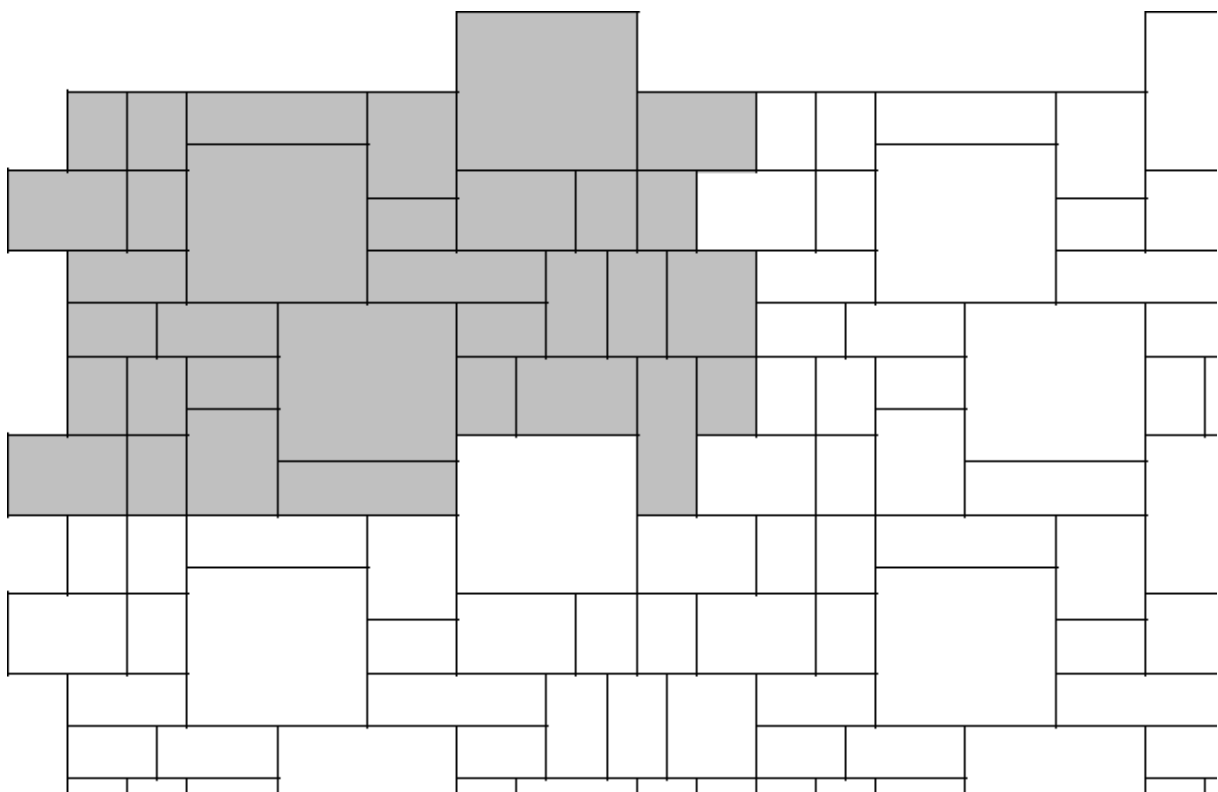

Typ 143

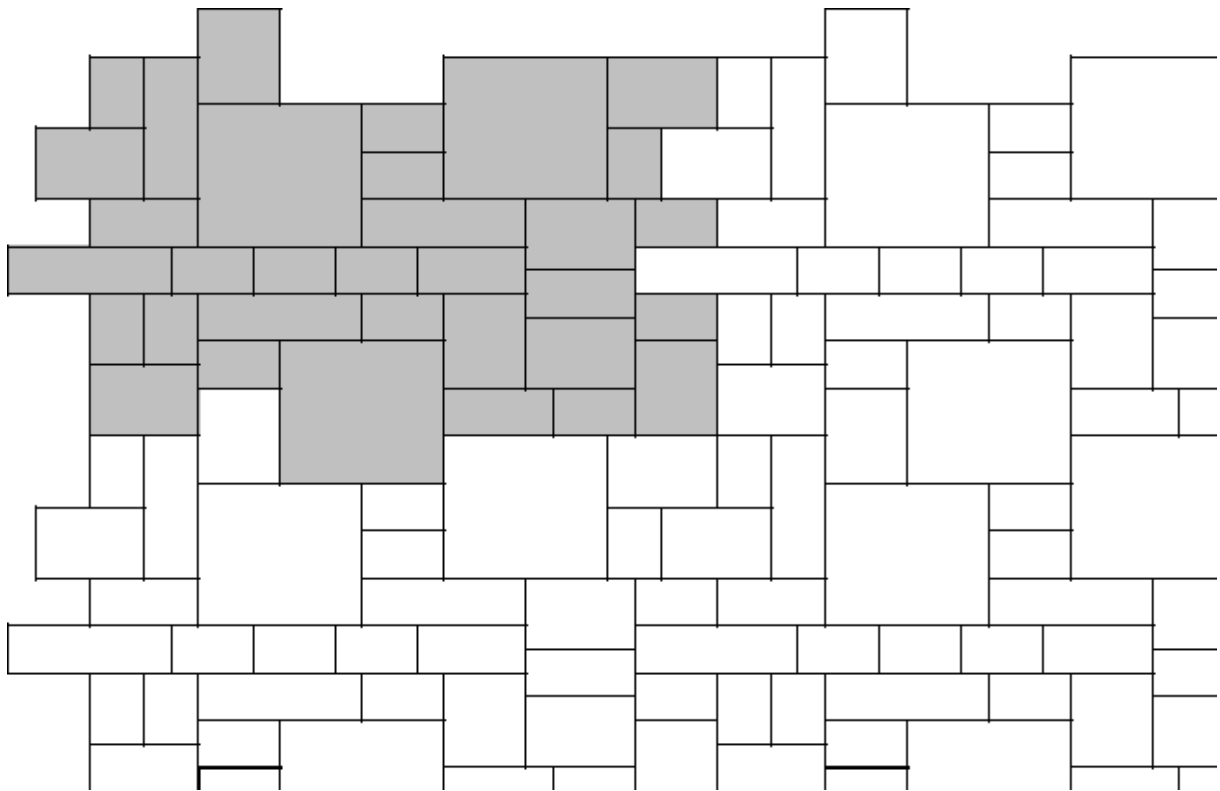

Typ 144

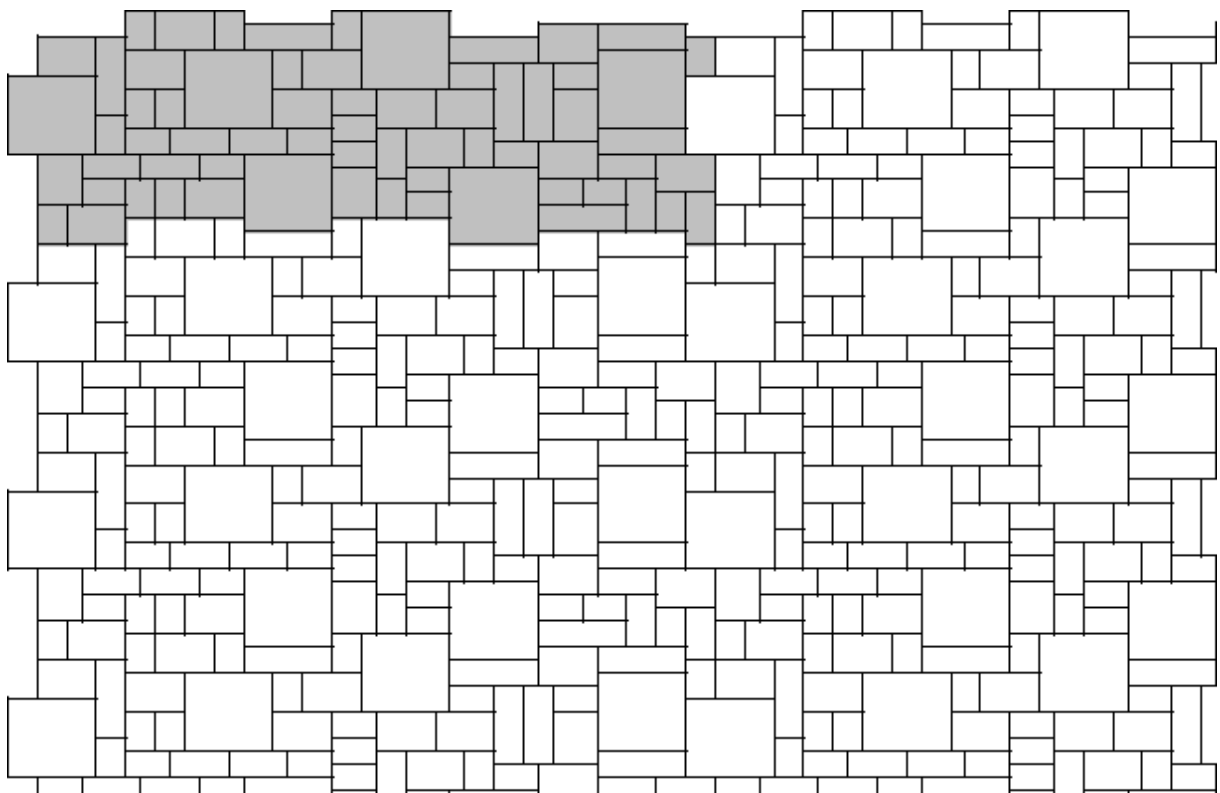

Typ 145